


2" GEOCELL (no loads) Grass fill

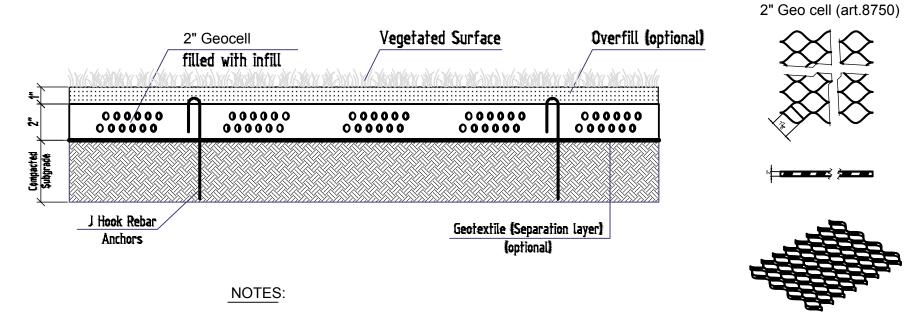

- 1. 2" geocell system should be installed in accordance with the manufacturer's instructions and recommendations.
- 2. The manufacturer's technical consultation may be required to determine the correct load class.
- 3. The drawing of installation for the 2" geocell system is not an official guideline, but is a recommendation.
- 4. Layers shown in cross-section need to be compacted.
- 5. Geo-textile is to be used for stability and to prevent mixing between layers.
- 6. We recommend anchors on each corner of the grid, and throughout the perimeter. Needed on sloped installations, mostly.
- 7. Follow for updates to the instructions and recommendations on the website vodaland.ca

Application

erosion control, garden beds, sloped lawns up to 10 degrees

UNLESS CITIERVISE SPECIFIED FINISH IMMERSIONS ARE IN MOLLIMETERS SURFACE FINISH						Deburk and Break Sharp Edges	DO NOT SCALE DRAVING REVIS	SION	
SUB ALE FINISH TOLERANCES LINEAR MIGLIAN						ERE'S			
	NAME	SIGNATURE	DATE	11TL6					
BRAAN							2" geocell (no loads)		
CHK'D									
WPV7									
@VPV1									
				MATERIAL:			ARTICLE:		
				1	Pasti:	:	8750-		