




8" GEOCELL (no loads) Grass fill

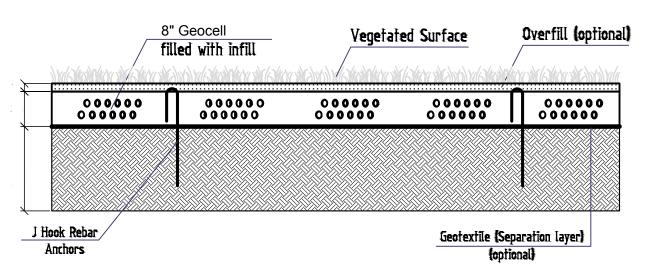

8" Geocell (art.8720)

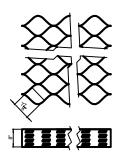



NOTES:

- 1. 8" geocell system should be installed in accordance with the manufacturer's instructions and recommendations.
- 2. The manufacturer's technical consultation may be required to determine the correct load class.
- 3. The drawing of installation for the 8" geocell system is not an official guideline, but is a recommendation.
- 4. Layers shown in cross-section need to be compacted.
- 5. Geo-textile is to be used for stability and to prevent mixing between layers.
- 6. We recommend anchors on each corner of the grid, and throughout the perimeter. Needed on sloped installations, mostly.
- 7. Follow for updates to the instructions and recommendations on the website vodaland.ca

Application

erosion control, garden beds, slope lawns and terrain up to 45 degrees

JULESS OTHERVISE SPECIFIED INDENSITIES MEE'D IN MULLIMETERS STRACE FROESS LINEAD MAGILIAB						SEBURR MO BREAK SHARP EBGES	IIO NOT SCALE IRRAYING REVISIEN		
	NATE	SIGNATURE	DATE				шь		
INVAI									
CHK'D							8" geocell (no loads)		
MPPV'D									
E'VPP									
				Piastic			ARTICLE		
							8720		
							"		