









Dimensions:	width	depth	height
inches	29.125"	19.75"	33.875"
mm	740	502	860


OTE: DIMENSIONS AND TECHNICAL DETAILS ARE SUBJECT TO CHANGE WITHOUT NOTICE

. SIDE ELEVATION

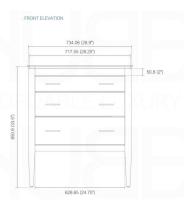

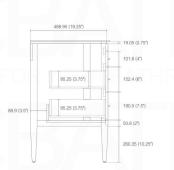

. TOP ELEVATION





COUNTERTOP (*SINK AD66CS)

DOLCE | ANZIANO | BREZZA






Dimensions:	width	depht	height
inches	23.75"	19.75"	0.625"
mm	603.25	501.65	15.875




product	code

Dimensions:	width	depht	height
inches	29.125*	19.75"	0.625*
mm	739.775	501.65	15.875








. product code

Dimensions:	width	depht	height	
inches	35.5"	19.75"	0.625*	
mm	901.7	501.65	15.875	






Dimensions:	width	depht	height
inches	39.5"	19.75"	0.625*
mm	1003.3	501.65	15.875

	387.35 (15.25')	
127 (5")	0	63.5 (2.5°) O/C
		260.35 (10.25*)
		120.65 (4.75°)

product	code	
OT489		

Dimensions:	width	depht	height
inches	47.25*	19.75"	0.625
mm	1200.15	501.65	15.875



product	code
OT48D	

Dimensions:	width	depht	height
inches	47.25*	19.75"	0.625"
mm	1200.25	501.65	15.875

	001100 (1020)	
127 (5")	0	1 63.5 (2.5°) O/C
		260.35 (10.25")
		120.65 (4.75")

product	code	
OTEOS		

Dimensions:	width	depht	height
inches	59.125"	19.75"	0.625"
mm	1501.78	501.65	15.875

(5")	ò	0	63.5 (2.5°) O/C
			260.35 (10.25*)
			120.65 (4.75*)

. product code


Dimensions:	width	depht	height
inches	59.125"	19.75"	0.625
mm	1501.78	501.65	15.875



CERAMIC UNDERMOUNT SINK AD66CS

Counter cutout opening: 387.35 (15.25*) W x 260.35 (10.25*) D



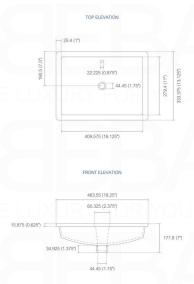








CERAMIC UNDERMOUNT SINK - INSTALLATION

- 1. Unpack the new sink and check the contents of the materials supplied.
- 2. Clean the underside of the countertop and the rim of the sink.
- 3. Use actual basin as your template. Place it upside down on countertop by tracing edge of basin. Be sure to allow clearance for faucet and other accessories or fixtures.
- 4. Generously apply 100% silicone sealant around the rim.

- 5. Position the sink under the opening and install the clamps.

 * Use level to make sure that the basin is sitting level in all directions, front to back and side to side, while pressing down to seal. Carefully remove any excess silicone. * Leave to cure for 24 hours before removing the clamps.
- Note: Sink style, shape, cutout on top may vary from the picture above. Instructional purposes only.

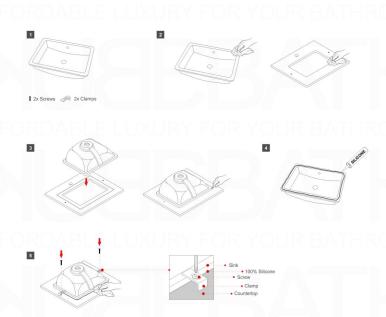



How to Install a Eiffel Vanity & Remove / Install Drawers INSTALLATION GUIDE




- 1. Determine your vanity placement and mark the area on the wall where it will be installed.
- 2. Locate and mark the location of the studs to which you will fasten your vanity. You can find studs by listening for a solid sound as you knock on the wall or by using a stud finder.
- 3. If your vanity cabinet has a solid back, mark and drill holes to accommodate drain pipes and supply pipes as necessary.
- 4. Place the vanity in the installation location. Verify that the vanity cabinet is level. If the vanity is not level, use vanity feet (if included) or wooden shims to adjust as necessary.
- 5. Attach the vanity to the wall by screwing through the mounting rail in the back of the vanity cabinet into the wall studs.
- 6. Install the integral sink/vanity top by applying a dot of silicone sealant on the corners of the vanity. Position the vanity top onto the vanity and press firmly into place. Wipe away any excess sealant with


Note: We recommend consulting professional help if you are unfamiliar with installing bathroom vanities and/or plumbing.

REMOVE / INSTALL DRAWERS

REMOVE DRAWERS


(Locate the plastic clips and or screws on the bottom of the drawer)



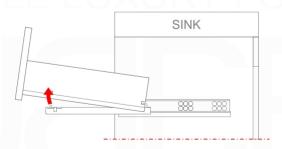



INSTALL DRAWERS

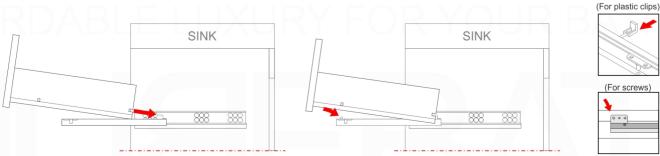



Pop-Up / P-trap Installation Instructions INSTALLATION GUIDE

