



TOGGLE-BITE

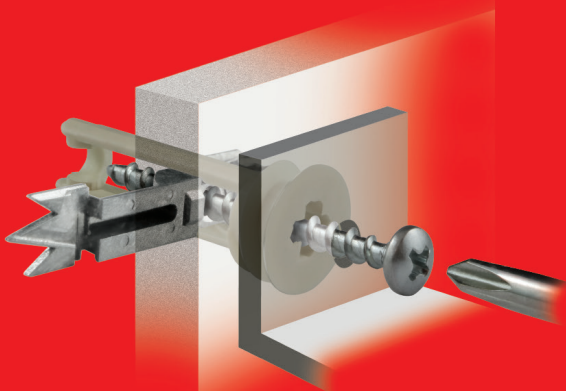

- 1 Insert the point of a #2 Phillips Head screwdriver into the recess of the **ICCONS TOGGLE BITE**, place the drill point against the wall to lightly pierce the plasterboard.
- 2 Screw **TOGGLE BITE** into the plasterboard until the head is flush with the surface.
- 3 Position fixture, insert screw, turn screw to engage the toggle behind the wall.
- 4 Continue to turn the screw until the fixture is pulled against the plasterboard.

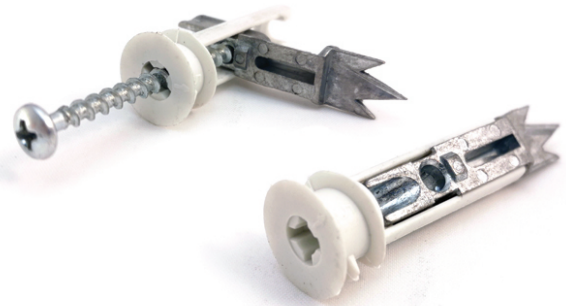

Toggle-Bites - With Screw

Drill Point Nylon / Alloy Toggle-Bite

Unique Drill Point for easy, clean and precise installs.

ICCONS® TOGGLE BITE features a movable alloy toggle that allows the anchor to clamp the plasterboard for added strength.

- Self drilling anchor for heavy duty, vibration resistant plasterboard fixing.
- Ideal for fixing shelving brackets, mirrors, cabinets, curtain rods, pictures, fire extinguishers, hanging plants, lighting fixtures, coat hooks, etc. into plasterboard.
- Can be used for wall or ceiling mounts.
- Maximum recommended load - Plasterboard 20KG



Part No.	Description	+	⊞	⊞
PBTBNYLON-WS	Self drilling wall toggle for plasterboard with pan head screw	Ph2	25pce	500 (20 x 25pce)