



nVader

BY [FLARESPACE]

BOOST BOX INSTALL INSTRUCTIONS




These instructions cover installation of Boost Box to the nVader Rack using the Flarespace designed kits.

BOOST Storage Box Mounting Instructions

This hardware kit includes the required materials to attach a Backwoods Storage box to the nVader rear rack. These instructions can also be followed to mount similar storage boxes from other brands, but measurements and procedures may vary.

Included Hardware:

Part	Name	Quantity
A	HandEtrack Inserts	6
B	Button Head Bolts	6
C	Sealing Washer	6
D	Lock Washer	6

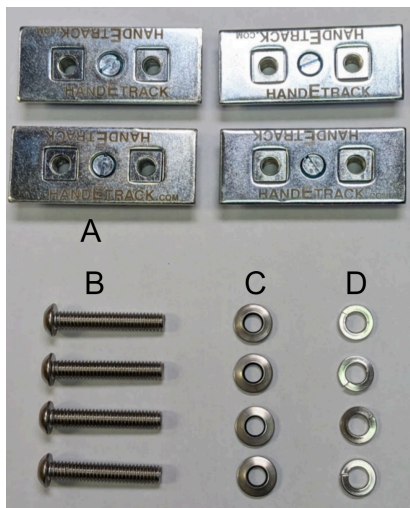

Required Components (Not Included):

1x Sandy Vans Boost Box


Tools required:

3/16" Allen Wrench (Included)


Flat head screwdriver

Instructions:

1. Locate the mounting locations for attaching Boost box to nVader Rack. Cut or drill out the inner fabric liner covering these holes on the inside.

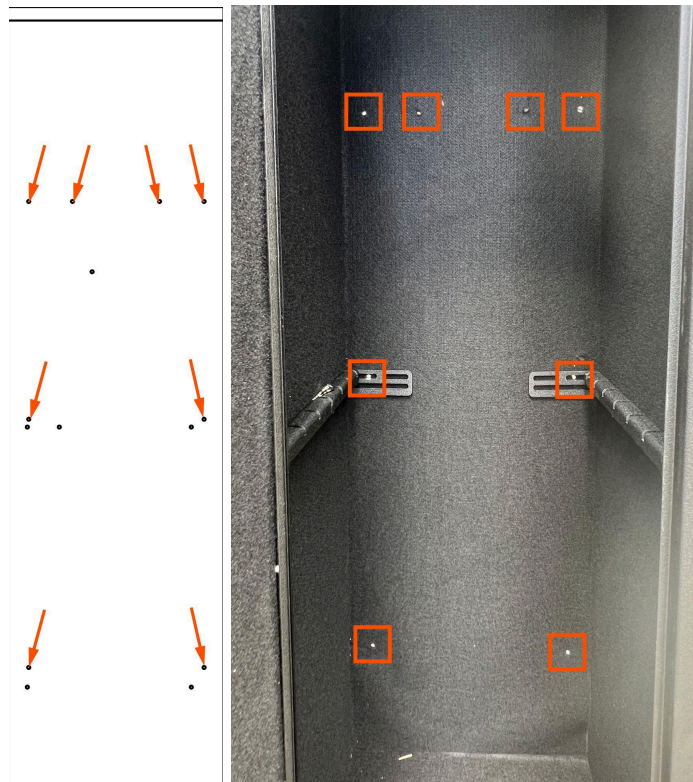

2. Locate the handEtrack hardware positions for your chosen panel.

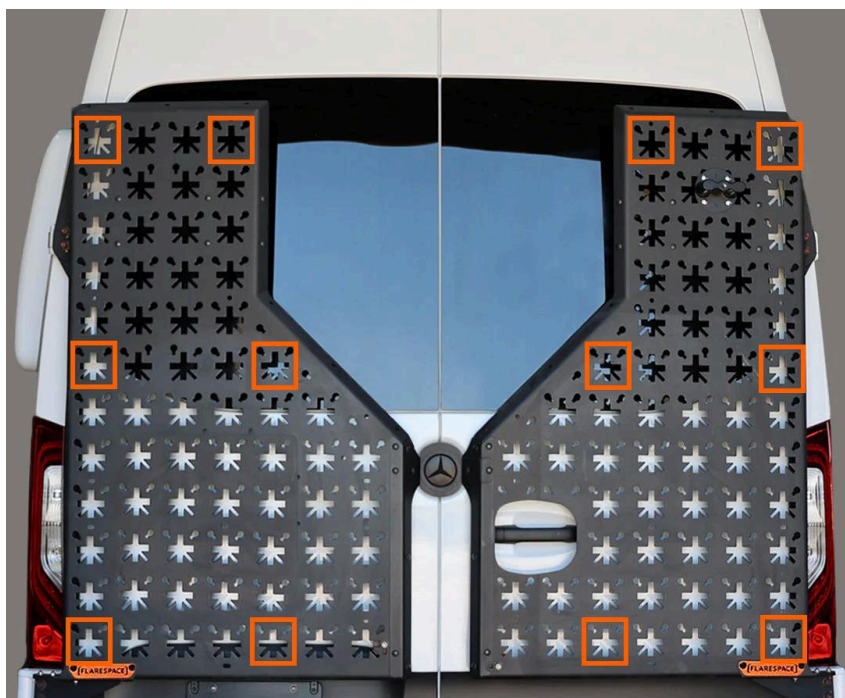

3. Install the handEtrack hardware (A) into the nVader rack. Loosen the center screw until it is nearly removed. Slip the back portion of the handEtrack into the **VERTICAL** slot, and align it to be centered up and down. Tighten the center screw to hold in place.



4. Place a lock washer (D) and sealing washer (C) on all four bolts (B). The sealing washer should be facing out so that it contacts the sheet metal surface of the box as shown below.



5. With the help of a friend, hold the box up and bolt into place using the supplied hardware. Tighten bolts using a 3/16" Allen Wrench. You will only be using the LOWER threaded points of the top four handEtrack and the UPPER threaded points of the bottom two handEtrack.