



# nVader

BY [FLARESPACE]

## DMOS SHOVEL MOUNTING INSTRUCTIONS


---

These instructions cover installation of DMOS shovels and similar items to the nVader Rack using the Flarespace designed kits.

## Mounting Instructions for DMOS/Thin Brackets

### Included Hardware:

Part	Name	Quantity
A	Carriage Bolt	4
B	Washer	4
C	Plastic Retaining Washer	4
D	Nylock Nut	4

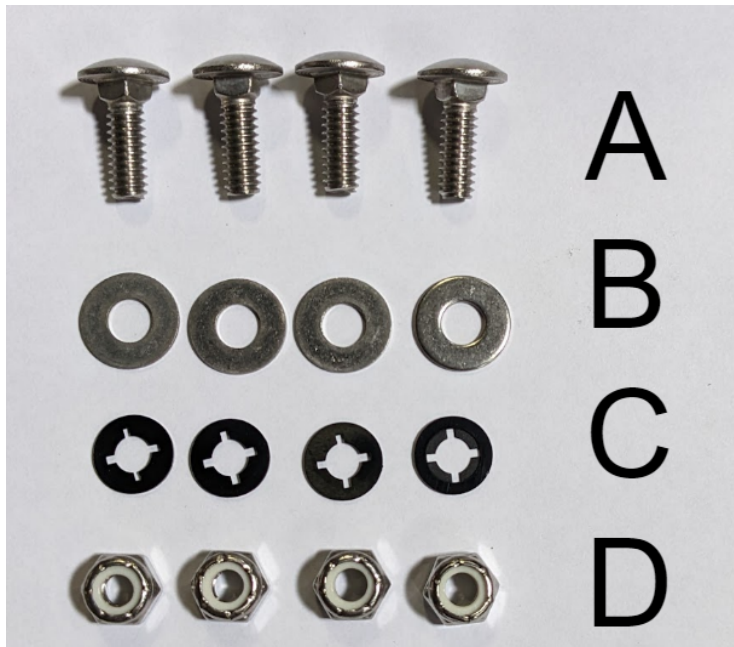



### Tools required:

7/16" Wrench

**Instructions:**

1. Hold up the DMOS Delta shovel mount to the area you will mount it to the nVader rack. Identify any areas where the Delta mount slots/holes line up with the nVader rack 1/4" carriage bolt mount locations. For reference, the crosshairs indicate locations where 1/4" carriage bolts can be used on the nVader rack.

*NOTE: While these instructions were written for the DMOS Delta bracket the same methods can apply to other thin sheet metal brackets.*

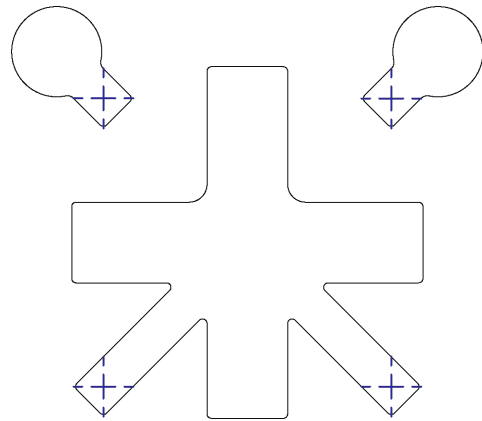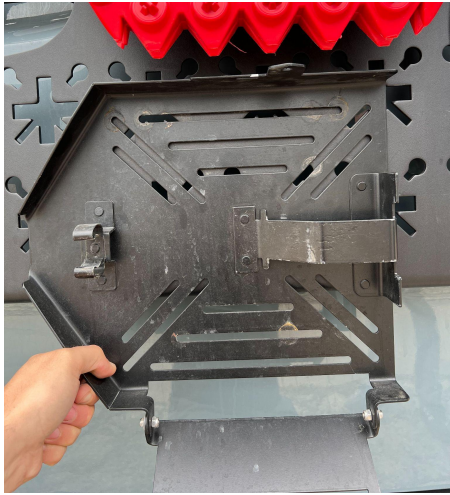


2. Place retaining washers (C) on all four carriage bolts (A), leaving space for the thickness of the nVader rack.



3. Slide two carriage bolts (A) into the chosen locations. Image below for reference only.



4. Put the bolts through the center slots of the DMOS shovel bracket, and secure with a washer (B) and nylock nut (D).

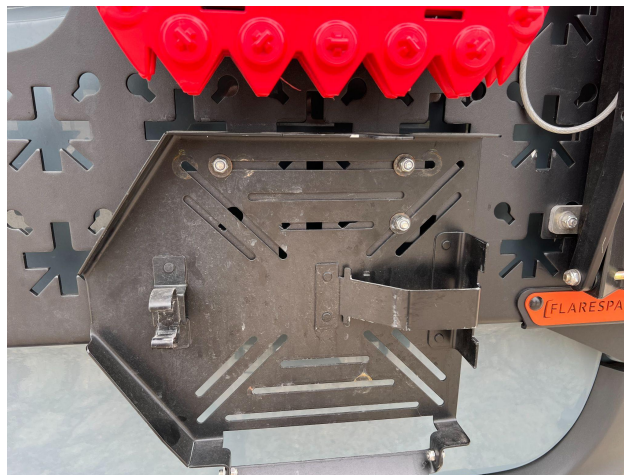

5. Place the shovel into the Delta bracket to complete the installation.