



BÖHM BIKE MOUNT

INSTALLATION INSTRUCTIONS



LET 'S GO!!


Thank you for your purchase. This is an easy install but please read these installation instructions before getting rolling with this project.

Take your time and be mindful with the tools as personal harm and/or damage is possible if you're not careful.

Only install this product with the supplied hardware as substituting or modifying hardware could damage your awesome rig.

Thank you for supporting the overlanding community. We are jealous that we can't join you out on the open road and beyond, but sincerely hope this product will enrich your travels.

- Your friends at Flarespace

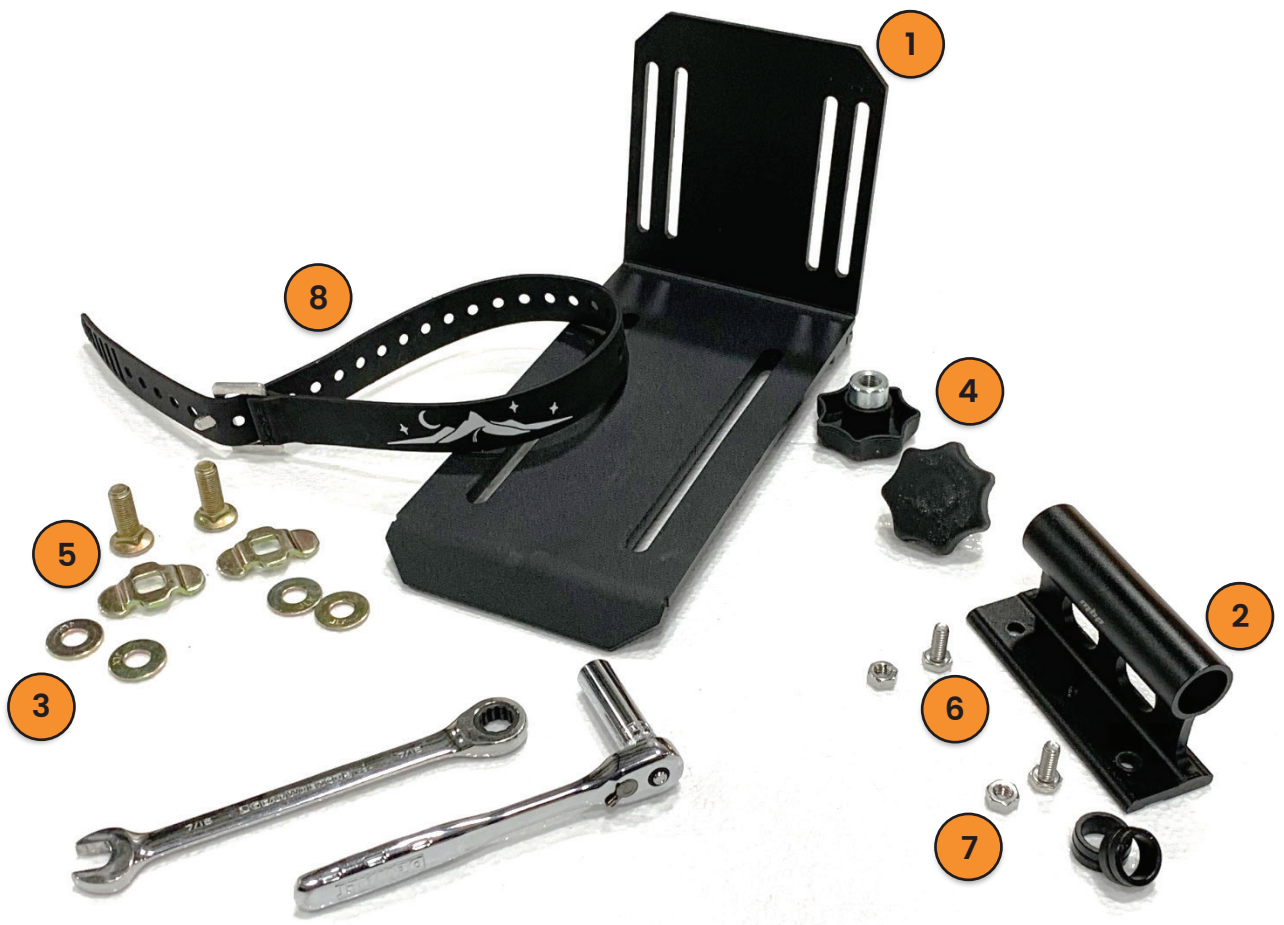

1. (1) BÖHM Bike Mount
2. (1) MBP Bike Block
3. (4) 1/2" Washers
4. (2) Phenolic Black Knobs
5. (2) L-Track Fittings
6. (2) 1/4"-20 Bolt
7. (2) 1/4"-20 Nut
8. (1) Flarespace Tire Strap

TOOLS NEEDED:

1. Socket and Wrench Set with 7/16" Sockets.
2. Your Hands



STEP 1:

With the provided 7/16" nuts and bolts, mount the MBP bike block to the BÖHM bike mounting plate. It is recommended to mount the block in the middle to start. You can adjust later if needed.

Tech Tip: The top section of the mounting plate has slots to fit a 3" or a 4 1/4" bolt pattern. Other block brands like Rocky Mounts can fit also.




STEP 2:

Determine what your bike axle size is and place the appropriate adapter into the block.

The MBP bike block comes standard with 15x100/ 15x110/ 12x100/ and quick release.

Tech Tip: Most thru axles have size printed directly on them.


Be sure the letters on the adapters face the outside, and the gaskets are inside the bike block, securing its placement.

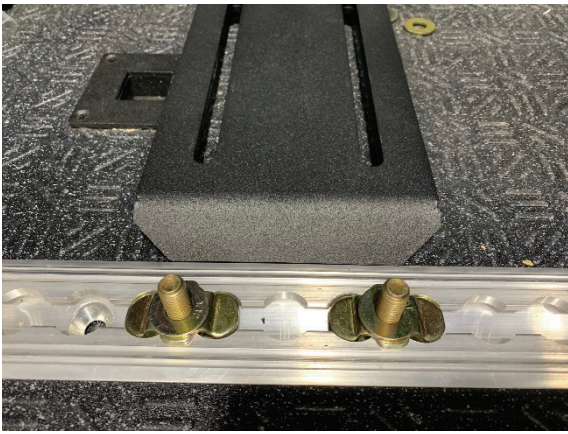

STEP 3:

Place the L-track fittings into the L-track spaced 3" apart.

Be sure to add a 1/2" washer onto each fitting!

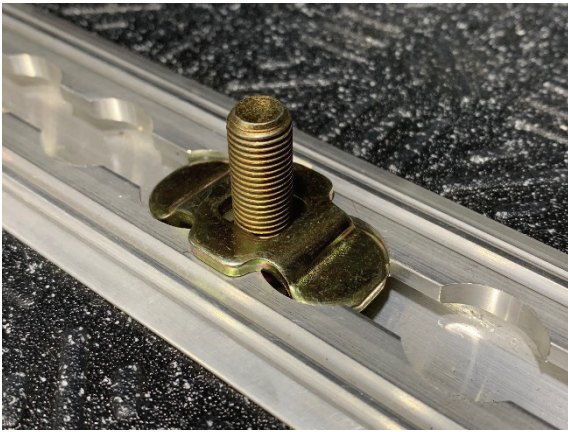

The Threaded bolt sits in between the circles along the L-track and the lock washer ends sit inside the circles. The lock washer prevents the threaded bolt from moving out of place while driving.

Tech Tip: Use the bottom slots of the BÖHM mount to help line up your fittings as shown in the above imagery. Be mindful of the bed leg catches and the length of your handlebars when mounting close to either cabinet.



STEP 4:

Place the BÖHM mount onto the L-track fittings and add a 1/2" washer to each.

It is recommended the vertical part of the bike mount faces the rear of the van.

Tech Tip: Consider how many bikes you plan to pack, along with all your luggage and gear and strategically position the BÖHM mount along the L-track. Also consider the bed legs and if you travel with your bed in the down position.



STEP 5:

Screw the black knobs onto the L-track fittings at the same time to secure the mount and tighten them as hard as you can to prevent damage to you, the bike, and the van.



STEP 6:

Remove your front tire and lift your bike into the garage area.

Have your front axle at the ready to fasten your forks to the MBP bike block.

Tech Tip: Utilize the rear tire to help roll the bike into mounting position. Some users mount the bike to the BÖHM mount before fastening the mount to the L-track.



STEP 7:


Mount the front forks onto the MBP bike block and secure it tightly. Every bike is different so your mount style may differ.



STEP 8:

Loosen the MBP bike block or the BÖHM mount and adjust for spacing as needed.

Always double check on making sure the black knobs and MBP bike block are tight and secure before travel.

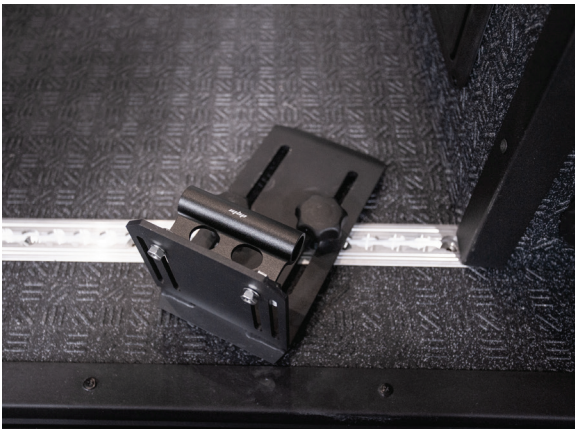

PRO TIP: THE MOUNT IS DESIGNED TO ROTATE SO THAT THE HANDLEBAR FITS BETWEEN THE GARAGE CABINETS AND THE REAR DOOR MAXIMIZING SPACE.



STEP 9:

With the provided Flarespace Strap, fasten your front tire to your bike frame like shown to prevent from damaging you, the passengers, your bike, or your van.

Tech Tip: If traveling with multiple bikes, you can strategically place the bikes frame to frame by staggering the handlebars and peddles. Also try reversing the mount and using the other L-track!

SOME EXAMPLES



YOUR WARRANTY

Subject to the limitations and exclusions described in this warranty, Flarespace will remedy defects in materials or workmanship by repairing or replacing, at its option, a defective product without charge for parts or labor. In addition, Flarespace may elect, at its option, not to repair or replace a defective product but rather issue to a purchaser a refund equal to the purchase price paid for the product or a credit to be used toward the purchase of a new Flarespace product.

This warranty excludes problems caused by normal wear and tear including, but not limited to, scratches, dents, tears, or aesthetic oxidation of surfaces, natural breakdown of colors and materials over extended time and use, commercial use, accidents, or unlawful vehicle operation. No warranty is given for defects resulting from conditions beyond Flarespace's control including, but not limited to, modifications or repairs not performed or authorized by Flarespace, misuse, overloading, or failure to assemble, install or use the product in accordance with Flarespace's written instructions or guidelines included with the product or made available to the purchaser originally.

Items purchased from dealers may either be returned to the place of purchase and they will facilitate your warranty or you may work directly with Flarespace. Warranties are non-transferable.

HOW DO I SUBMIT A WARRANTY CLAIM?

Email info@flarespace.com and include the following:

When the product was purchased, what the issue is, and photo(s) of the product highlighting the area of issue.

We are available Monday - Friday from 9am-5pm MT, and will try to reply to your email within 2 business days or as soon as possible.



FLARESPACE.COM
COPYRIGHT © 2022
FLARESPACE, LLC.
ALL RIGHTS RESERVED