



# SHOWER CADDY

INSTALLATION INSTRUCTIONS

---



LET 'S GO!!

Thank you for your purchase. This is an easy install but please read these installation instructions before getting rolling with this project.

Take your time and be mindful with the tools as personal harm and/or damage is possible if you're not careful.

Only install this product with the supplied hardware as substituting or modifying hardware could damage your awesome rig.

Thank you for supporting the overlanding community. We are jealous that we can't join you out on the open road and beyond, but sincerely hope this product will enrich your travels.

- Your friends at Flarespace

## **PARTS INCLUDED:**

- 1. (1) Shower Caddy**
- 2. (7) #8 X 1/2" Black Wafer  
Head Stainless Steel Screws**

## **TOOLS NEEDED:**

- 1. Marker**
- 2. Painter's tape**
- 3. Drill**
- 4. 7/64" Drill Bit with 1/4"  
Depth Stop Attachment**
- 5. Philips drill bit OR Phillips  
Screwdriver**

## STEP 1

Hold caddy into place lining up along top edge of shower door.



*Tech note: use painter's tape to hold in place or have an overlanding pal help. Note where the holes line up on the left and right side above the pin hinge. Adjust accordingly so these mounting holes are just above pin hinge and don't interfere. There will be slack in the caddy design as it is not meant to fit taught.*

Mark upper left and right corner holes with marker. Remove Shower Caddy.


## STEP 2

Use a 7/64" drill bit to pre-drill your (2) left and right top corner holes **no more than 1/4" deep**.

*Tech note: this is where it is important to use the 1/4" depth stop on the drill bit.*

*Oops moment: starboard has to be drilled before screwing, no exceptions.*




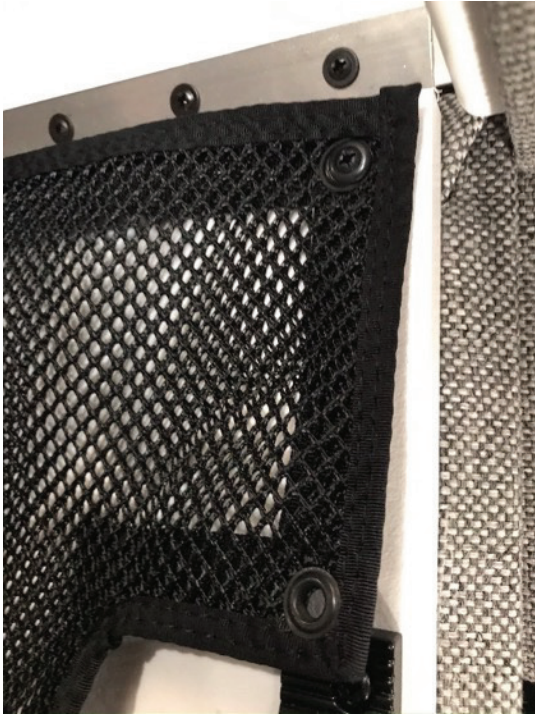

### STEP 3

Carefully use the included #8 x 1/2" Stainless Steel Screws and attach Caddy by securing the top left and top right corners.

*Oops moment: Do not over tighten screws as this will strip the starboard and then you are a star no more.*

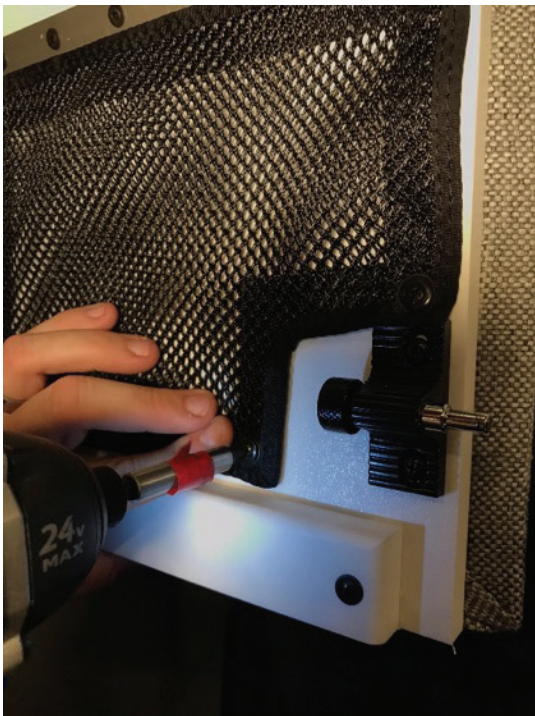

### STEP 4

With caddy in place, drill remaining (5) holes with 7/64" bit and install (5) #8 x 1/2" Stainless Steel Screws.


Congrats, you are finished. Now, stock with your favorite soap, shampoo and conditioner. And don't forget to wash behind your ears!

## **SHOWER CADDY WARRANTY:**

Flarespace teamed up with Overland Gear Guy to produce these amazing products. OGG makes quality, durable gear that they stand behind. Their products are of top-notch workmanship, but if by chance any Overland Gear Guy products fail due to manufacturing or workmanship, they will repair or replace the item (at their discretion) free of charge. Overland Gear Guy's Lifetime Workmanship Warranty does not cover such things as damage from normal wear and tear, damage from customer modification and/or tampering, misuse, or abuse. Warranties are non-transferable.

## **TO SUBMIT WORKMANSHIP WARRANTY CLAIMS:**

Email an explanation of the issue as well as detailed pictures to [sales@overlandgarguy.com](mailto:sales@overlandgarguy.com). You will receive a response within one business day. If the claim is deemed a workmanship manufacturing defect, you'll receive a Return Authorization Number with further instructions. Please note that the customer is responsible for return shipping fees.

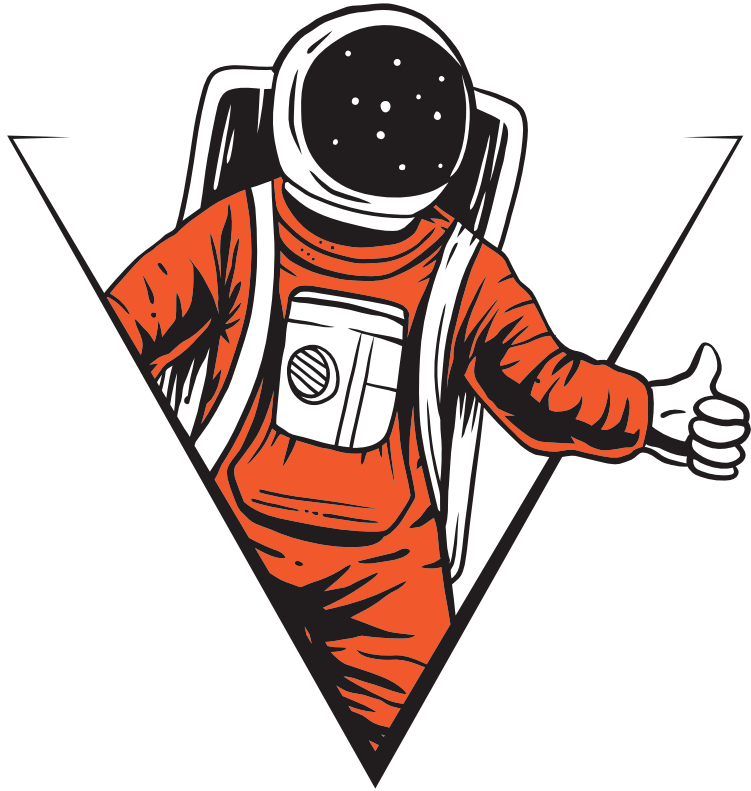

FLARESPACE.COM  
COPYRIGHT © 2022  
FLARESPACE, LLC.  
ALL RIGHTS RESERVED