


Using Template as Drill guide:

1) Place item to be mounted onto the template in the desired location. 2) Trace item outline onto template 3) Remove item and cut out the outline created. 3) On the cutout, Identify and mark any applicable mounting hole locations to be used. 5) Drill the desired hole locations into the item to mount. the correct sized hole for the hardware being used. $\overline{}$ Rotopax Mounting Points Spare Tire Mounting Points (+)(+)(+)

4) Align the cutout portion of the template to the backside of the part and transfer hole locations.

IMPORTANT: Note the differing sizes of hardware required for different locations. Be sure to drill

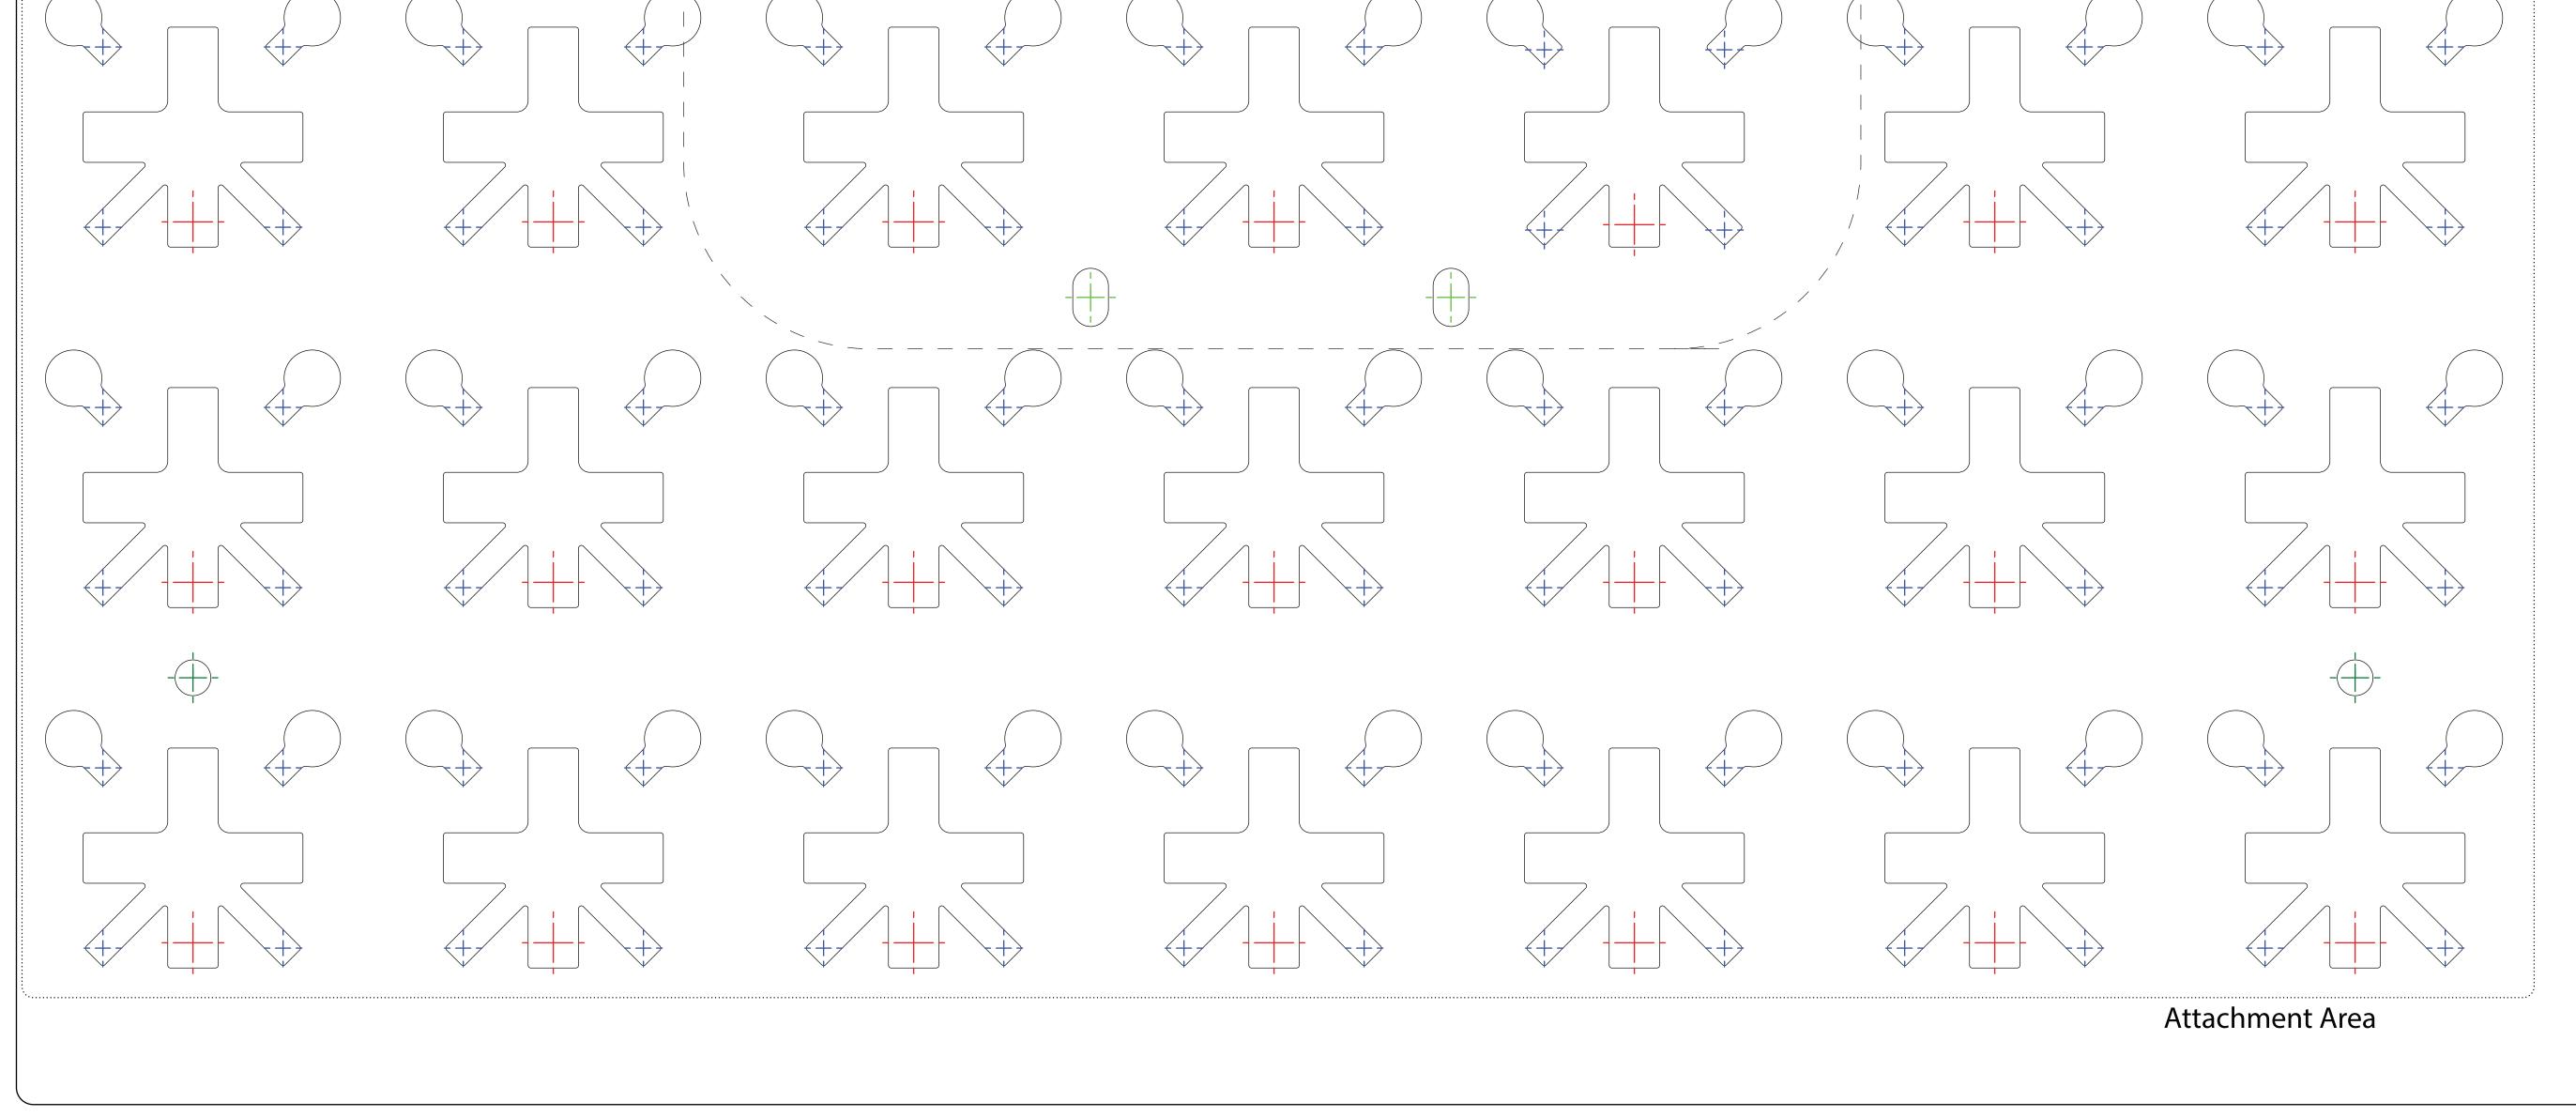

Panel Outline