



# nVader

BY [FLARESPACE]

## ROTOPAX INSTRUCTIONS


---

These instructions cover installation of Rotopax DLX mounts and similar accessories to the nVader Rack using the Flarespace designed kits.

## Rotopax Mounting Instructions

### Included Hardware:

Part	Name	Quantity
A	Carriage Bolt	4
B	Low Profile Nylock Nut	4
C	Plastic Retaining Washers	4

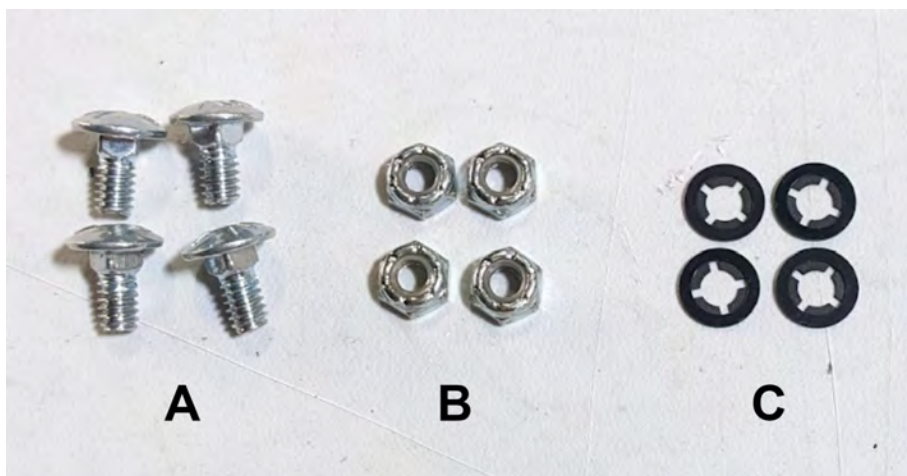

### Required Components (Not Included):


1x Rotopax mount

### Tools required:


7/16" wrench

## Instructions:

1. Assemble Rotopax mount as per included instructions
2. Place retaining washers (C) on all four carriage bolts (A), leaving space for the thickness of the nVader rack.

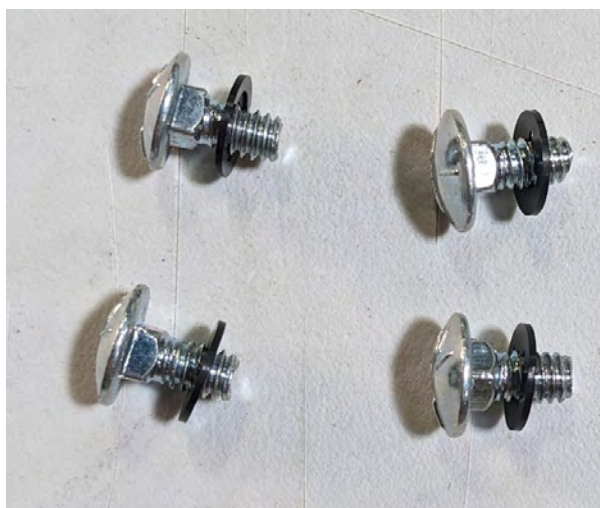


3. Determine the desired location of the rotopax mounting bracket. The rotopax bracket can be mounted to the NVader rack at the 4 locations marked below. They can be identified by having vertical keyhole slots and altered diagonal slots.

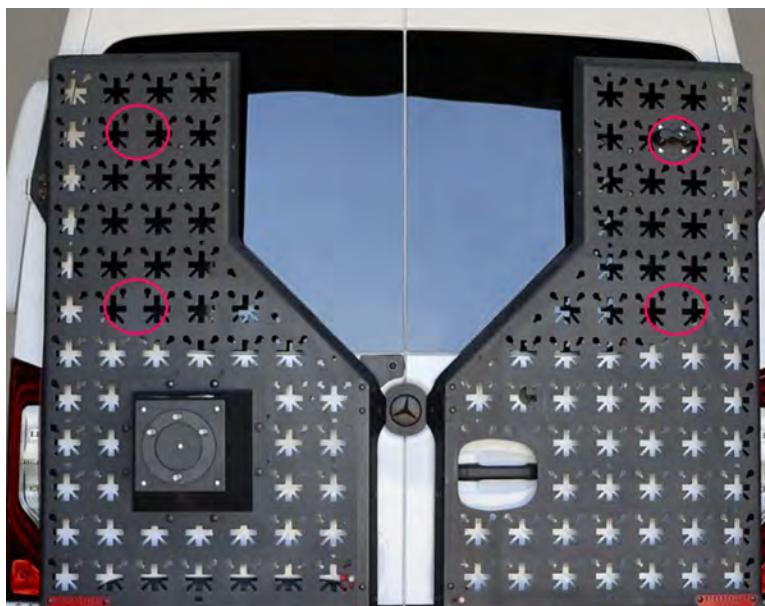

4. Place all four bolts from Step 2 into the slots on the nVader rack.



5. Place the rotopax mount over the four bolts and secure with nylock nuts (B).

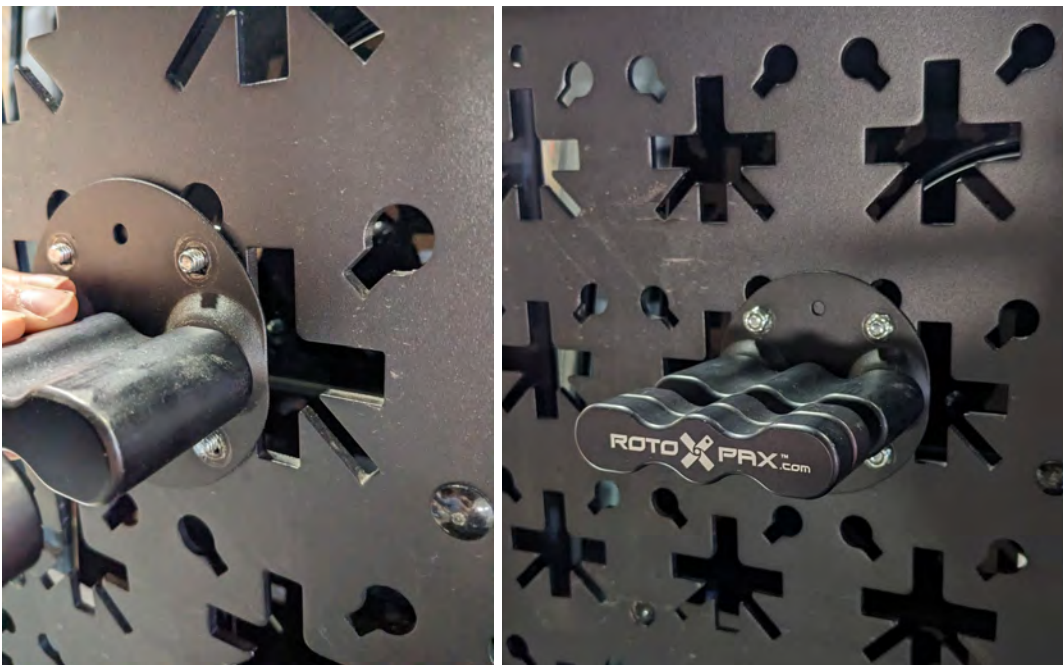

6. Install Rotopax Container to Rotopax mount

