



nVader

BY [FLARESPACE]

STORAGE BOX INSTRUCTIONS


These instructions cover installation of storage boxes and similar accessories to the nVader Rack using the Flarespace designed kits.

Storage Box Mounting Instructions

This hardware kit includes the required materials to attach a Backwoods Storage box to the nVader rear rack. These instructions can also be followed to mount similar storage boxes from other brands, but measurements and procedures may vary.

Included Hardware:

Part	Name	Quantity
A	HandEtrack Inserts	4
B	Button Head Bolts	4
C	Sealing Washer	4
D	Lock Washer	4

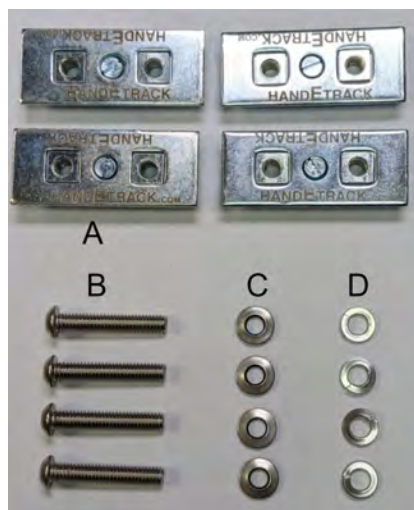

Required Components (Not Included):

1x Backwoods or Owl storage box

Tools required:

3/16" Allen Wrench (Included)


3/8" Drill Bit

Tape Measure

Instructions:


1. Locate and mark the positions for drilling mounting holes. The 4 hole locations will form the corners of a rectangle 12" wide by 16" tall. To mount the box in the lower outside corner of the passenger side (US), we recommend the left hand holes to be 6" from the left hand side of the box and the bottom holes to be 4" from the bottom of the box. The hole position can be altered if placing the box in a different location, but the 12" and 16" hole spacings should still be used to ensure that the holes line up with the nVader Rack.

NOTE: The left hole position is referenced from looking at the back of the box.

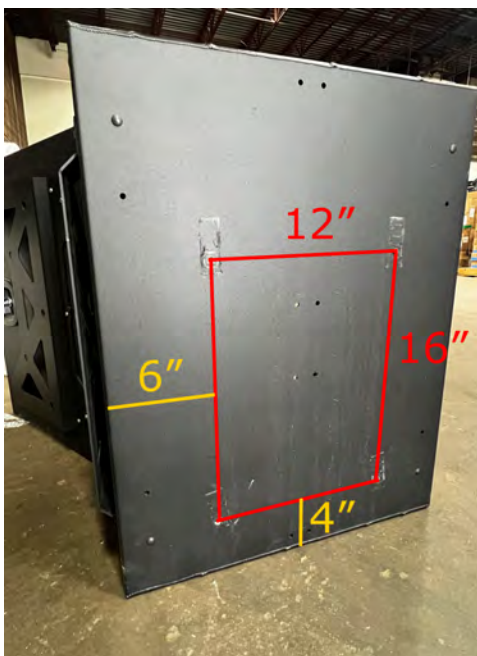

2. Drill a 3/8" hole at each of the four marked locations.

3. Locate the handEtrack hardware positions. To mount the box to the lower outside corner of the passenger side (US) panel, place the handEtrack hardware (A) in the locations marked below. These locations can be mirrored to mount to the lower corner of the drivers side panel.

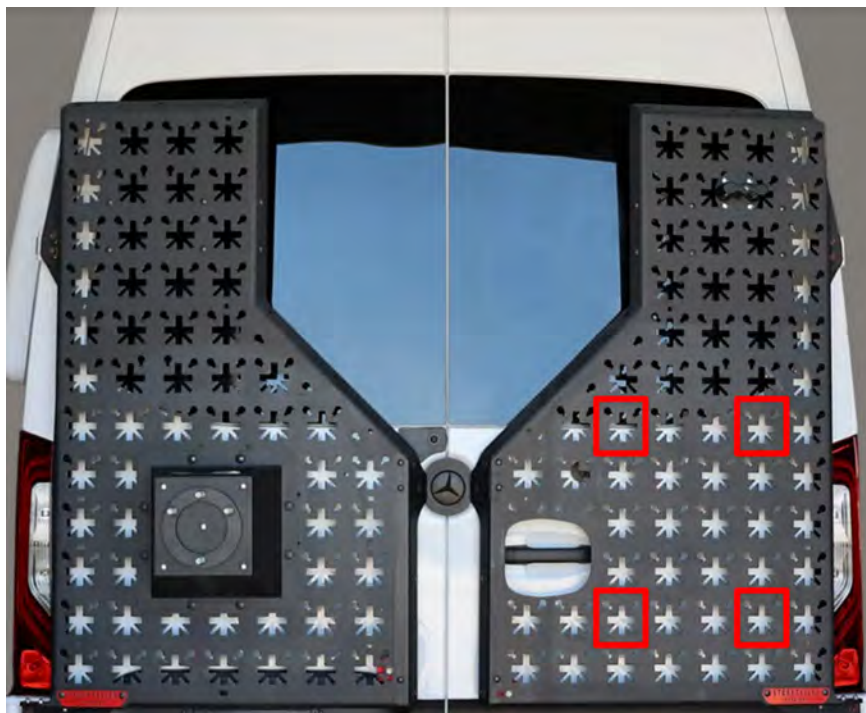

4. Install the handEtrack hardware (A) into the nVader rack. Loosen the center screw until it is nearly removed. Slip the back portion of the handEtrack into the vertical slot, and align it to be centered up and down. Tighten the center screw to hold in place.



5. Place a lock washer (D) and sealing washer (C) on all four bolts (B). The sealing washer should be facing out so that it contacts the sheet metal surface of the box as shown below.



6. With the help of a friend, hold the box up and bolt into place using the supplied hardware. Tighten bolts using a 3/16" Allen Wrench. When mounting in the lower right corner, you will only be using the lower threaded points of each handtrack.

