

www.charlestaylortrading.com info@charlestaylortrading.com





Required
PZ2 screwdriver

Step 1



This pack includes: 1x left side, 1x right side, 1x top support brace, 1x back trellis, 1x seat base, 1x seat back, 1x canvas roof, 1x roof frame, 4x 35mm screws, 8 x 50mm screws, 8 x 70mm screws, 9x 100mm.

Step 2



Position the left and right sides, ensure the tall leg is at the front and the support timbers for the seat are on the inside. Place the top support brace on the back end of the sides flush to the back legs.

Step 3



Fix top support bar in place with 2x 50mm screw on each end of the bar.

Step 4



Position the back trellis between the two sides. Fix in place with 2x 50mm screws through the top support block.

Step 5



Insert 4x 35mm screws in the pre-drilled holes down each side of the trellis and fix from the back through the support bars into the trellis.

Step 6



Position the seat base on the supports.

Step 7




Fix in position using 8x 70mm screws 4 on each side evenly spaced.

Step 8



Position the back part of the seat on the framework.

Step 9

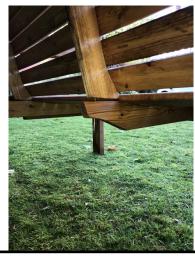

Fix in place with 1x 100mm screw.

Step 10



Position the roof frame on the arbour, ensure it is flush to the back legs, lift the front of the roof so it is flush with the top of the front legs and fix in place with 8 100mm screws. Pull the canvas sunshade over the roof frame, remember to remove the canvas sunshade during inclement weather.