

**THANK YOU FOR
BUYING OUR ROADBAG
TRAVEL**

buds-sports-us.com

INSTRUCTION MANUAL



HOW TO PACK YOUR BIKE IN YOUR ROADBAG TRAVEL




SECURE YOUR BIKE WITH VELCROS

FRAME PROTECT - IF THE HANDLEBAR IS REMOVED, YOU CAN ATTACH THEM TO THE FRAME PROTECT WITH ITS TWO VELCRO FASTENERS



INTEGRATED PADDED WHEEL POCKET SECURED WITH VELCROS

FORK BIKE PROTECT - AFTER REMOVING THE FRONT WHEEL, PLACE IT OVER THE BIKE FORK AND TIGHTEN FIRMLY TO ENSURE IT STAYS IN PLACE

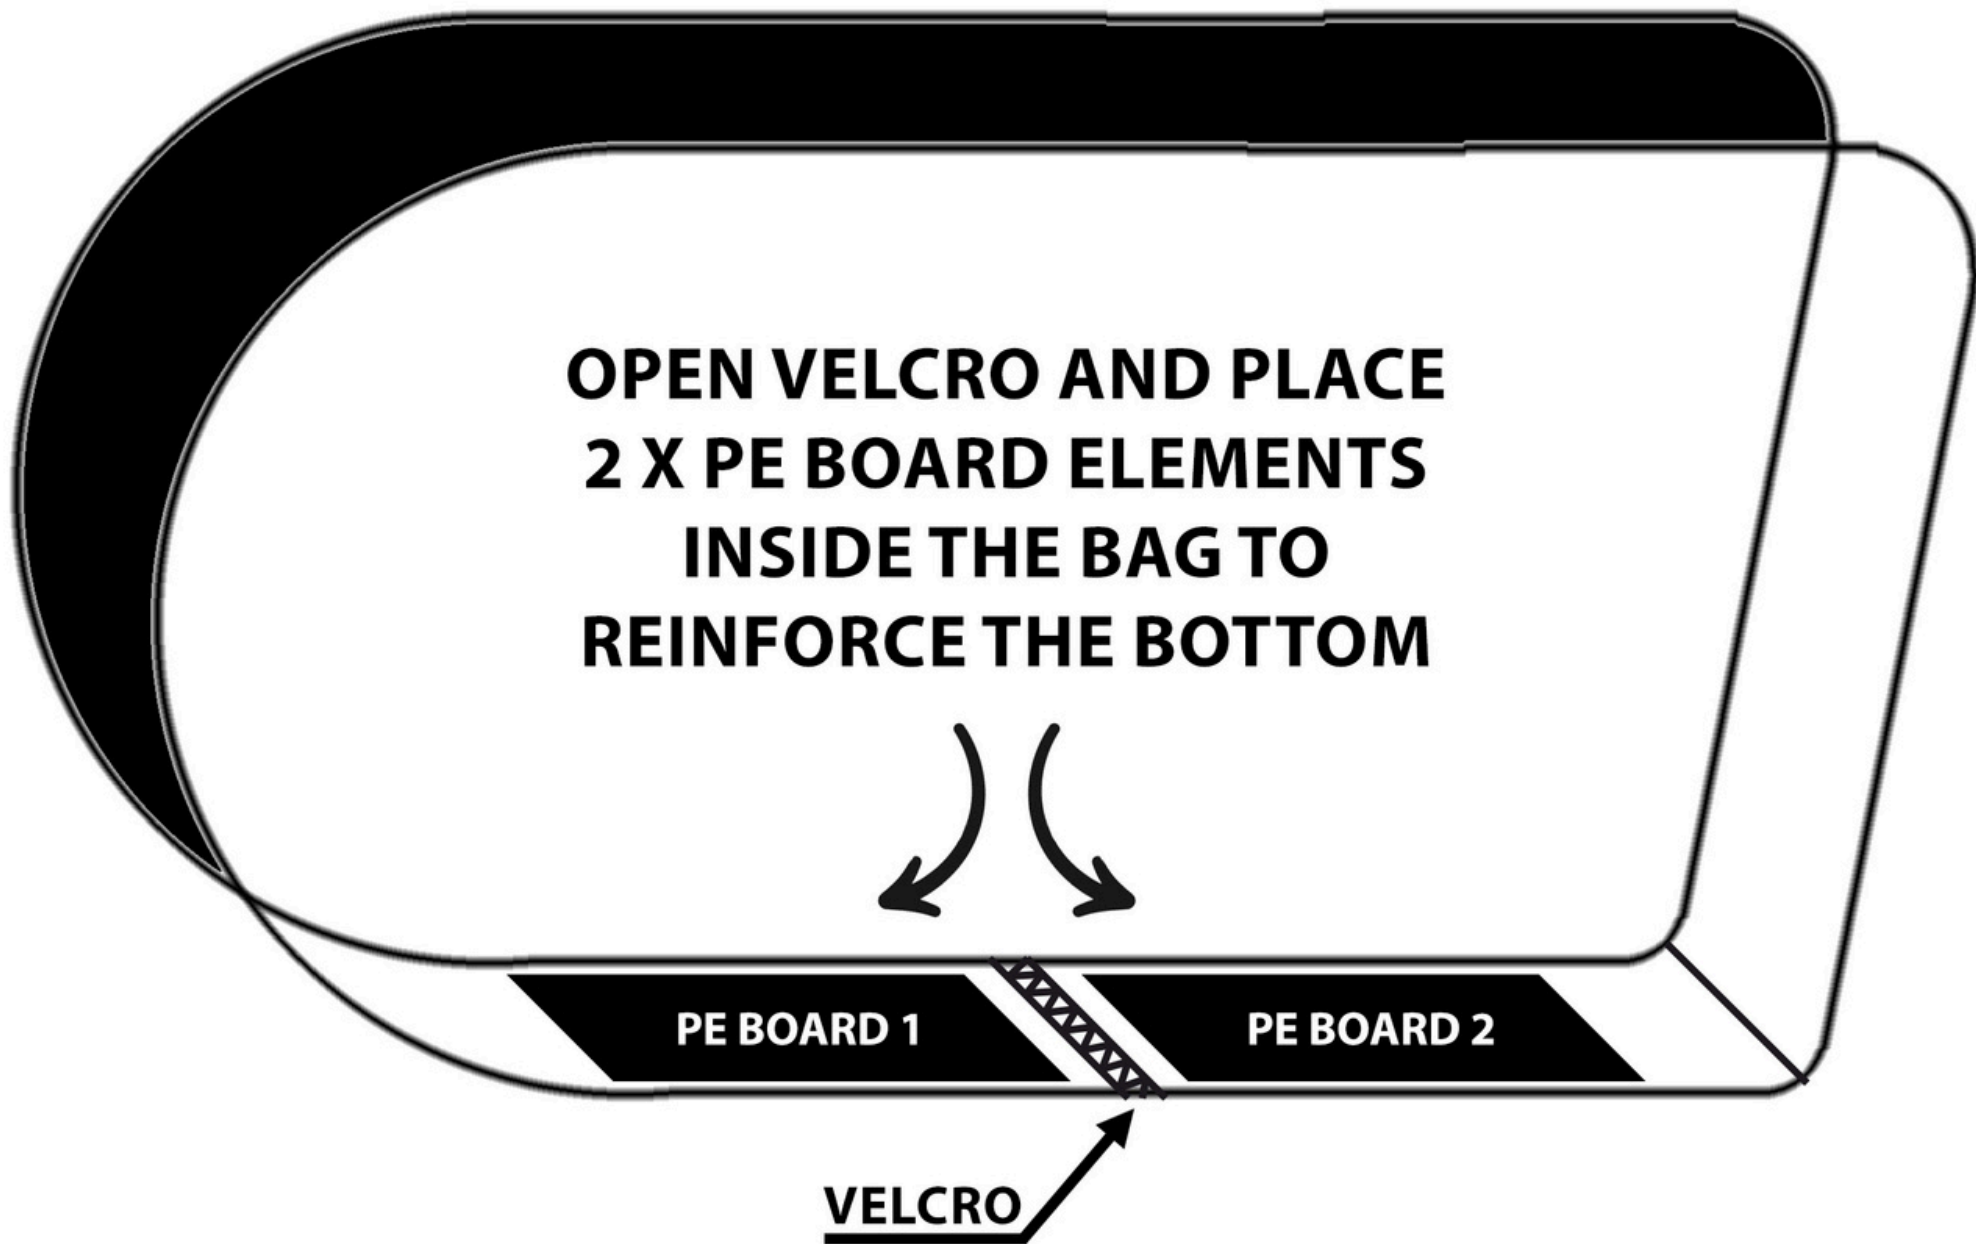

- 1 OPEN VELCRO AND PLACE 2 X PE BOARD ELEMENTS INSIDE THE BAG TO REINFORCE THE BOTTOM**
- 2 REMOVE FRONT WHEEL AND STORE IT IN THE DEDICATED PADDED WHEEL POCKET**
- 3 INSTALL THE FRAME PROTECT AND THE FORK BIKE PROTECT ON THE BIKE**
- 4 TURN THE HANDLEBAR THROUGH 90° TO MATCH THE FRAME AXIS**
- 5 INSTALL THE BIKE IN THE BAG AND SECURE IT WITH VELCROS**
- 6 STORE YOUR STUFF (SHOES, HELMET...) IN THE TRANSPORT POCKET AND PUT IT IN THE BAG**
- 7 CLOSE THE BAG, YOU'RE DONE!**





FRAME PROTECT - IF THE HANDLEBAR IS REMOVED, YOU CAN ATTACH THEM TO THE FRAME PROTECT WITH ITS TWO VELCROS FASTENERS



FORK BIKE PROTECT - AFTER REMOVING THE FRONT WHEEL, PLACE IT OVER THE BIKE FORK AND TIGHTEN FIRMLY TO ENSURE IT STAYS IN PLACE

