




HANGING INSTRUCTIONS DARTBOARD CABINET

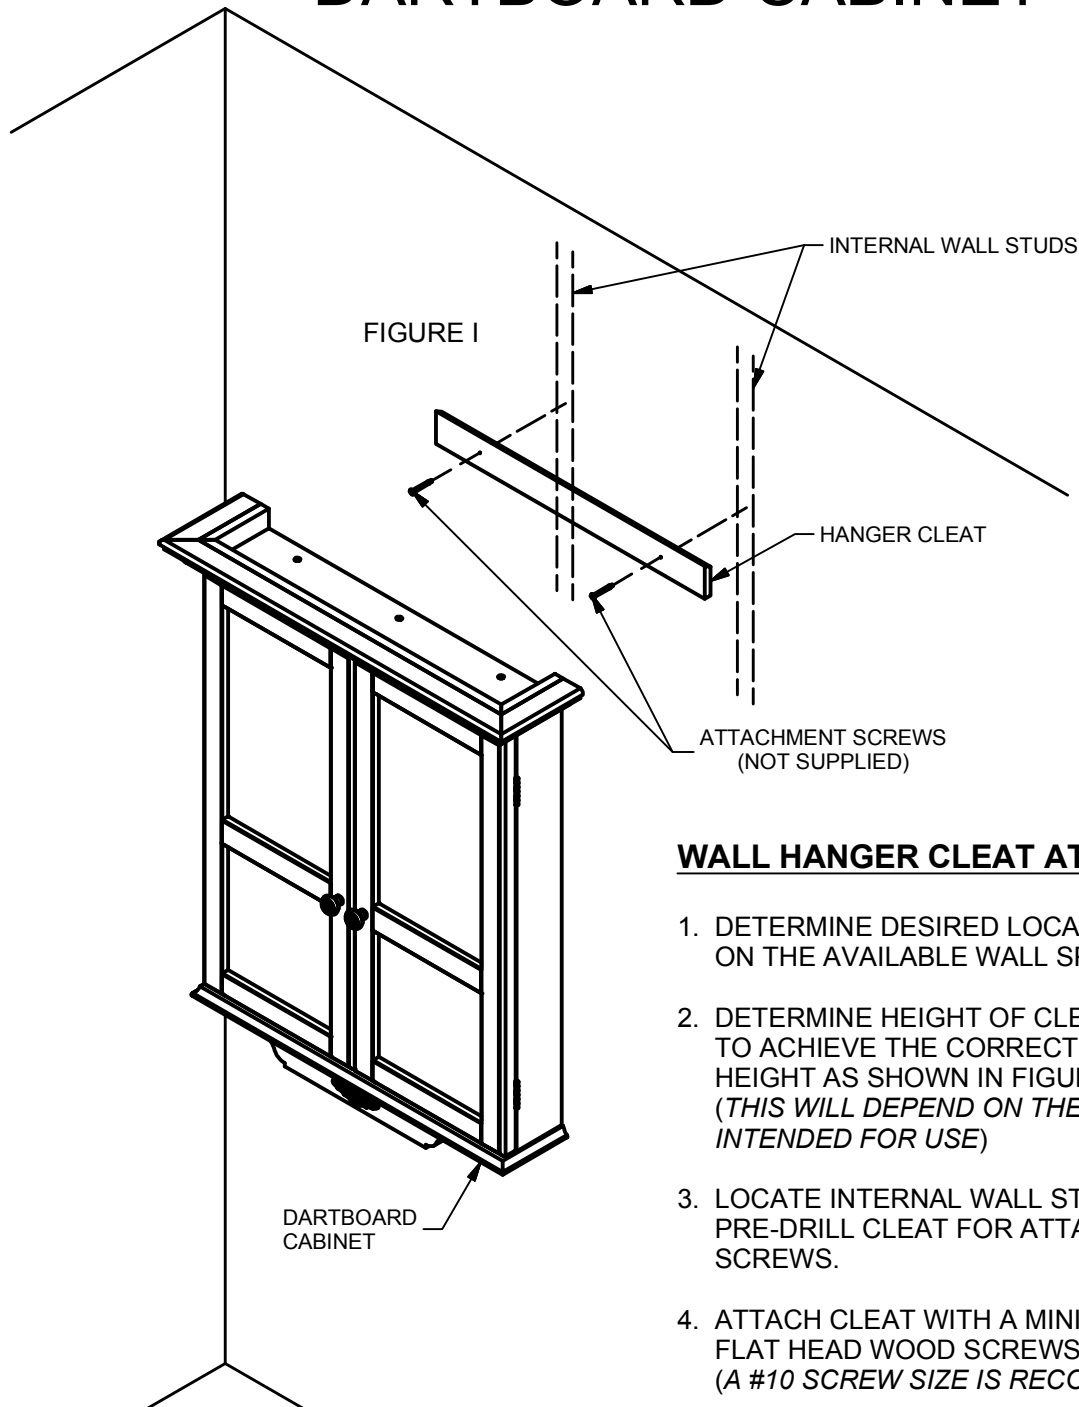

WALL HANGER CLEAT ATTACHMENT

1. DETERMINE DESIRED LOCATION ON THE AVAILABLE WALL SPACE.
2. DETERMINE HEIGHT OF CLEAT REQUIRED TO ACHIEVE THE CORRECT BULL'S EYE HEIGHT AS SHOWN IN FIGURE II(PAGE 2). (THIS WILL DEPEND ON THE DARTBOARD INTENDED FOR USE)
3. LOCATE INTERNAL WALL STUDS AND PRE-DRILL CLEAT FOR ATTACHMENT SCREWS.
4. ATTACH CLEAT WITH A MINIMUM OF TWO FLAT HEAD WOOD SCREWS. (A #10 SCREW SIZE IS RECOMMENDED)
5. HANG CABINET ON WALL CLEAT.



HANGING INSTRUCTIONS DARTBOARD CABINET

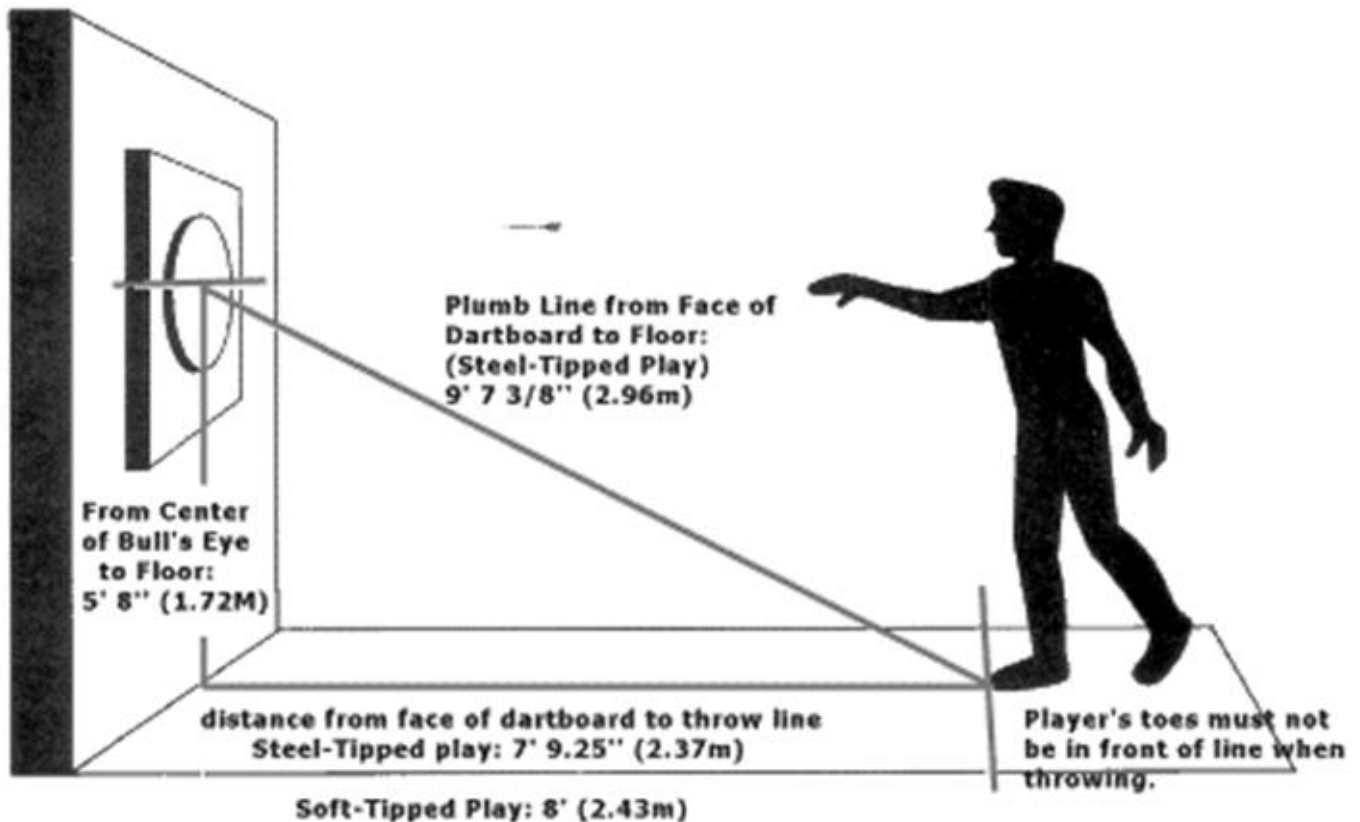


FIGURE II