


### Drill Hole Option 2

Round fitting needs to be attached to the wall

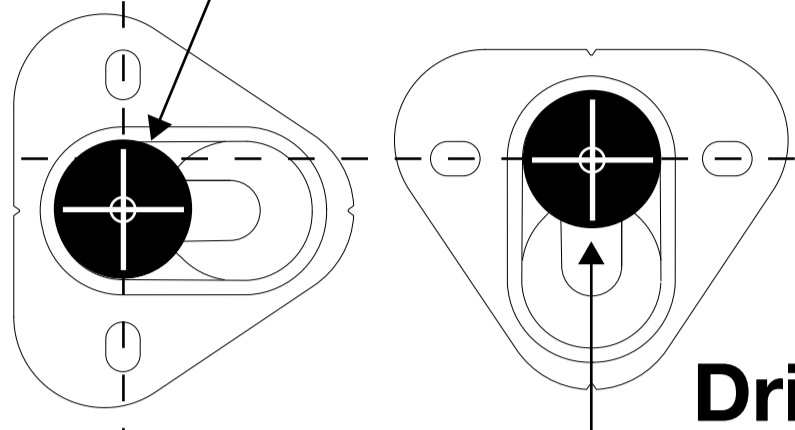


### Drill Hole Option 1

Round fitting needs to be attached to the wall

### Level Line 1

### Drill Hole Option 1


Round fitting needs to be attached to the wall

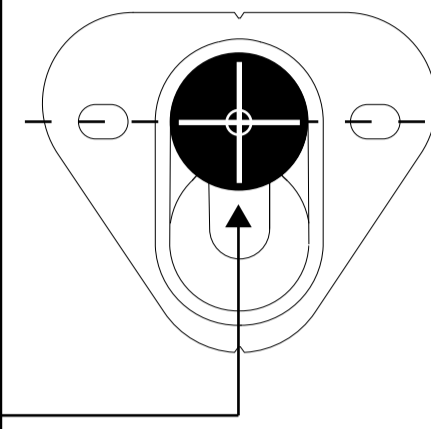

### Level Line 2

### Drill Hole Option 2

Round fitting needs to be attached to the wall

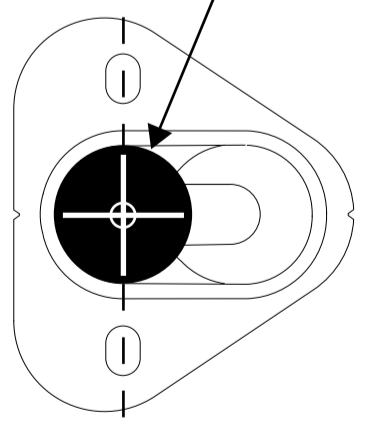

**Arca**  
David Irwin  
**Small Wall Box**

**case**

#### Instructions

1. Attach the template to the wall in the desired location using low tack masking tape or similar.
2. Using a spirit level along the level line, adjust the template until it is straight.
3. Drill holes where marked on the template using a suitable sized drill bit for your wall plugs (not supplied).
4. Remove the template from the wall and insert the wall plugs (not supplied).
5. Fully screw the green fittings into the wall plugs with the flat side of the fitting facing the wall.
7. With assistance, lift the wall box onto the fittings ensuring that they click and engage when lowered into the final position.