## **Davis** [::::|||



#3125 for WindTrak 10

#3155 for WindTrak 15

#### #3125 J-Base for WindTrak 10


### Spare or replacement for the J-Base that comes standard with WindTrak 10


The J-Base comes with two #10 (5 mm) self-tapping screws. Drill a pilot hole in mast, apply silicone sealant or Locktite<sup>®</sup> and screw into mast. Installation of J-Base can be accomplished by tapping the mast for 3/16" (5 mm) machine screws or by using epoxy putty to affix base to the mast.

# #3155 J-Base for WindTrak 15 Versatile Mount for WindTrak 15

Reduces overall weight aloft by 15 grams when substituted for standard mounting base on WindTrak 15.

The J-Base comes with two #10 (5 mm) self-tapping screws. Drill a pilot hole in mast, apply silicone sealant or Locktite® and screw into mast. Installation of J-Base can be accomplished by tapping the mast for 3/16" (5 mm) machine screws or by using epoxy putty to affix base to the mast.

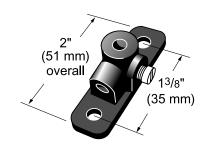

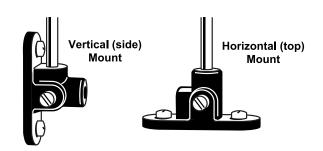

The J-Base is a glass reinforced polycarbonate fixture for mounting WindTrak to side, top or front of masts on most small boats and dinghies.

#### Davis Instruments

3465 Diablo Avenue, Hayward, CA 94545 U.S.A. info@davisinstruments.com