
Home and Garden Collection Bodhi 8' x 8' Pergola


Assembly Guide

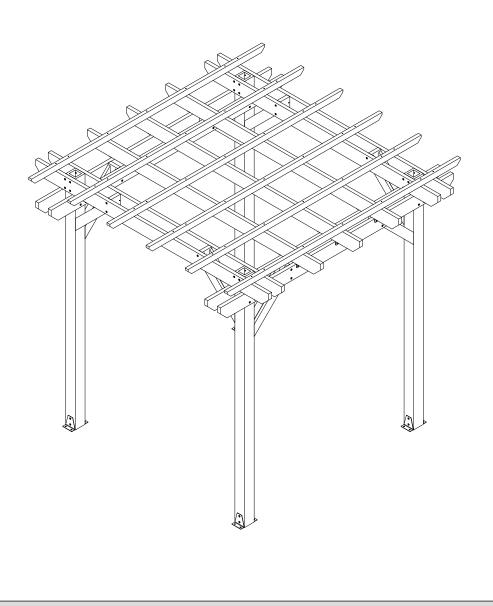






For information on Care and Cleaning or to register your *highwood*[®] product, please visit www.highwood-usa.com.


AD-PGLA-0808 05.28.21 PAGE 1 of 16

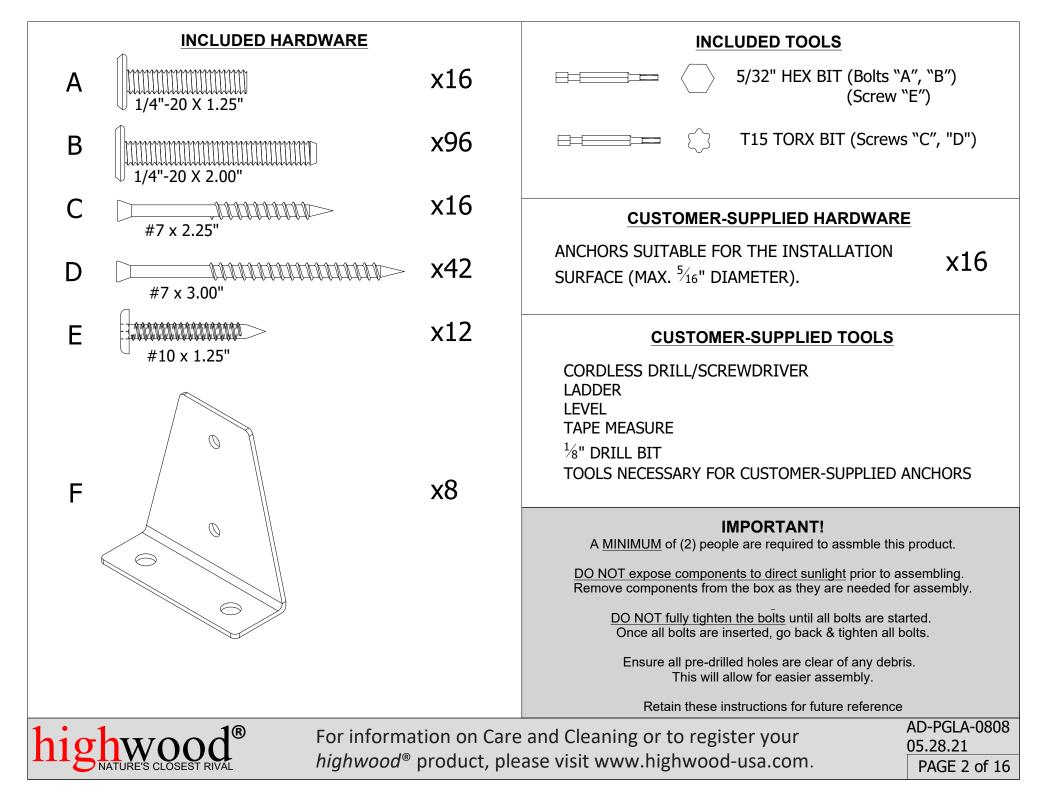

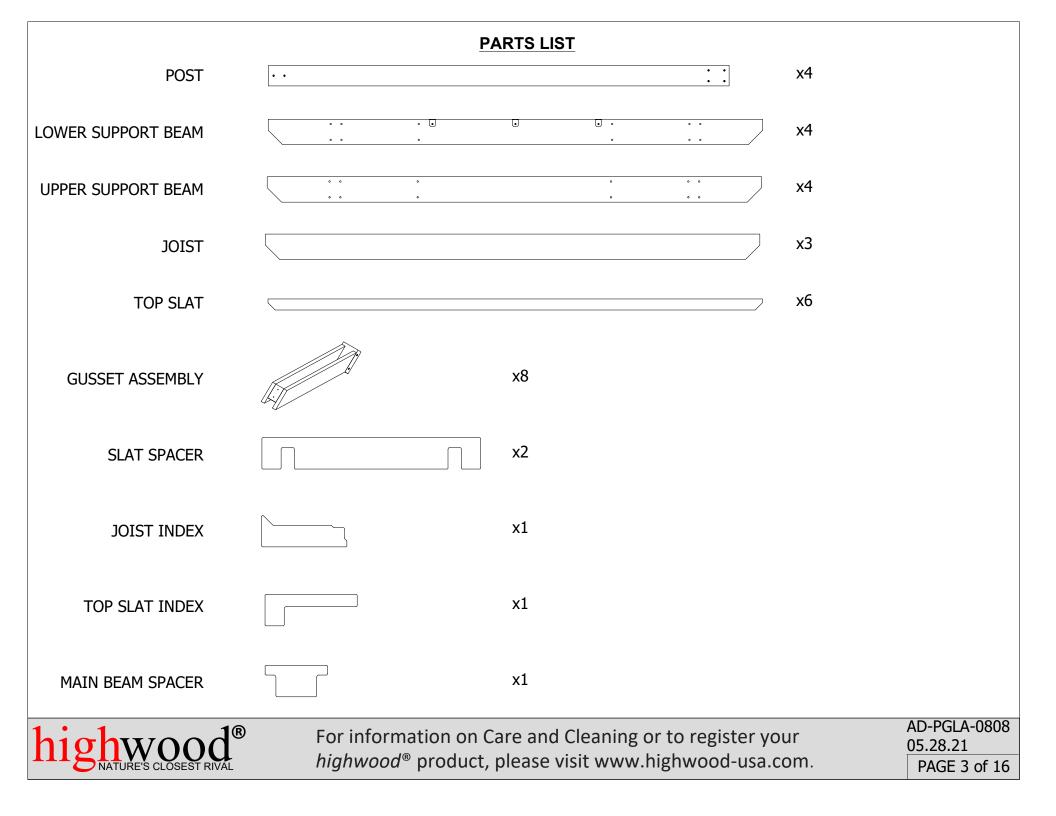


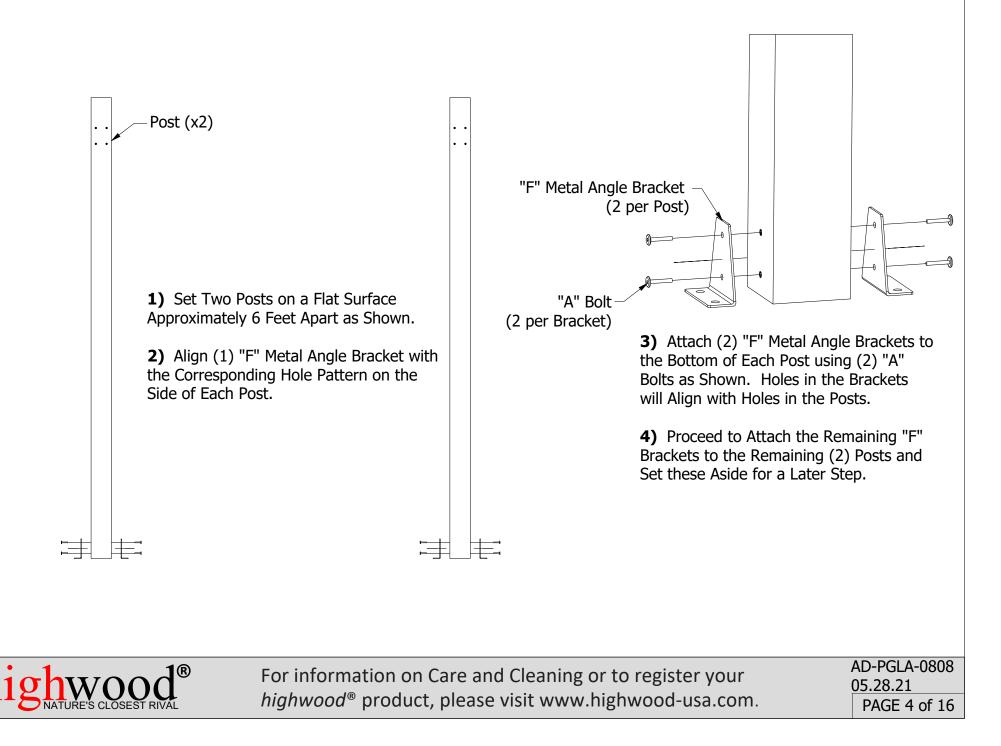


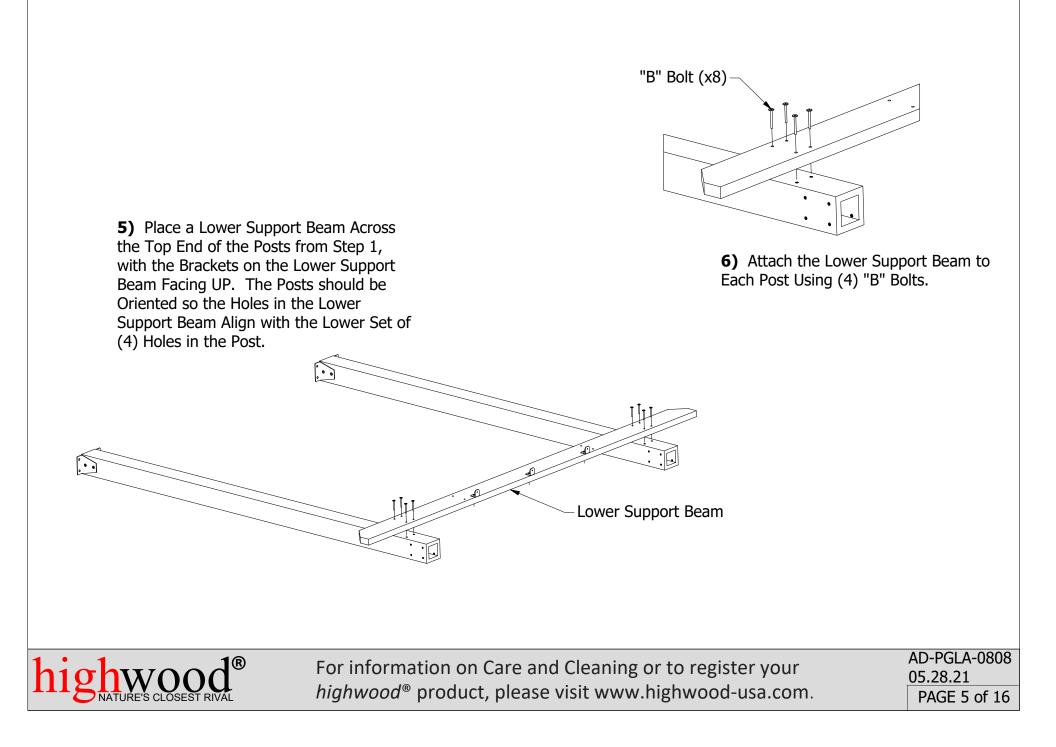


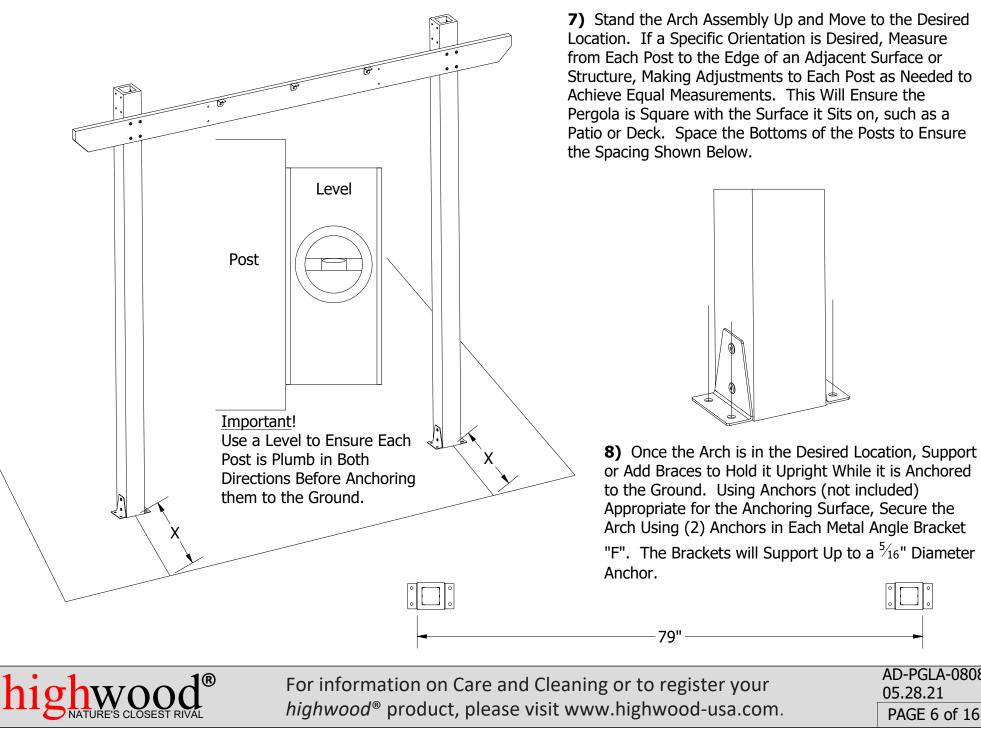



AD-PGLA-0808 05.28.21 PAGE 6 of 16

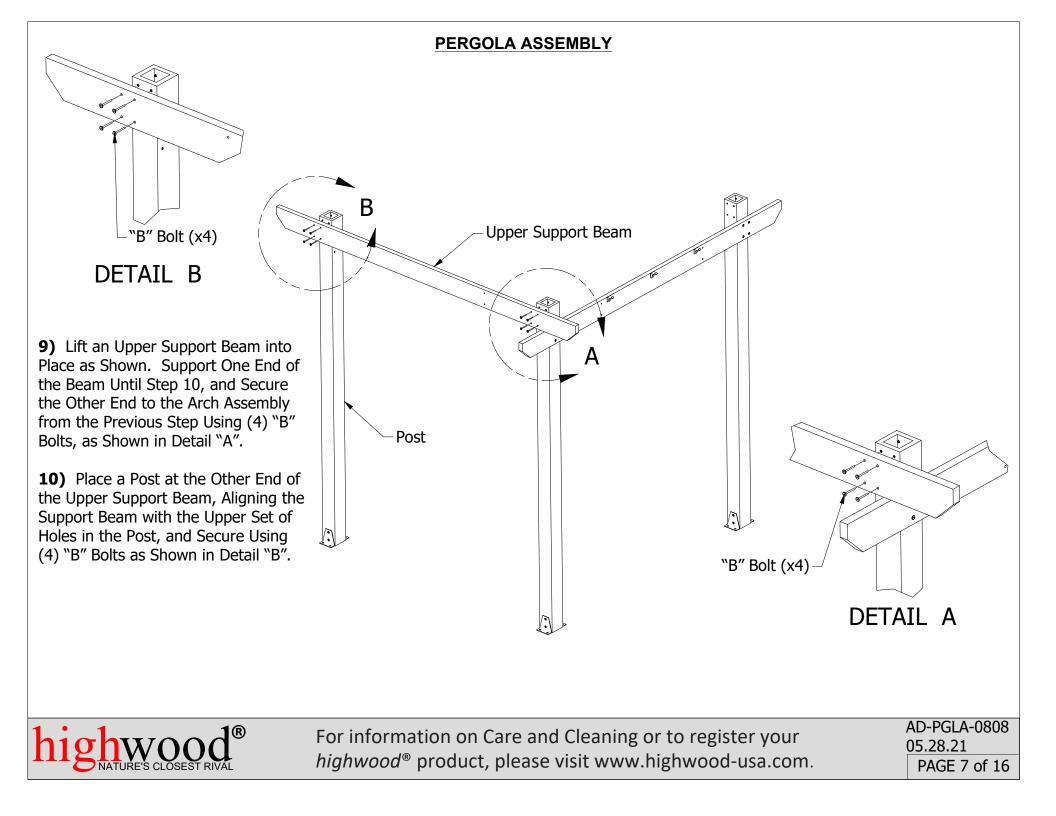

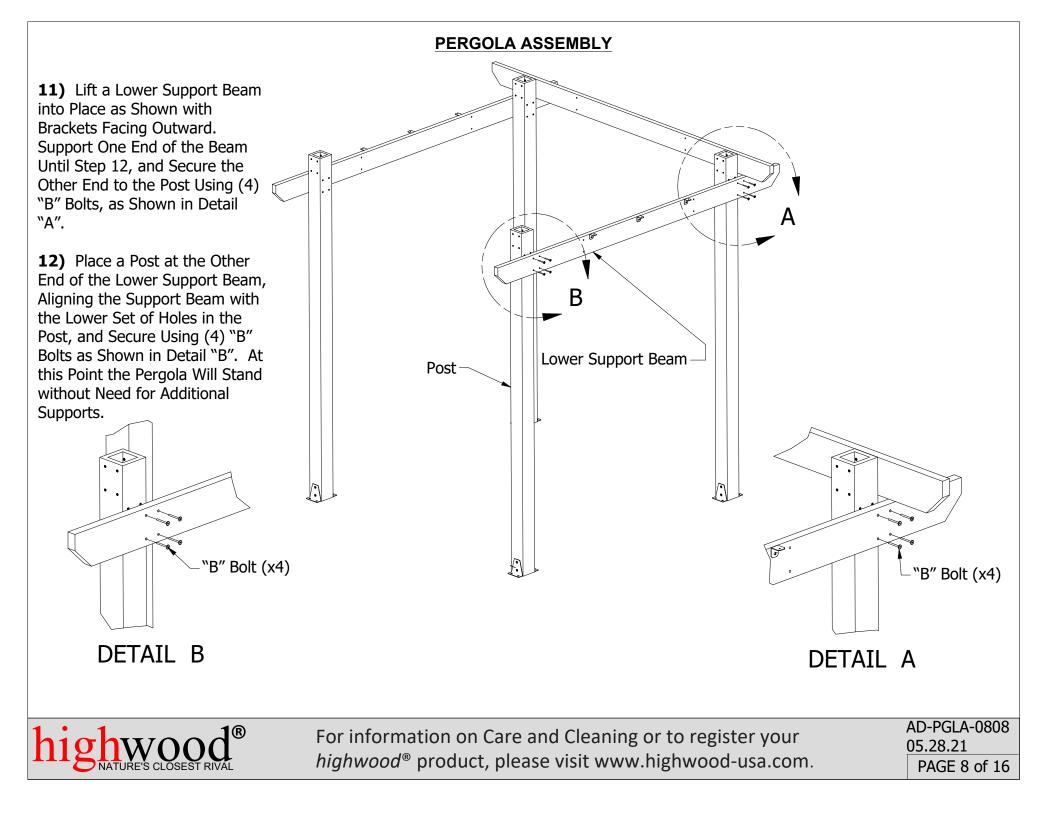

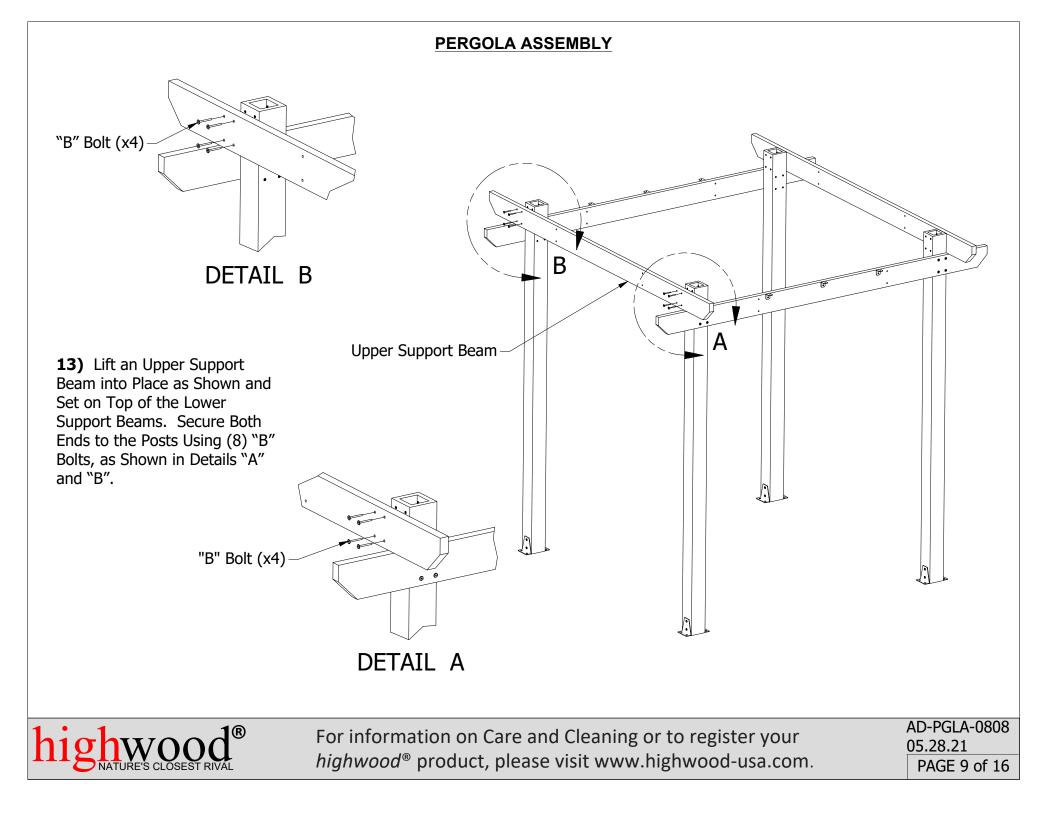

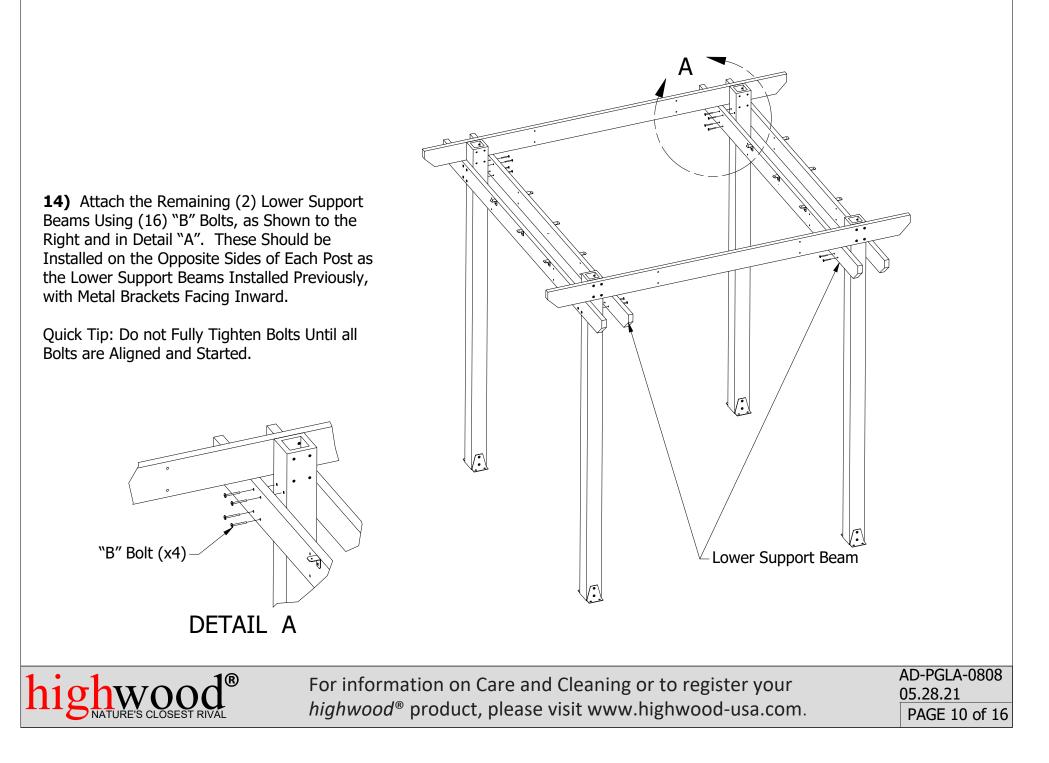


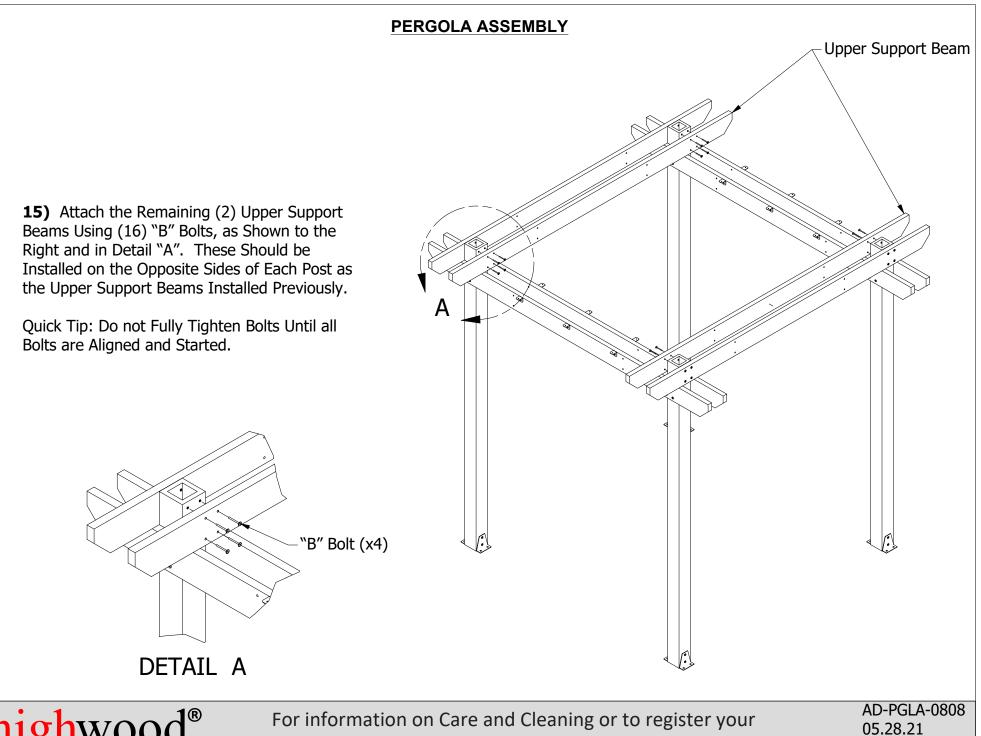



highwood[®] product, please visit www.highwood-usa.com.


PAGE 11 of 16

"B" Bolt (x4) 16) Place a Gusset Assembly DETAIL A Between the Lower Support Beams in Each of the (4) Locations Shown to the Right. The Threaded Inserts in the Gusset End Block Should Align with the Pre-Drilled Holes in the Lower Support Beams. 17) Secure Each Gusset Assembly to the Lower Support Beams Using (4) "B" Bolts, as Shown in Detail "A". Gusset Assembly 18) Secure Each Gusset Assembly to (x4) the Adjacent Post using (2) "C" Screws as Shown in Detail "B". "C" Screw (x2) DETAIL B AD-PGLA-0808 For information on Care and Cleaning or to register your 05.28.21 *highwood*[®] product, please visit www.highwood-usa.com. PAGE 12 of 16

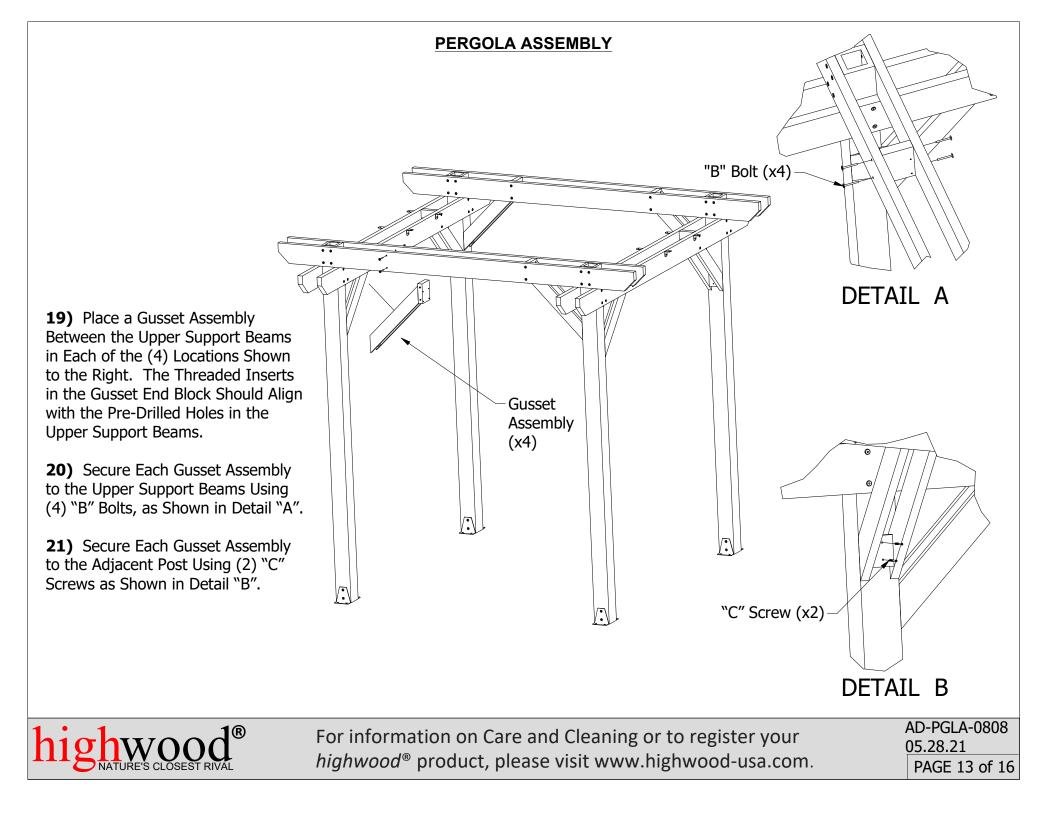

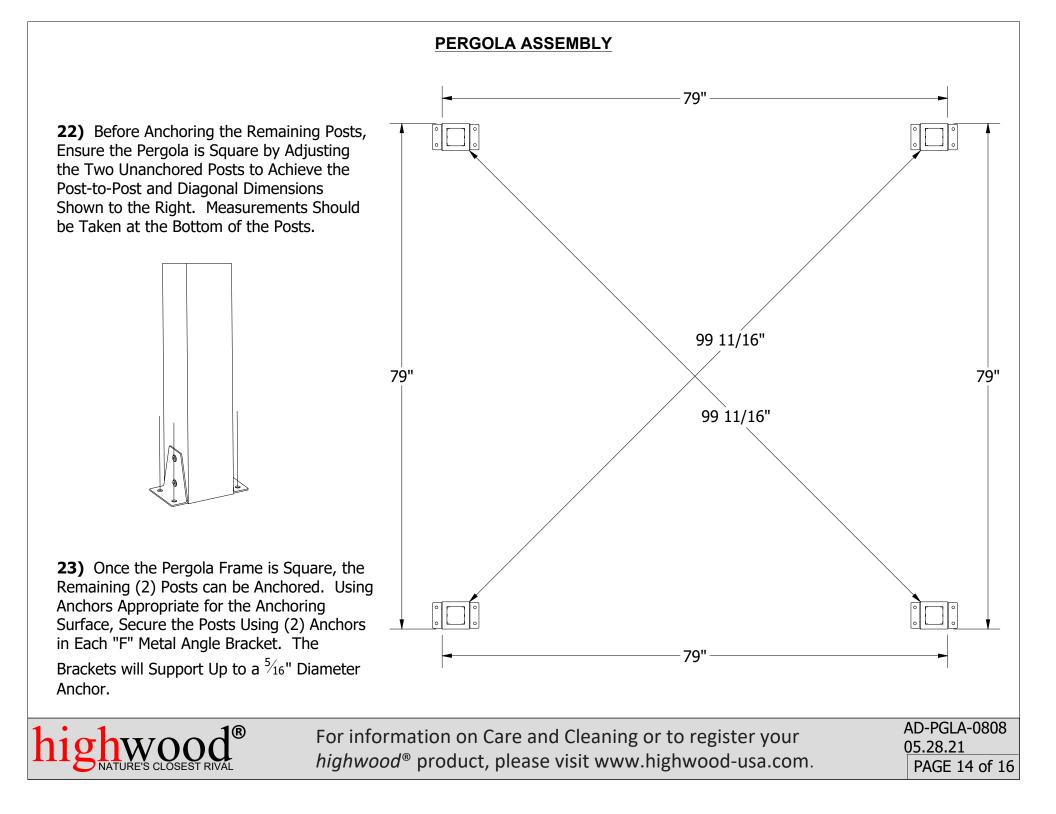

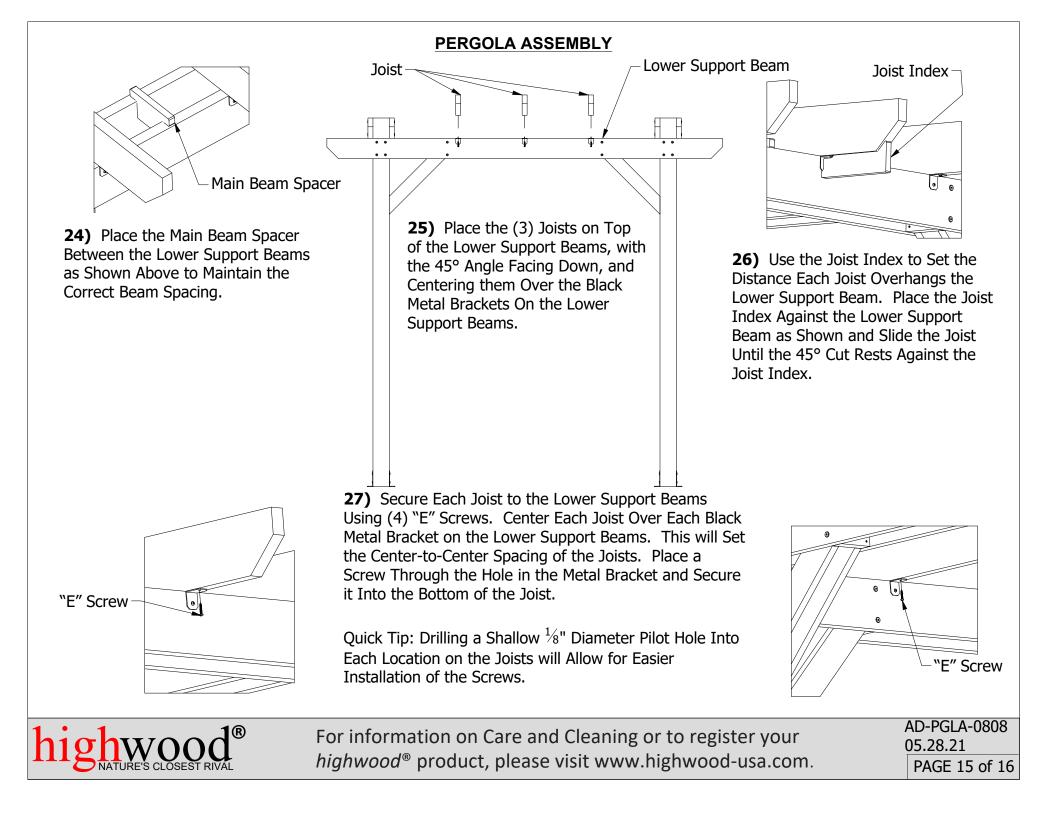

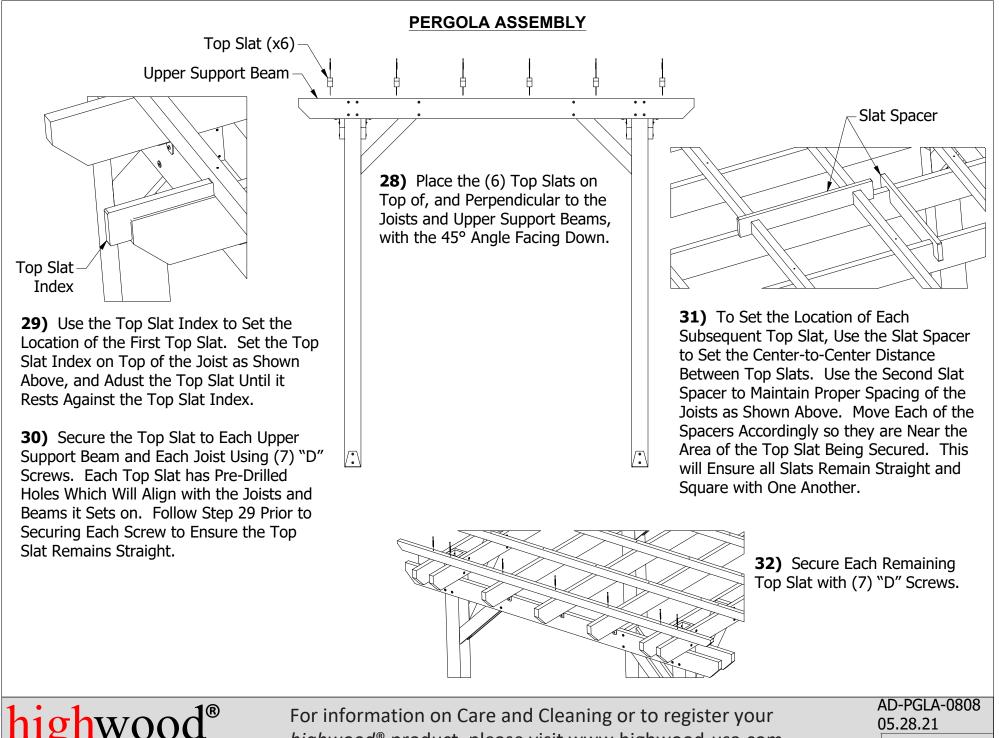

highwood[®] product, please visit www.highwood-usa.com.

PAGE 16 of 16