


# ADRIRONDACK CHAIR

1. FASTEN ALL THESE PARTS WITH 2" BOLTS

2. FASTEN WITH 3" BOLTS

3. FASTEN WITH 2-2" SCREWS

PARTS:  
\*10-2" BOLTS  
\*2-3" BOLTS  
\*12 NUTS  
\*4-2" SCREWS

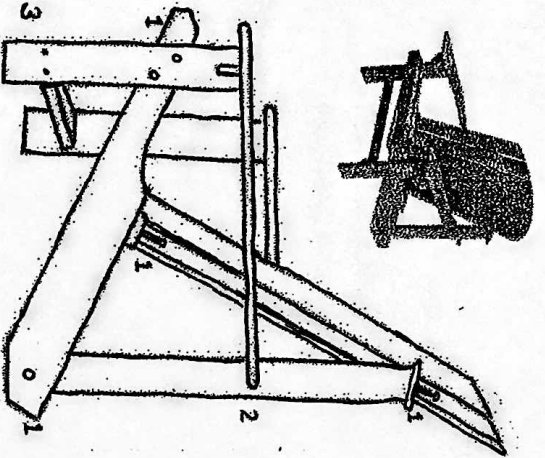


# ADRIRONDACK CHAIR

1. FASTEN ALL THESE PARTS WITH 2" BOLTS

2. FASTEN WITH 3" BOLTS

3. FASTEN WITH 2-2" SCREWS

PARTS:  
\*10-2" BOLTS  
\*2-3" BOLTS  
\*12 NUTS  
\*4-2" SCREWS

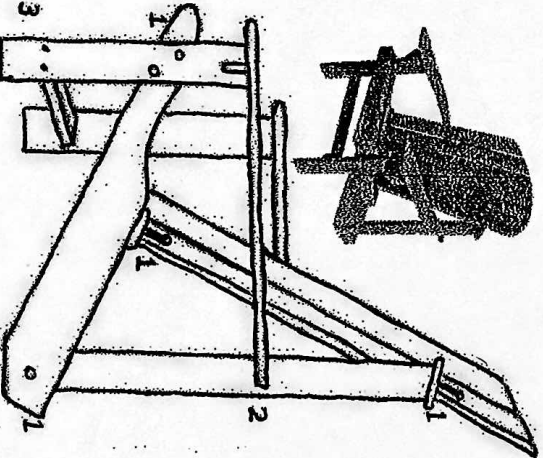


# ADRIRONDACK CHAIR

1. FASTEN ALL THESE PARTS WITH 2" BOLTS

2. FASTEN WITH 3" BOLTS

3. FASTEN WITH 2-2" SCREWS

PARTS:  
\*10-2" BOLTS  
\*2-3" BOLTS  
\*12 NUTS  
\*4-2" SCREWS

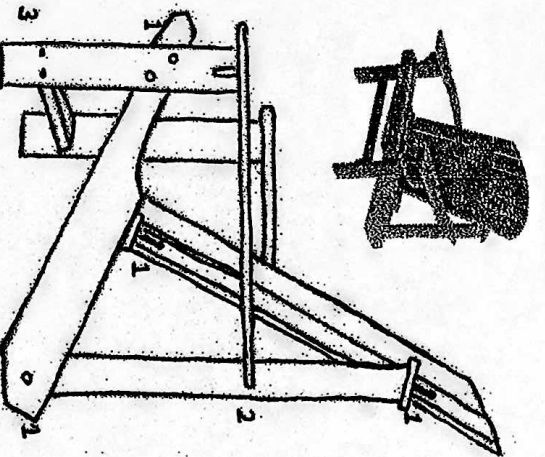

# ADRIRONDACK CHAIR

1. FASTEN ALL THESE PARTS WITH 2" BOLTS

2. FASTEN WITH 3" BOLTS

3. FASTEN WITH 2-2" SCREWS

PARTS:  
\*10-2" BOLTS  
\*2-3" BOLTS  
\*12 NUTS  
\*4-2" SCREWS

