



ADIRONDACK FOOTREST

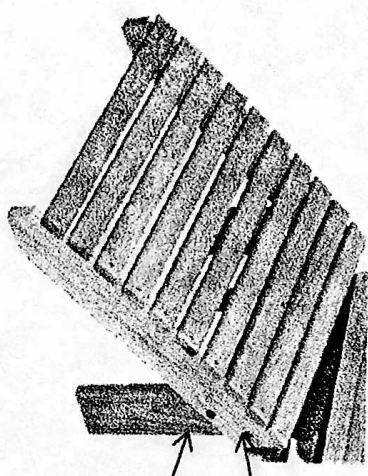


FASTEN WITH 4 (5/16" X 2").
BOLTS AND 4 FLANGE NUTS.
PLACE LEGS ON INSIDE.

ADIRONDACK FOOTREST

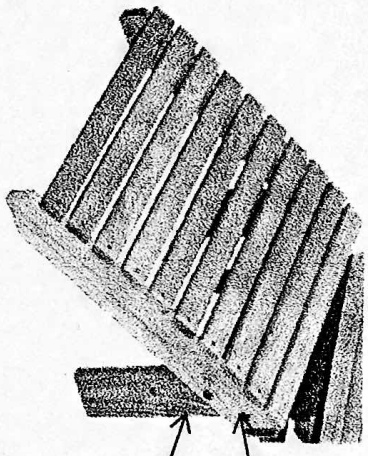


FASTEN WITH 4 (5/16" X 2").
BOLTS AND 4 FLANGE NUTS.
PLACE LEGS ON INSIDE.

ADIRONDACK FOOTREST

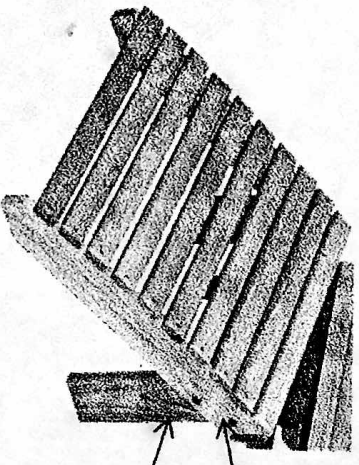

FASTEN WITH 4 (5/16" X 2").
BOLTS AND 4 FLANGE NUTS.
PLACE LEGS ON INSIDE.

ADIRONDACK FOOTREST

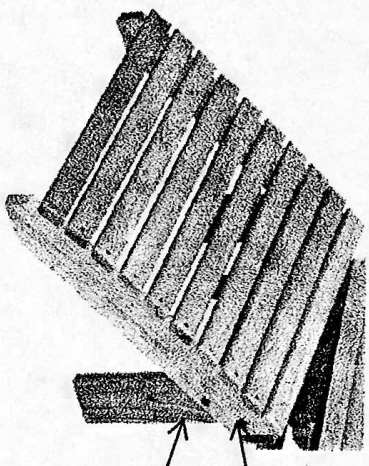

FASTEN WITH 4 (5/16" X 2").
BOLTS AND 4 FLANGE NUTS.
PLACE LEGS ON INSIDE.