



Please check contents **before assembly**. If any items are missing or damaged, **do not take the unit back to the store**. Call 1-800-427-5136 for customer service and we will save you time by correcting any problems directly for you.

COMPONANTS

Preassembled Top 2 Cross members 4 Legs

NOTE: Cracks or Checks in logs are part of the natural beauty of cedar logs and should not be considered defects.

Hardware & Tools Required


8 - 2-1/2" Screws #2 Phillips Screwdriver or Rubber Mallet or Block of Wood & Hammer

NOTE: Read all instructions before starting.


Helpful Tips:

- Using a battery operated or electric drill will make assembly faster and easier.
- Use a good quality penetrating oil or wood deck sealer with a UV inhibitor and an anti-fungal.


STEP 1 To assemble leg units use a rubber mallet (or a block of wood between a hammer and the unit), drive cross member onto doweled ends of legs with holes facing the same direction. Drive dowels in as far as possible, stopping where taper begins. Figure 1.

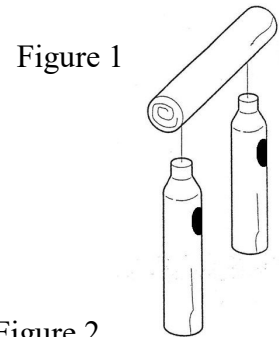

STEP 2 Using the rubber mallet as before attach leg units onto top assembly as shown in figure 2.

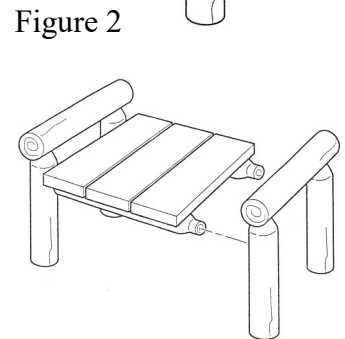

STEP 3 Secure all dowel joints in place with screws perpendicular to the doweled end as shown in the circle drawing of figure 3.

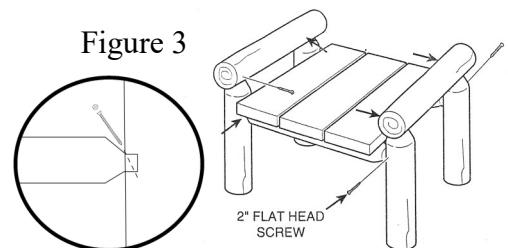

Your Ottoman is now assembled and ready for finish or immediate use.

Lakeland Mills recommends:
WeatherSeal Premium Oil-Based Exterior Wood Stain & Sealant

www.ContinentalProd.com

Look for videos on:

<https://www.youtube.com/watch?v=JhiXMjtdEq4>

Check all joints for tightness before and during each usage season.

