




ASSEMBLY INTRUCTIONS

- CMT1961

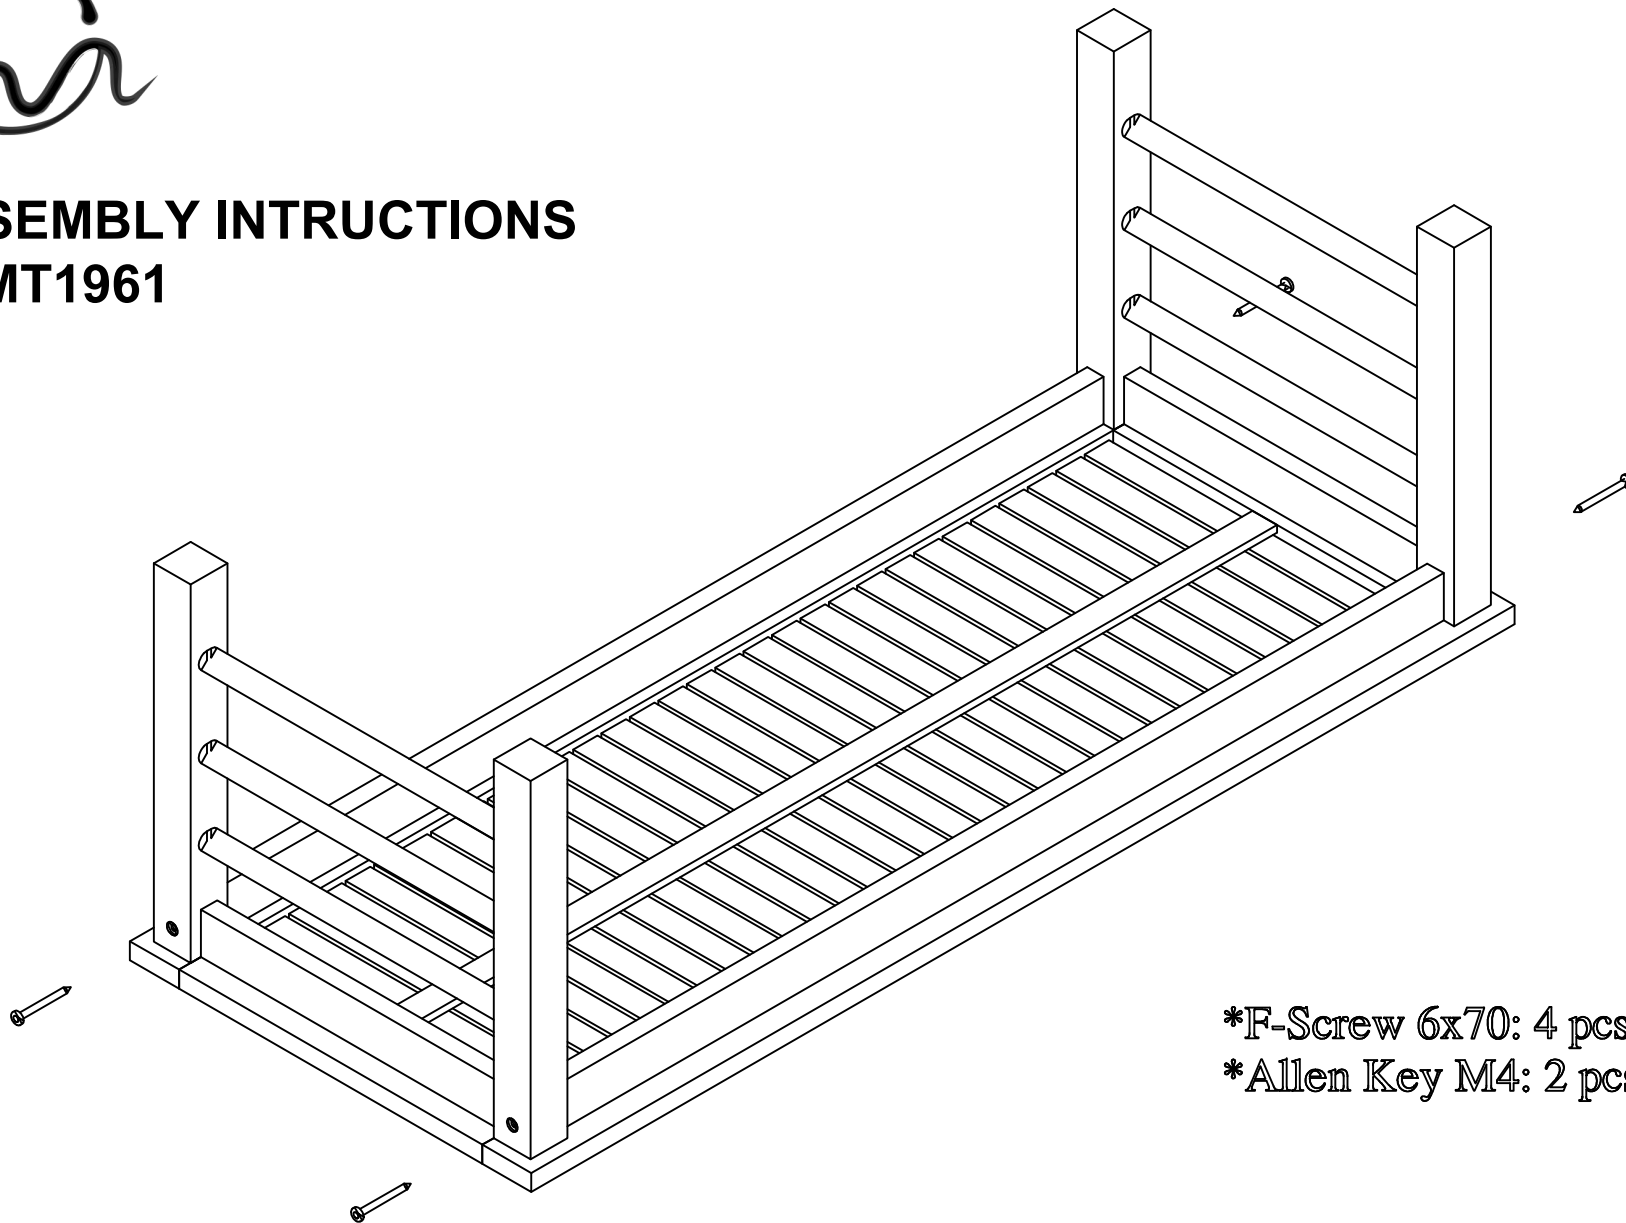

*F-Screw 6x70: 4 pcs
*Allen Key M4: 2 pcs