

Contoured Table Assembly Instructions

Tools Required for Assembly

7/16" Socket or Adjustable Wrench
2# Squarehead Bit (included)
Hammer for tapping bolts and screws.

Hardware List

8- 2 1/2" Hex Bolts
8- Hex Nuts
24- 1/4 x 1" Fender Washers
8- 1/4 x 2 1/2" Lags

Parts List

1- Table Top
4- Table Legs

Hex Bolts



Screw




Fender Washer



Nut



Pre-drilled Hole

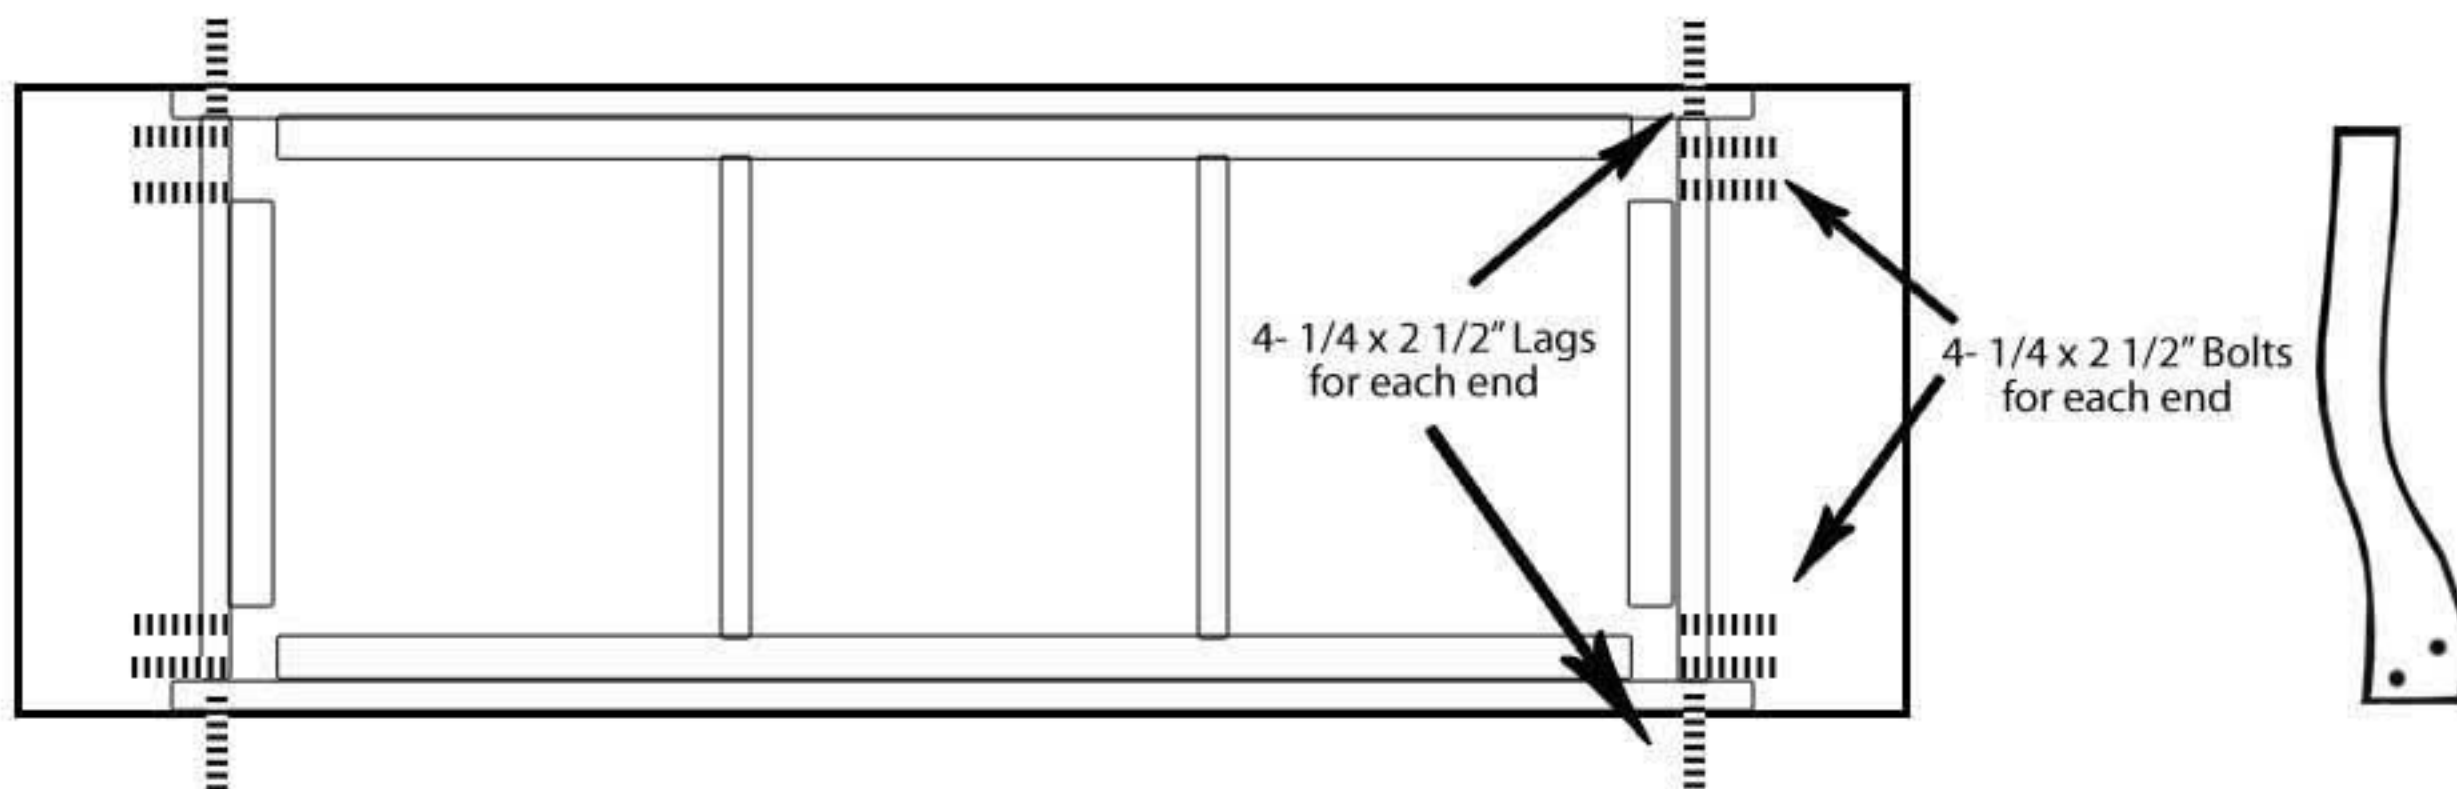

Step 1:

Lay the table top upside down on a clean flat surface. Place each leg on the outer side into the notched out cross member using the 2 1/2" bolt.

Step 2:

Next put the 2 1/2" Lags through the side rail piece into the leg.

Step 3:

Repeat with each leg.