
HARDWARE

ADIRONDACK COLLECTION CLASSIC WESTPORT CHAIR ASSEMBLY INSTRUCTIONS




Do not fully tighten the bolts until all bolts are started. Once all bolts are inserted, then go back and tighten all the bolts.



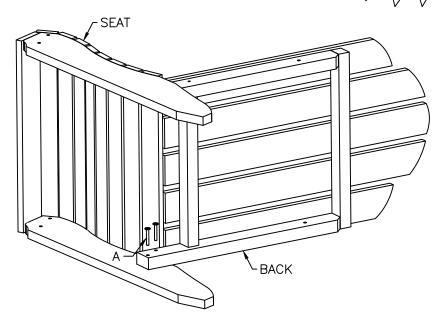

- 1) Attach Back to Seat with two A bolts
- 2) Repeat on other side

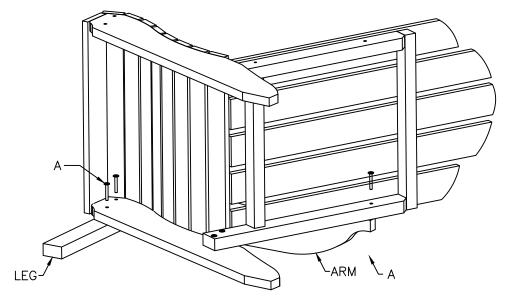

- 3) Unfold the Leg from the Arm
- 4) Attach the Leg to the Seat with two A bolts
- 5) Attach the Arm to the Back with one A bolt
- 6) Repeat with the other arm

CLAS1 11.20.15



For information on Care and Cleaning your *highwood®* product visit www.highwood-usa.com/care.html

Visit our Website and Facebook page to see more *highwood®* products!

www.highwood-usa.com

www.facebook.com/highwoodUSA