

Treated Pine Traditional Garden Bench w/ Back Assembly Instructions

Read through instructions entirely before beginning assembly.



Parts



Leg Brace (2)



2x2 under bench back brace (2)
(with six 2" screws attached)



Leg Assembly (2)

Tools Needed for Assembly

Hammer (for light tapping)


7/16" Socket

Screwdriver with interchangeable bits or
drill. (you will use the supplied #2 square bit)

Hardware



(4)- 2 x 1/4" Lag Screws

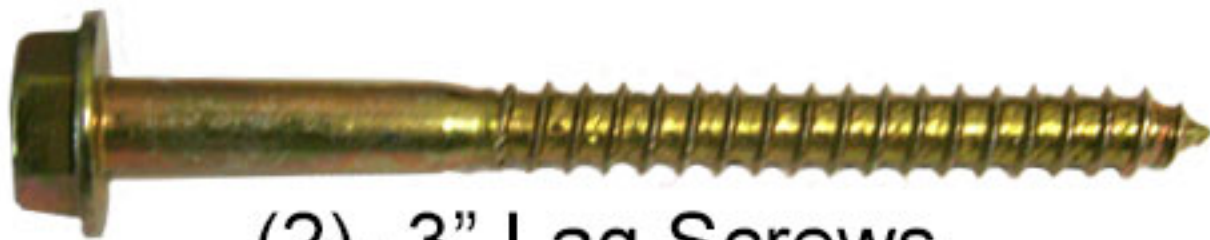

(2)- 3" Lag Screws



(4)- 3 1/4 x 1/4" Bolts




(4)- 7/16" Flange Nuts



(12)- 2 1/4" Wood Screws. (#2 square drive bit is included)



Bench Seat (1)

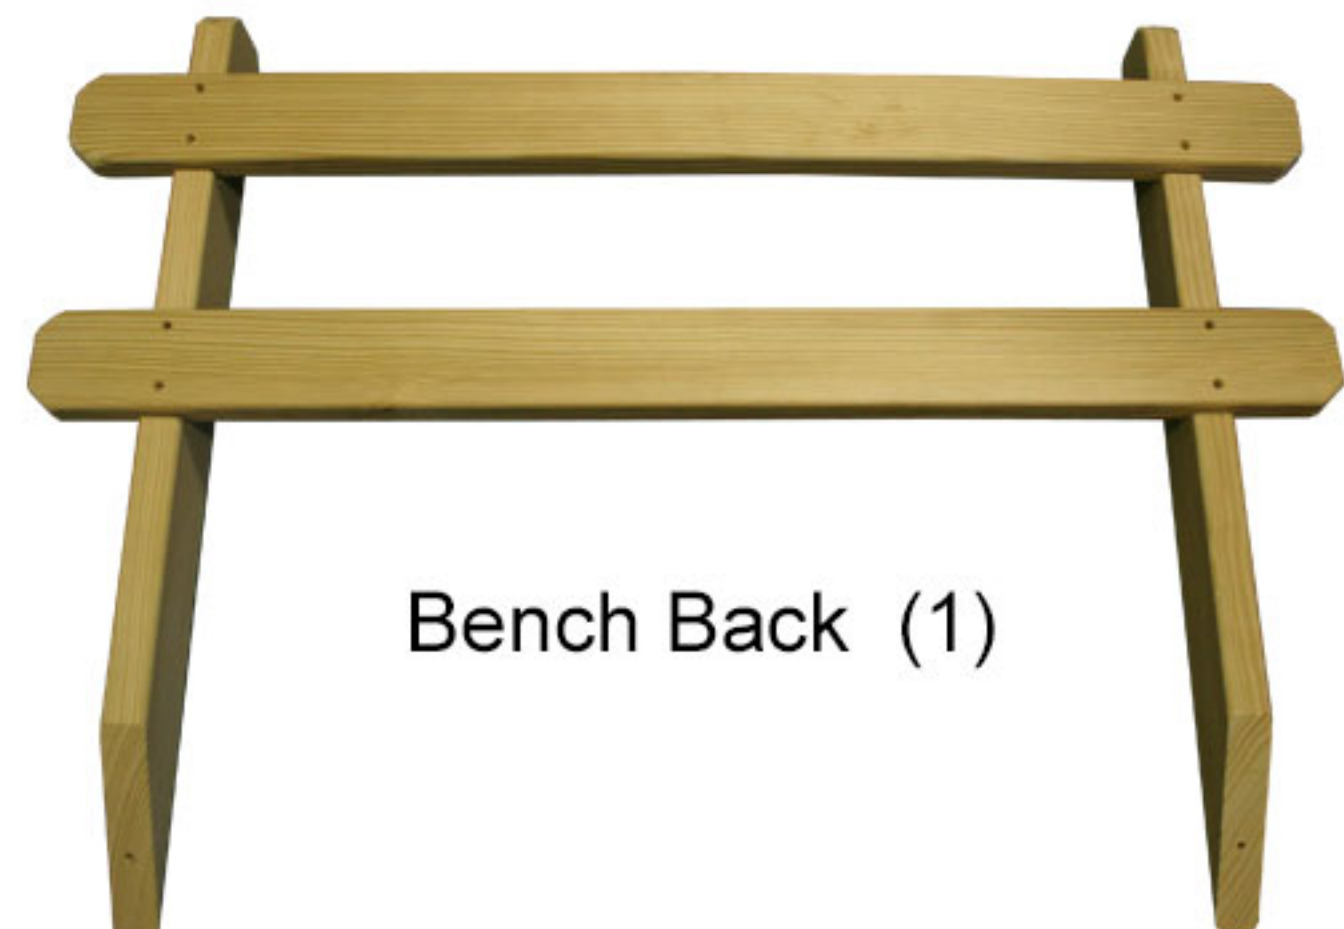

Bench Back (1)

Treated Pine Traditional Garden Bench w/ Back Assembly Instructions


Step 1. Lay out and identify all parts.

Step 2. Lay the bench seat upside-down on a clean flat surface. (We recommend using the box the product was shipped in.) Place the leg assembly, with the assembly brace facing out, against the inside of the support board on the bench seat. Use a hammer to tap the 3 1/4" bolt (from the inside) through the leg assembly and support board. Using a 7/16" socket, attach the leg assembly using 7/16" flange nuts



Step 3. Repeat Step 2 to attach the other leg assembly.

Step 4. Using four 2 1/4" screws attach the Under Bench Back Brace on the inside of the leg assembly keeping it flush with the front leg (see image) *Make sure the part of the Under Bench Back Brace that sticks out from the bench is on the same side as the predrilled hole in the leg assembly. (see image)

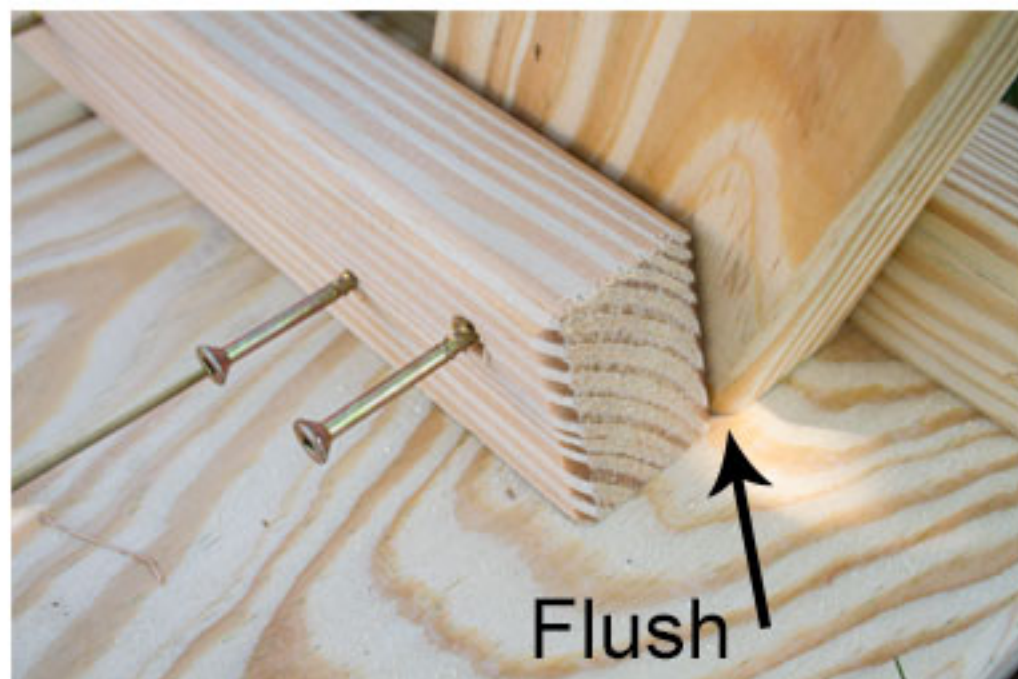

*Predrilled hole in leg assembly and section that sticks out from bench seat



Treated Pine Traditional Garden Bench w/ Back Assembly Instructions

Step 5. Repeat Step 4 to attach the other Under Bench Back Brace.



Step 6. Insert the 3" Lag Screw into the pre drilled hole in the bench back. (See image)



Step 7. Lay the bench on it's side with the pre-drilled holes for the back facing up. Align the pre-drilled holes on the bench back with the holes in the leg assembly. Attach the bench back using a 7/16" socket and a 3" Lag Screw. Repeat on the other end.



Treated Pine Traditional Garden Bench w/ Back Assembly Instructions

Step 8. Using the #2 Square Bit, screw the two 2 1/4" screws in the Under Bench Back Brace into the Bench Back. Repeat on other side.



Step 9. Using a 7/16" socket the 2" Lag Screws (they are pre inserted into the braces) attach the brace to the center of the leg cross piece. (see image) and the center seat board on the underside of the bench seat (see image)

