



#### Required Tools:


- 1/2" Wrench or Socket
- Mallet/Non Marring Hammer  
(Do not use Metal Headed Hammer)

#### Hardware:

- (4) 5/16" x 5" Bolts
- (6) 5/16" x 3 1/2" Bolts
- (10) 5/16" Flange Nuts

#### Parts:

- A = (1) Backrest
- B = (1) Seat
- C = (1) Right Arm/Leg Assembly
- D = (1) Left Arm/Leg Assembly

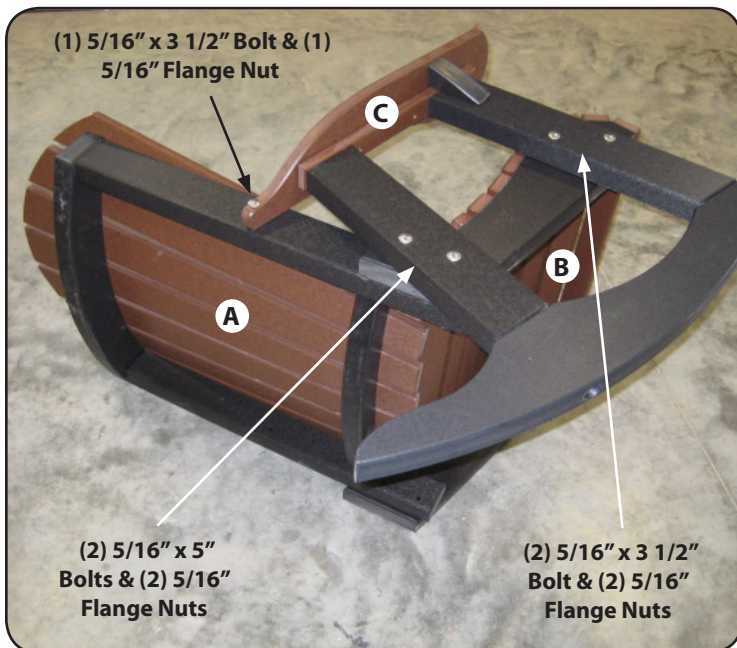

#### Step 1

On a level surface, place the backrest (A) and the seat (B) on its side, butting them up against each other. Lay the right arm/leg assembly (C) onto the backrest and seat and fasten them together. For the front leg use (2) 5/16" x 3 1/2" bolts and (2) 5/16" flange nuts. For the back leg use (2) 5/16" x 5" bolts & (2) 5/16" flange nuts, and for the armrest use (1) 5/16" x 3 1/2" bolt & (1) 5/16" flange nut. DO NOT tighten flange nuts at this time. Repeat with the left arm/leg assembly (D) on the other side.



#### Step 2

Once rocker is together, using a 1/2" wrench or socket, go back and tighten all connecting points. Your rocker is now complete.

*Thank you for purchasing from Wildridge.*