

Required Tools:


- 7/16" Wrench or Socket
- #2 Square Drive bit
- Cordless Drill

Parts:

- A = (1) Table Top
- B = (2) Leg Assemblies
- C = (2) Braces

Hardware:

- (8) 1/4" x 2" Bolts
- (8) 1/4" Flange Nuts
- (8) 2 1/2" Screws

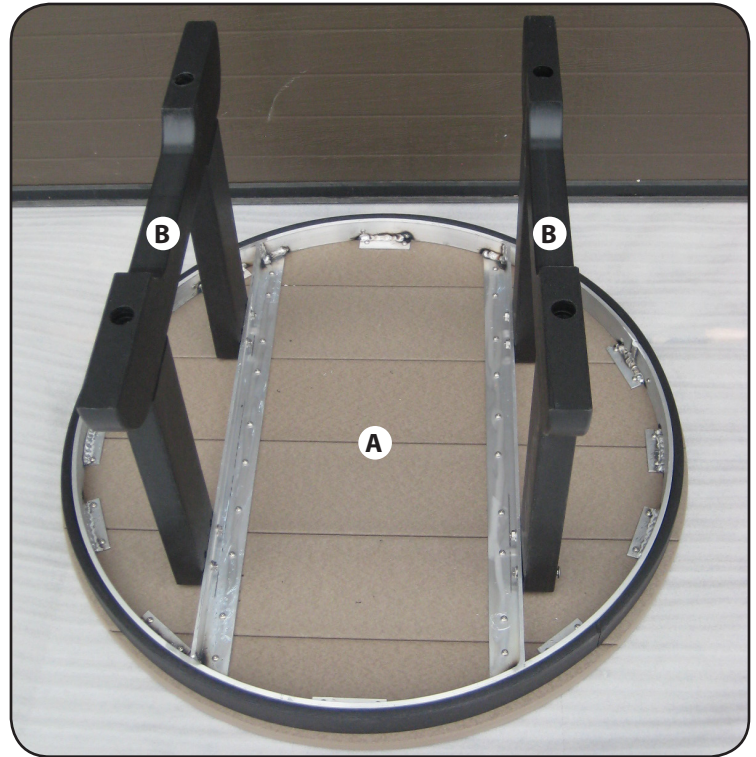

Step 1

Lay table top (A) upside down on a soft surface and place leg assemblies (B) in positions as shown, and attach with (8) 1/4"X2" bolts and (8) 1/4" flange nuts, 4 per assembly.



Step 2

Position the braces (C) between the leg assemblies as shown, and fasten them using (8) 2 1/2" screws, two on each end.



Your table is now complete.

Thank you for purchasing from Wildridge.