



Hardware:


- (8) - 2 1/2" Screws

Tools Required:

- Cordless Drill
- #2 Square Drive Bit

Parts:

A = (1) Chair Frame
B = (1) Chair Base

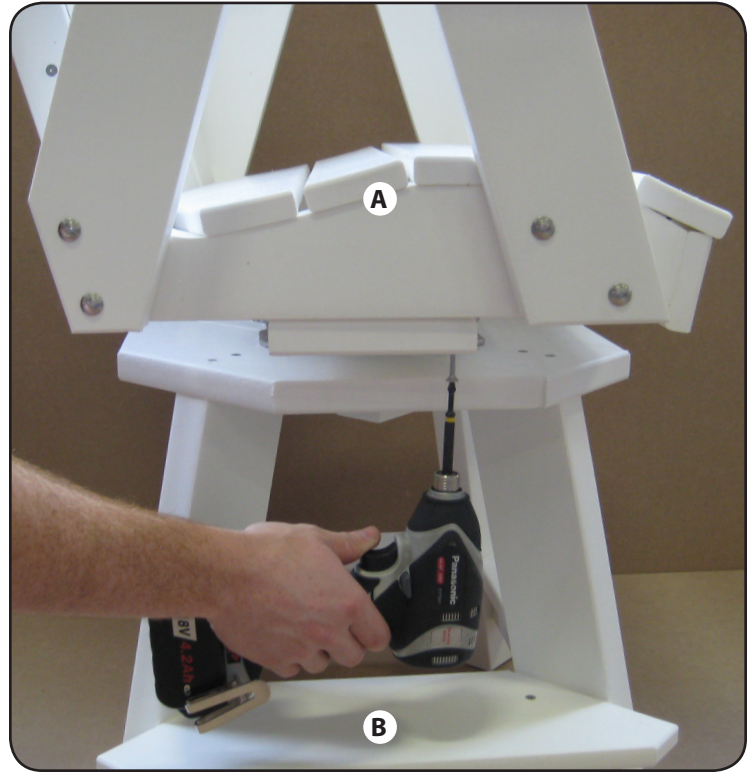

Step 1:

Set the chair frame (A) onto the chair base (B). Align the holes in part (B) with holes in part (A) and fasten with (8) 2 1/2" screws.



Step 2:

Your swivel balcony chair is now complete.

Thank you for purchasing from Wildridge.