

Required Tools:


- Mallet/Non Marring Hammer
(Do not use Metal Headed Hammer)
- 7/16" Socket
- #2 Square Drive bit
- Cordless Drill

Hardware:

- (8) 1/4" x 3 1/2" Carriage Bolts
- (8) 1/4" Flange Nuts
- (2) 3" Screws

Parts:

- A = (1) Seat
- B = (2) Leg Assemblies
- C = (1) Cross Support

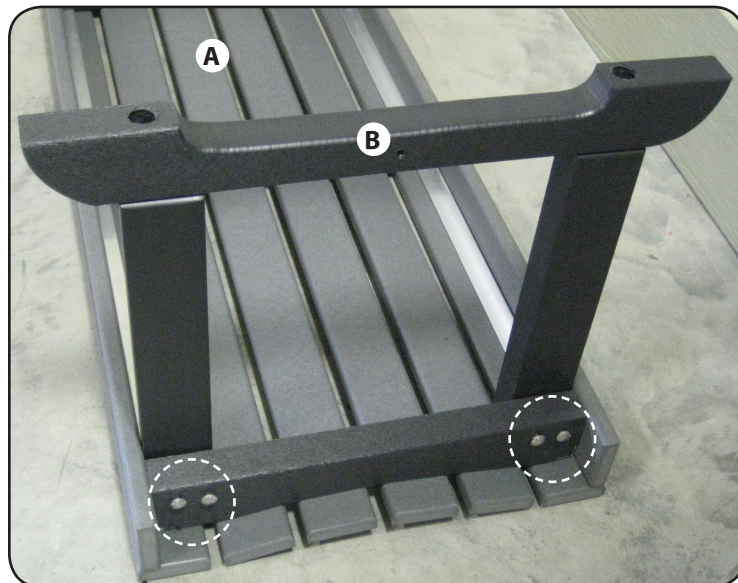

Step 1

Lay seat (A) upside down on soft surface. Place a leg assembly (B) inside and up against the end of the seat frame, tap (4) 1/4" x 3 1/2" carriage bolts through the four holes provided, and add (1) 1/4" flange nut to each of the four bolts. Repeat with the other leg assembly on the other side.



Step 2

Place the cross support (C) between both leg assemblies, as shown, and fasten together with (2) 3" screws, one per side.



Step 3

Your bench is now complete.... enjoy!

Thank you for purchasing from Wildridge.