## **ASSEMBLY INSTRUCTIONS**



330-893-4212 • www.wildridge.com

### CLASSIC MISSION SWING

LCC-205



### **Required Tools:**


- Mallet/Non Marring Hammer (Do not use Metal Headed Hammer)
- Cordless Drill
- 1/2" and 7/16" Wrench or
- #2 Square Head Screw Driver

#### Parts:


- A = (1) Backrest
- B = (1) Seat
- C = (1) Connector Block
- D = (1) Left Facing Armrest
- E = (1) Right Facing Armrest

#### Hardware:

- (4) 1/4" x 2" Bolts
- (4) 1/4" Flange Nuts
- (4) 1/4" x 3 1/2" Bolts
- (4) 1/4" Washers
- (4) 1/4" Locknuts
- (4) 1 1/4" Screws
- (2) 5/16" x 5" Eye Bolts - (2) 5/16" x 5 3/4" Eyebolts
- (4) 5/16" Flange Nuts
- (4) 5/16" Washers
- (4) 5/16" Locknuts
- (2) Swing Chains
- (4) Connecting Links

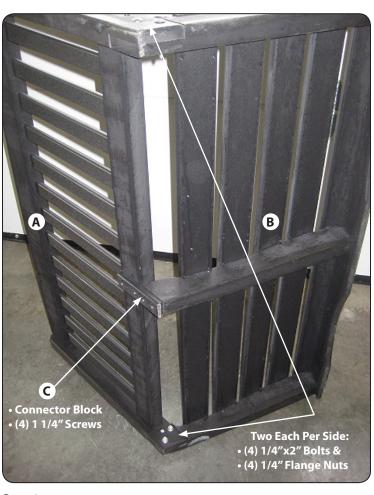

Position the backrest (A) and the seat (B) as shown. Fasten the outside supports with (4) 1/4" x 2" bolts and (4) 1/4" flange nuts, 2 on each end. Position the connector block (C) in place and attach it to the back of the center seat support and seat rail with (4) 1 1/4" screws as shown.

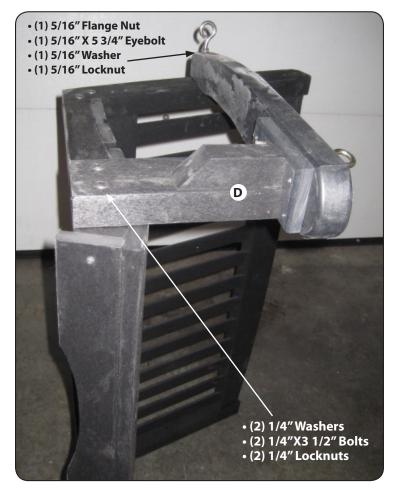

Place the left facing armrest (D) onto the seat/backrest assembly as shown. To fasten the armrest to the seat, thread a 1/4" washer onto each of (2) 1/4"x3 1/2" bolts, tap the bolts through the holes and add a 1/4" locknut to both bolts. To fasten the armrest to the backrest, thread (1) 5/16" flange nut onto (1) 5/16" x 5 3/4" eyebolt as far as the thread allows, with the flange facing away from eye and feed it through the hole on the back of the armrest and backrest, and add (1) 5/16" washer and (1) 5/16" locknut. Repeat with the right facing armrest (E) on the other end of the swing.

# **ASSEMBLY INSTRUCTIONS**




330-893-4212 • www.wildridge.com

**CLASSIC MISSION SWING** 

**LCC-205** 



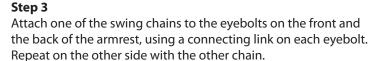



Your swing is now complete.

Thank you for purchasing from Wildridge.