

Required Tools:

- Cordless Drill
- #2 Square Drive Bit
- Tape Measure

Hardware:

- (8) 3" Screws
- (16) 2" Screws


Parts:

- A = (1) Table Top
- B = (1) Leg Support
- C = (4) Legs




Step 1

Lay table top (A) upside down on a soft surface and fit the 4 legs (C) into the 4 pockets provided in the corners of the table top. Fasten the legs from the inside, through the corner brace and into the leg, using one 3" screw per leg.

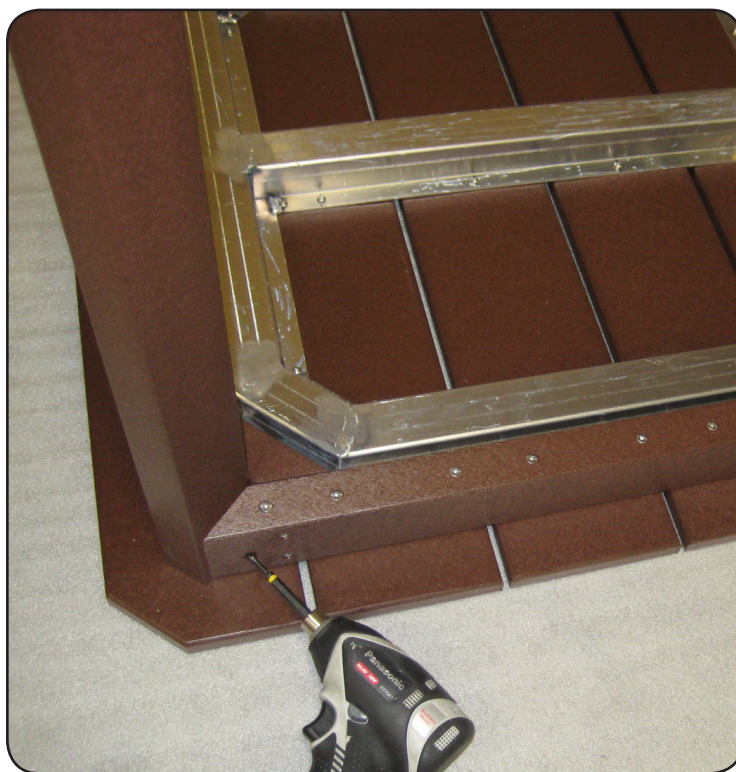

Step 2

Add (2) 2" screws on both sides of the corner, going through the frame and into the leg. Repeat on the other three sides.

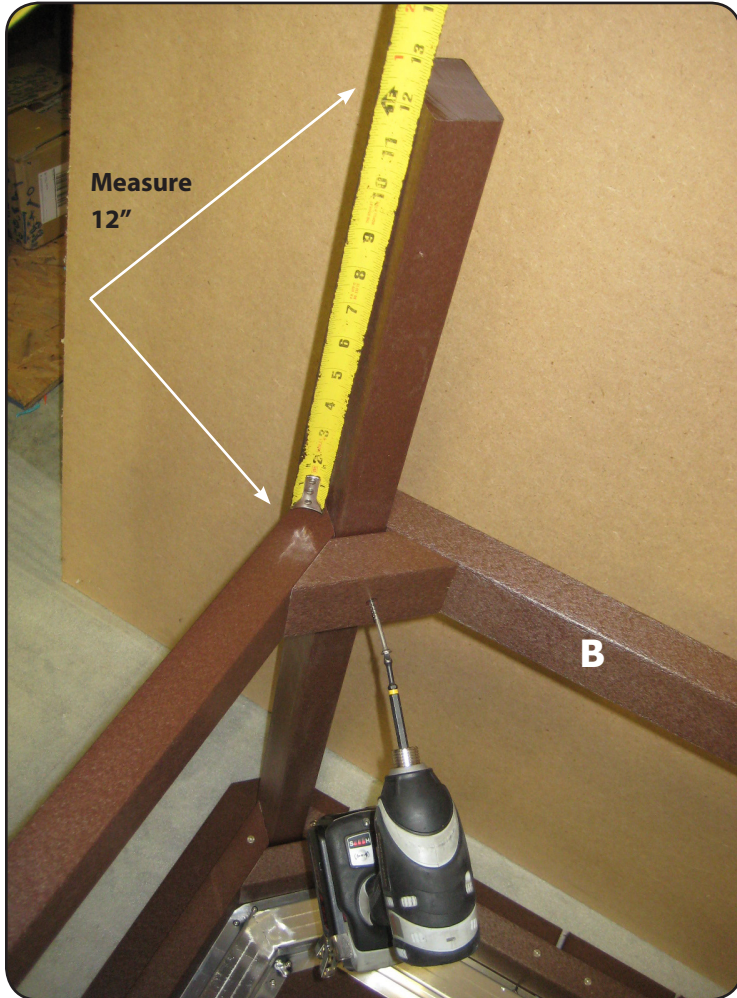

Step 3
Fasten the leg support assembly (B) measuring 12" to end of legs as shown and fasten from inside with (4) 3" screws (1 per corner).



Step 4
Add (2) 2" screws on each corner in same manner as step 2.



Step 5
Your table is complete.

Thank you for purchasing from Wildridge.