

# Assembly Instructions for Poly Octagon Walk-In Table

## Tools Needed:

Power drill or screwdriver  
#2 Square Drive Bit

## Hardware:




88 - 2½" screws  
8 - 1½" screws  
24 - ¾" screws  
4 - 36" aluminum strips  
2 - 33" support strips  
2 - 42" support strips  
2 - small poly blocks

## Parts List:

Table Top—2 pieces  
Table Leg Assemblies—2 pieces  
Bench Tops—4 pieces  
1"x5½"x14½" Bench Leg Supports—8 pieces  
1"x5½"x32" Bench Bottoms—4 pieces

### Step 1

Lay the table tops upside down. Place the aluminum strips along the crosspieces attached to the table tops. Make sure that the tops are aligned correctly then attach the aluminum strips with six ¾" screws in each strip. (See photo 1.) Now attach the small poly blocks directly over the splice in the tops along the outside crosspieces. Attach with 4- 1½" screws in each block. (See photo 2.)

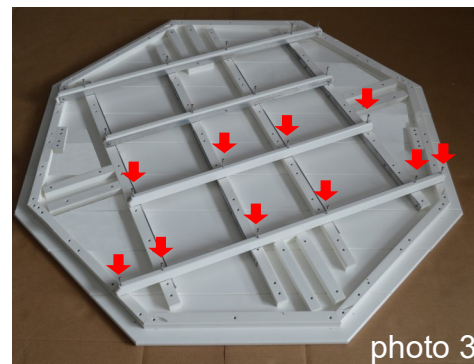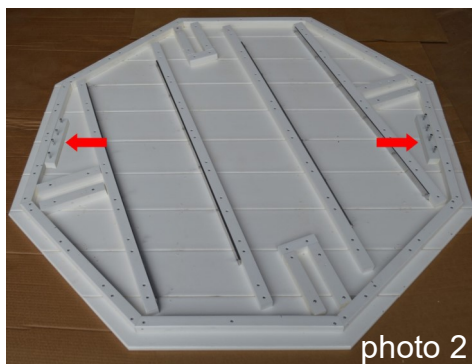
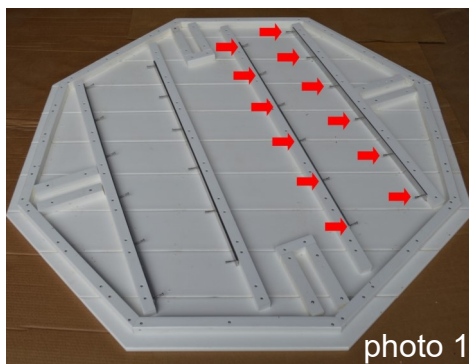


### Step 2

Place the 4 support strips between the lines on the table crosspieces. The 42" strips belong on the outside & the 33" strips on the inside. Attach with 6 — 2½" screws in the 42" strips and 4 screws in the 33" strips. (See photo 3.)

### Step 3

Assemble the 4 bench legs. Take two leg supports and attach to a bench bottom. Put two 2½" screws in the predrilled holes in each end of the bench bottom and screw into one end of the leg supports. (See photo 4.)

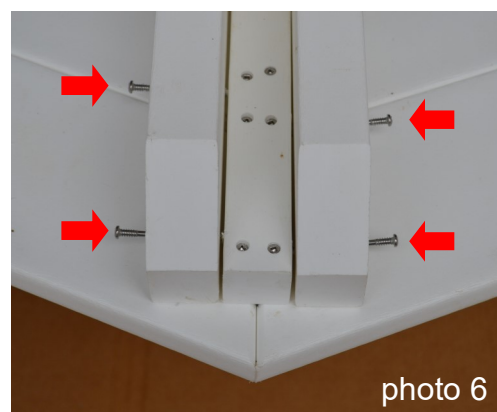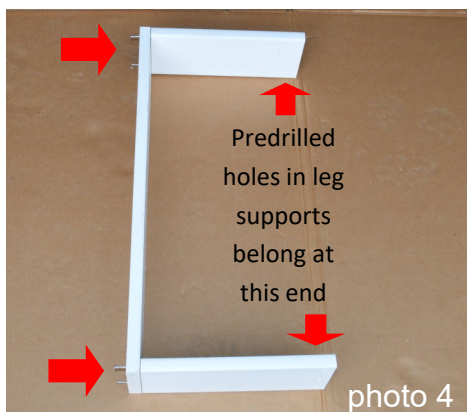



### Step 4

Unfold a table leg assembly & place upside down on a table. (See photo 5.) Take a bench top & place upside down with the center 2x2 between the 2x4 table leg support beams. Attach with two 2½" screws on each side (See photos 5 and 6)

*\*Keep 2x2 even with leg supports\**


### Step 5

Now take the bench leg assemblies from step 2 and place them on the seat. Align with the outside edges of the 2x2's. Attach with two 2½" screws on each end. (See photos 7 & 8.)

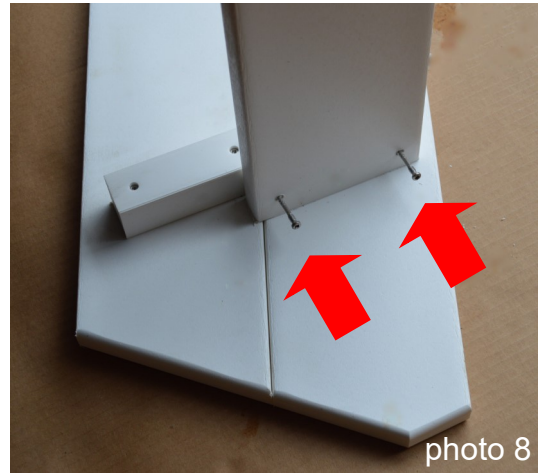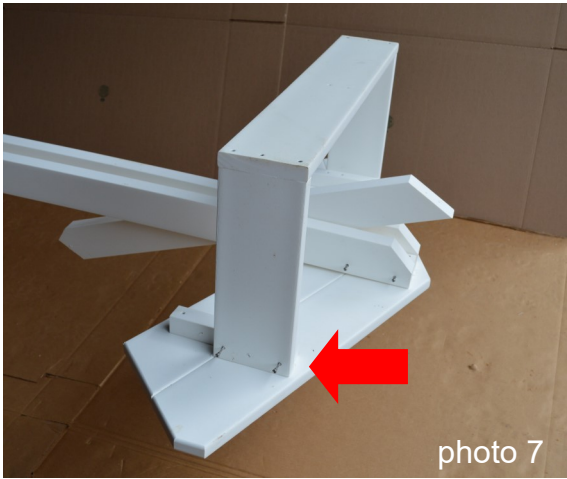

### Step 6

Fold the center leg down and attach to the bench bottom. Put one 2½" screw in the predrilled hole in the center of the bench bottom and screw up into the leg. (See photo 8.) Now put the 2 base assemblies together and screw together with 4 - 2½" screws. (See photos 10 & 11.)

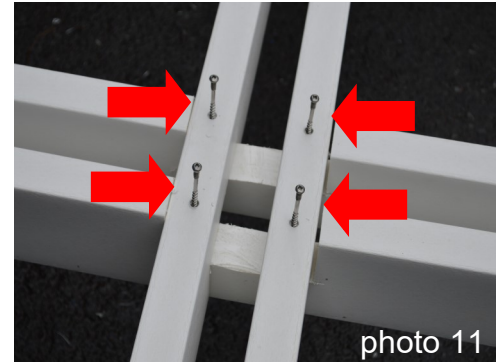

### Step 7

Place the table top on the base and latch down into the 4 corners between the 2x2 braces. (See photo 12.) Put one 2½" screw into each 2x2 and screw into the top of the legs. (See photo 13.)

