


Assembly Instructions for the Treated Pine Patio Chairs

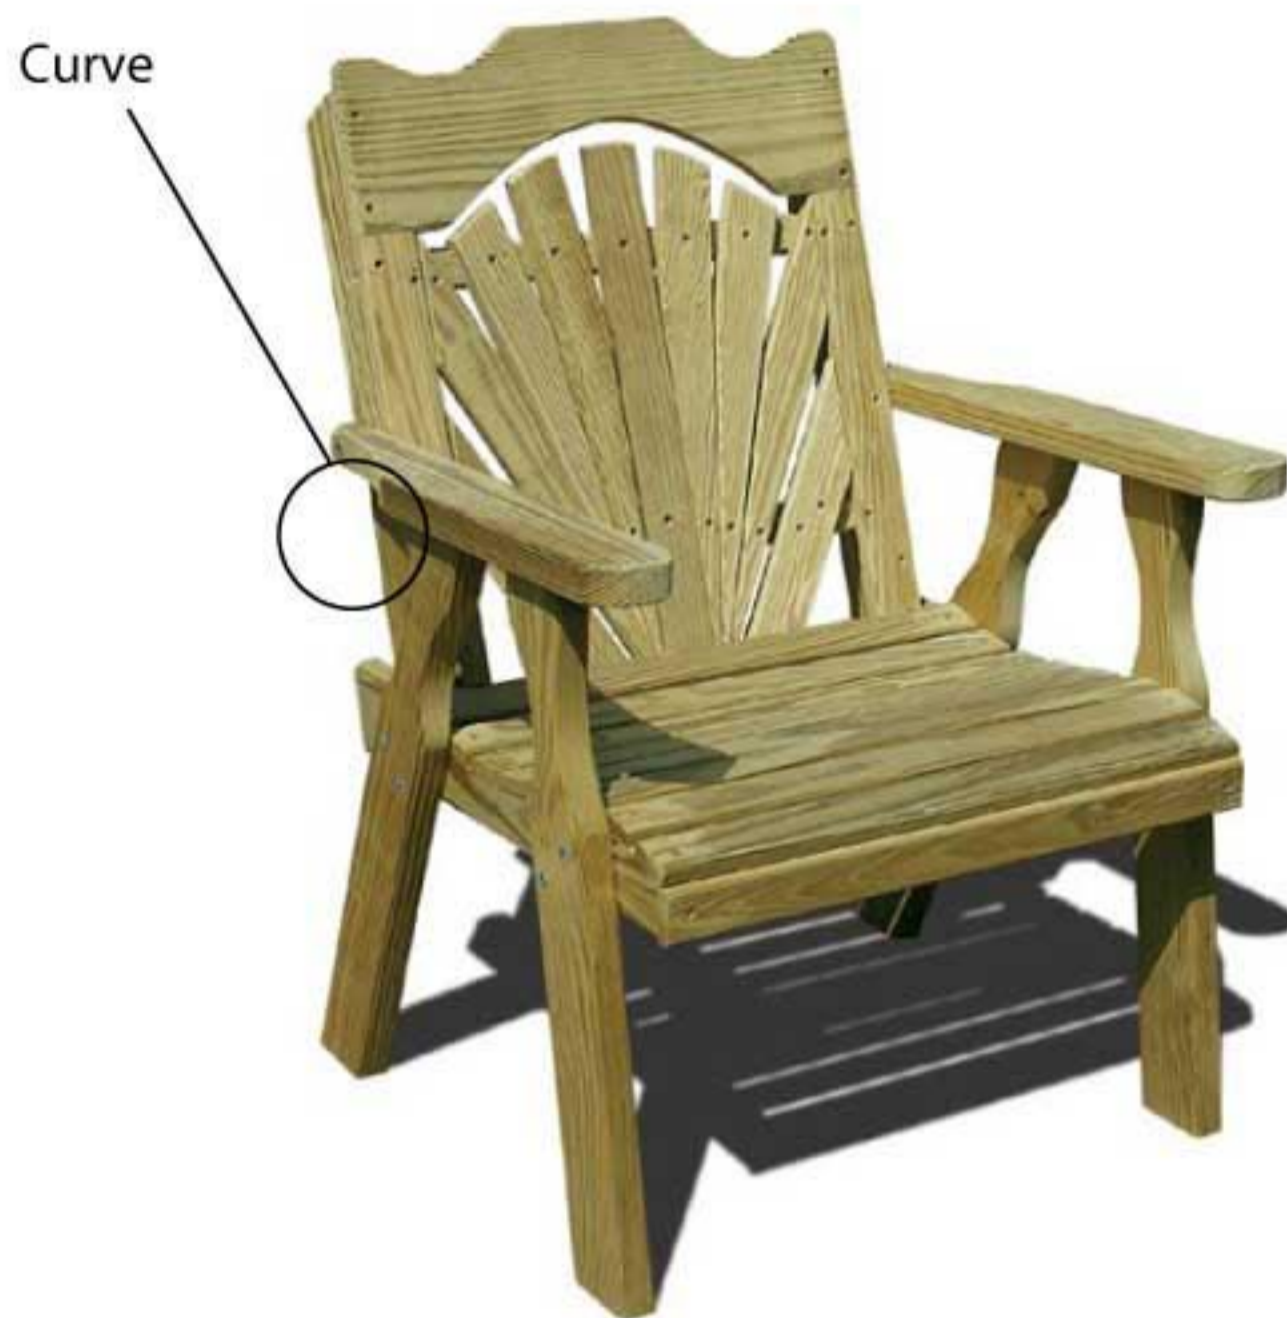

Treated Pine Fanback Chair Shown

Tools Needed For Assembly

Hammer for light taping
7/16" socket set

Step 1

Attach the assembled back and seat together using the 3-1/4" carriage bolts and 1/4" flange nuts.

Step 2

Attach the arm and leg assembly to the back and seat unit sides using the 3-1/4" carriage bolts and 1/4" flange nuts (be sure the curve faces the outside on the arm when assembling-- Please view photo).

Parts List

Seat (1)
Back (1)
Left Leg Assembly (1)
Right Leg Assembly (1)

Hardware

1/4" x 3-1/4" Carriage Bolts (14)
1/4" Flange Nuts (14)

Cracks may occur with these products. This is a normal and natural occurrence in wood, and will not affect the structural integrity of the wood and this product.