


# Red Cedar Traditional Picnic Table Assembly Instructions

Read through instructions entirely before beginning assembly.


## Leg Assembly



## 45° Brace

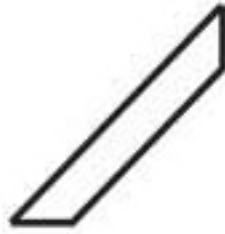

## Table Top

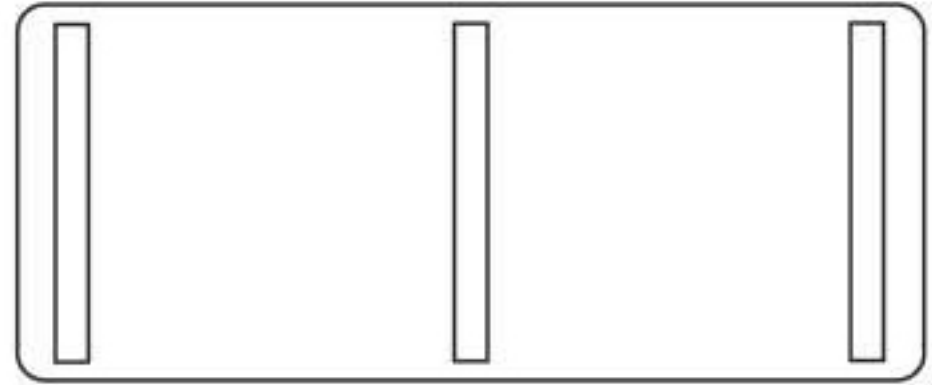

## Tools Required for Assembly

- 7/16" Socket or Adjustable Wrench
- #2 Squarehead Drill Bit (included)
- Hammer for tapping bolts & screws


## Parts List

- 4- 3"x1/4" Hex Bolts
- 4- 2 1/2" x 1/4" Hex Lag Screws
- 4- 1/4" Hex Nuts
- 8- 1 1/4" Fender Washers
- 4- 1/4" Small Washers (for Lag Screws)



## Step 1

Lay the table top upside down on a clean flat surface. We recommend using the box the table was shipped in. Place each leg assembly on the inner edge of the 2x2 top support and fasten each side with two 3" Hex Bolts (placing a washer at each end of the bolt). Please be sure the leg assembly is square with the bench top.

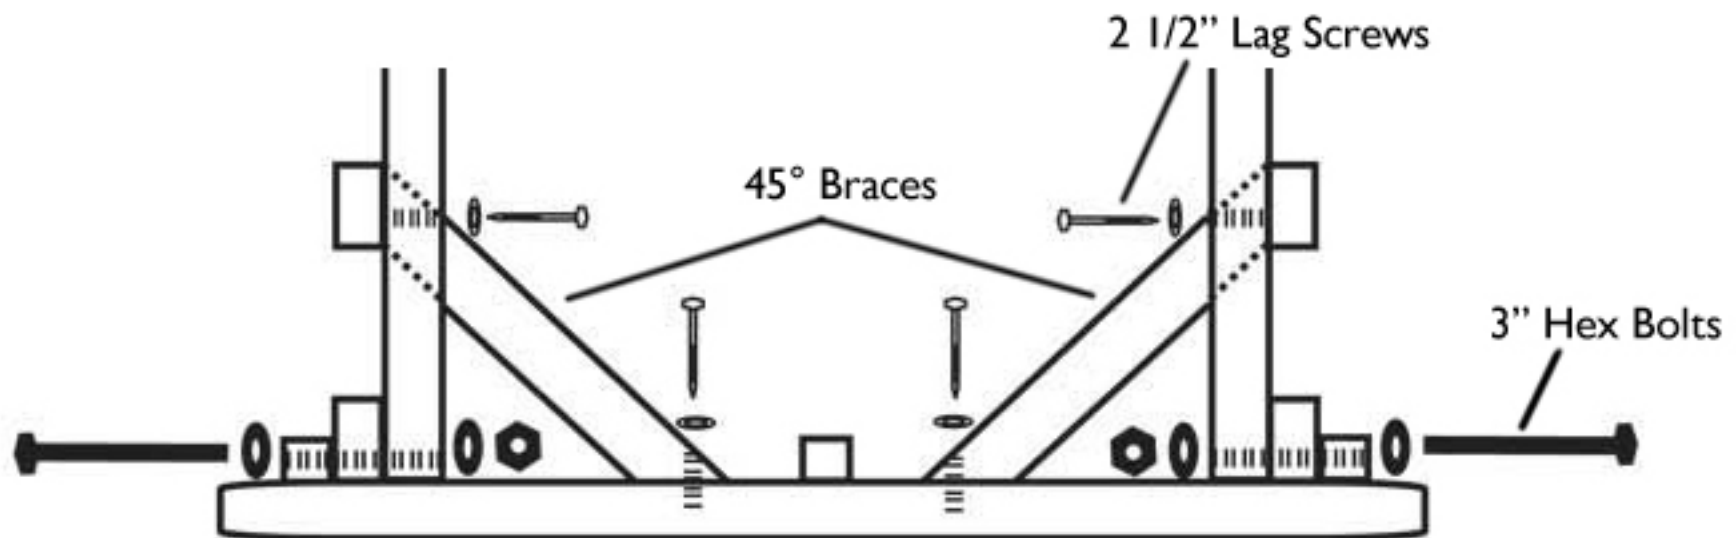

## Step 2


Use the 2 1/2" Lag Screws to attach the angled braces, making sure to place a small washer at the top of each screw. We have found that it is sometimes easier to start each screw or bolt by tapping it a few times with a hammer. (there is no need for pre-drilling with this step.) You may also offset each 45° brace from the middle board.

## Step 3


Turn the table upright. Tighten screws and/or bolts if necessary.

# Instructions for 4', 5', 6', 8' Red Cedar Backless Benches

Please read through instructions entirely before beginning assembly.

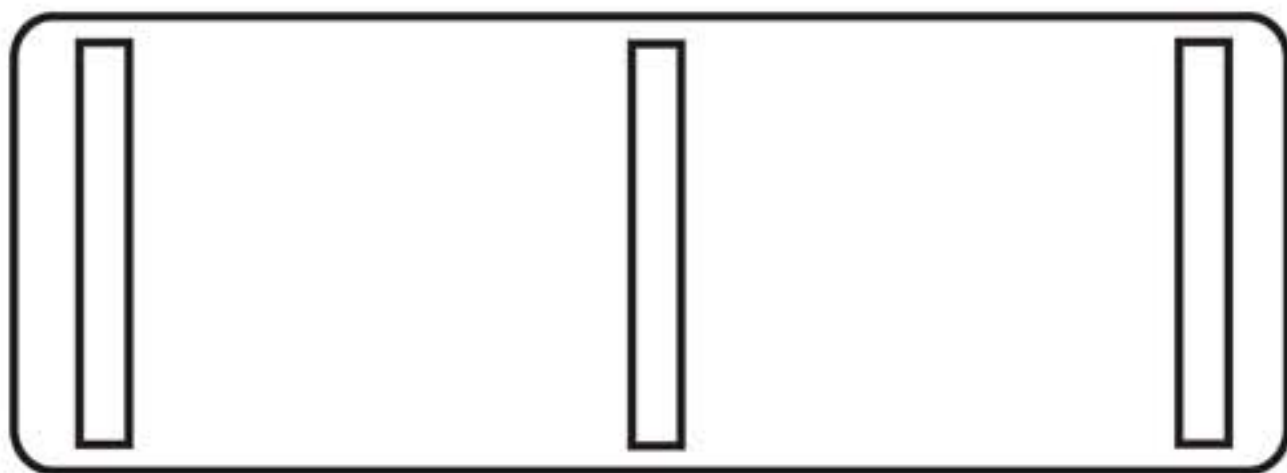

Bench Top - Bottom View

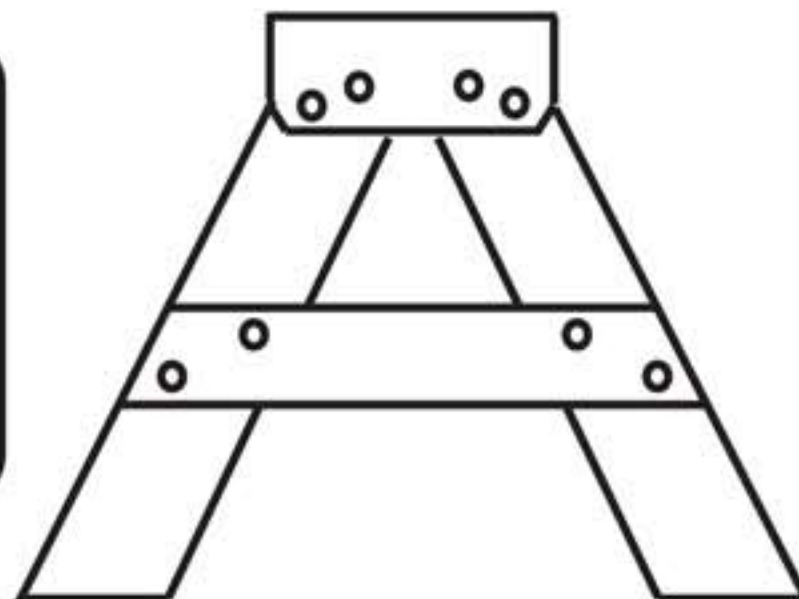

Leg Assembly Side View

Tools Required for Assembly  
-7/16" Socket or Adjustable Wrench  
-#2 Squarehead Drill Bit (included)  
-Hammer for tapping bolts and screws

## Parts List

### Bench Pieces

- 1 Bench Top
- 2 Leg Assemblies
- 2 Braces


### Hardware

- 2 3" x 1/4" Hex Bolts
- 4 2 1/2" x 1/4" Hex Lag Screws
- 2 1/4" Hex Nuts
- 8 1 1/4" Fender Washers
- 4 1/4" Small Washers (for Lag Screws)

## Step 1:

Lay the bench top upside down on a clean flat surface. Place each leg assembly on the inner edge of the 2x2 top support and fasten with a 3" hex bolt (placing a washer at each end of the bolt).

Please be sure the leg assembly is square with the bench top.

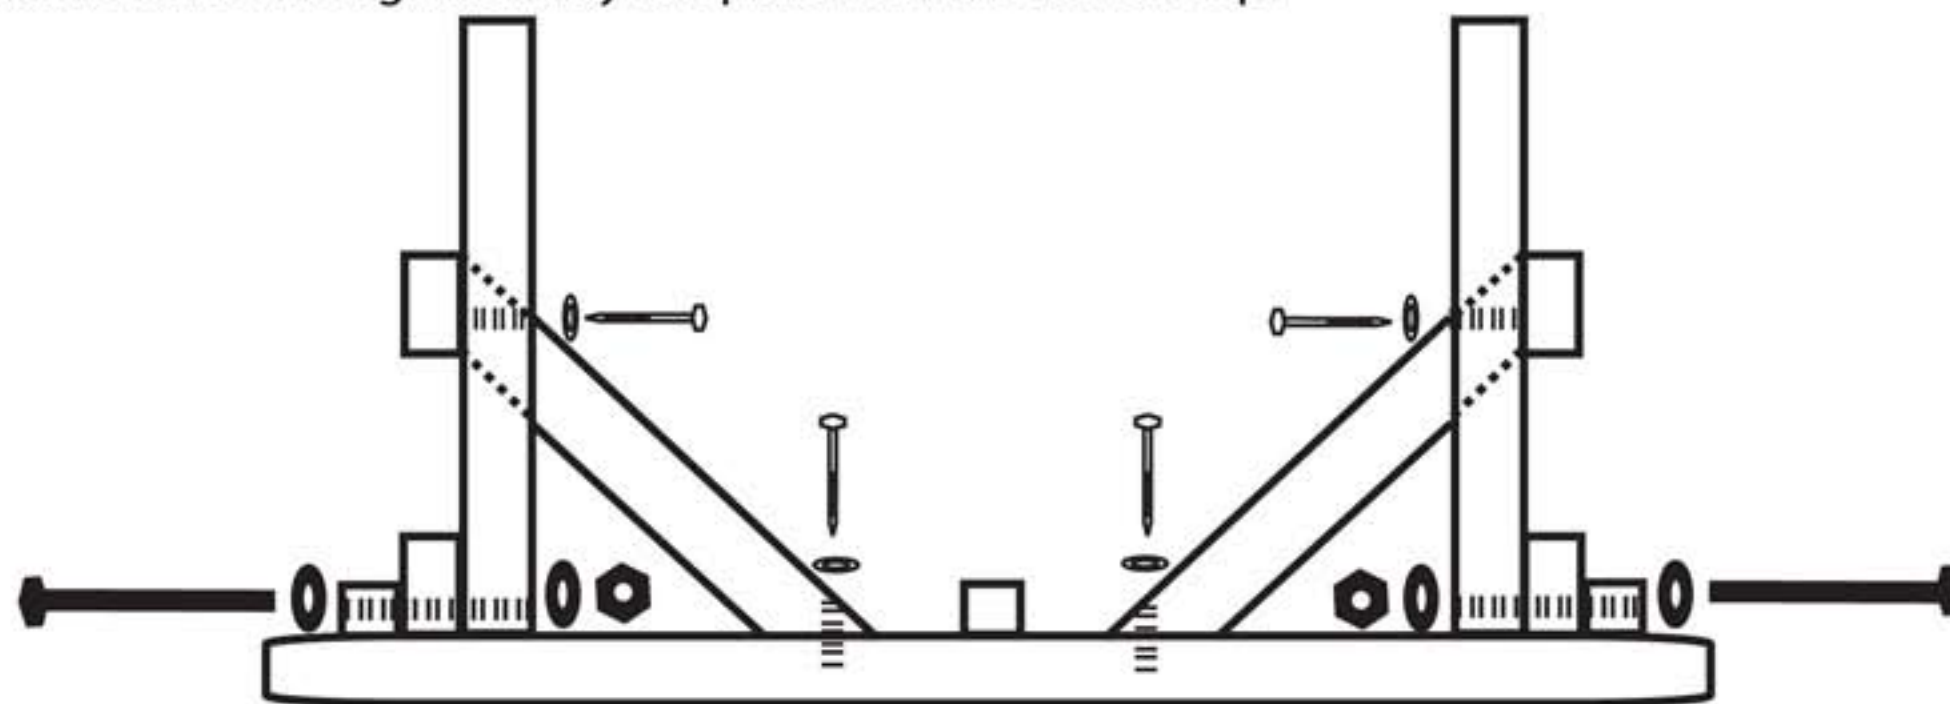

## Step 2:

Use the 2 1/2" lag screws to attach the angled braces, making sure to place a small washer at the top of each screw.

## Step 3:

Turn the bench upright. Tighten the screws and/or bolts if necessary.



\*We have found that it is sometimes easier to start each screw or bolt by tapping it once with a hammer.