
## 2' Folding Adirondack Chair


**Assembly Instructions** 

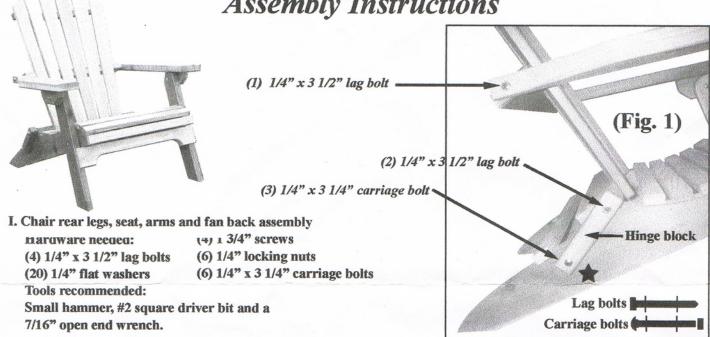

- I. Rear legs, hinge blocks and rear arm assembly
- 1. Place one 1/4" x 3 1/2" lag bolt and one washer through hole at rear of arm with curve on out side. Now add a second washer between arm and center brace end of fan back. Attach with 7/16" wrench. Note: Do not over tighten lag bolts.
- 2. Place one 1/4" x 3 1/2" lag bolt and washer through top hole of wooden block. Then add second washer between block and bottom brace of fan back. Attach with 7/16" wrench. As shown in (Fig. 1.) Note: Do not over tighten lag bolts.
- 3. Place one 1/4" x 3 1/4" carriage bolt, through wooden block at bottom hole, add washer between wooden block and hole at back of rear leg. Then add second washer & locking nut at each side of rear chair legs. A shown in (Fig. 1.)

(4) 1/4" x 3 1/4"

- II. Front legs, arms and seat brace assembly
- 4. Place one 1/4" x 3 1/4" carriage bolt through the inside top hole of front legs. Then add a washer. Push through the hole of the block under the arm rest. Then add second washer with a 1/4" locking nut, tighten
- 5. Place one 1/4" x 3 1/4" carriage bolt through outside center hole of each front leg. Then add washer, tap through the hole at front outside of seat.
- 6. With chair in open position, Place front chair support under bottom of seat and against the front legs, atach with four 1 3/4" screws

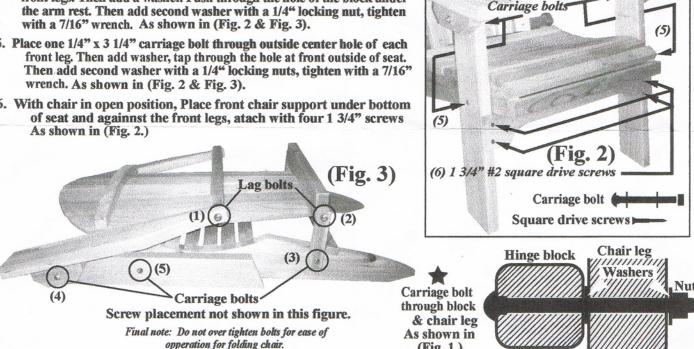

(Fig. 1.)