
## **ASSEMBLY INSTRUCTIONS**

## juno doublewide desk

a how-to guide that won't leave you in tears

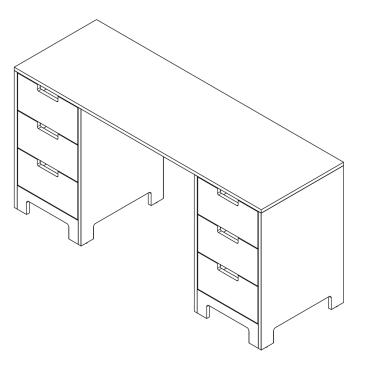

# parenting is hard. this is easy.

no really, it is.



MADE HERE™



MADE WELL™



MADE SAFE



**MADE SMART** 

## want to watch this assembly IRL?

(acronym challenged? that means "in real life".)



open the camera on your phone and place it over the QR code below to see our NYC studio dream team do all the heavy lifting (just kidding, there is none!)



or go to ducducnyc.com/assembly-instructions

thank you for selecting a studio duc product!

please check contents against the components list in these instructions. also, please ensure there was no damage that may have occurred in shipping.

if any components are missing or you find any damage, please contact ducduc before continuing.

read all the instructions before use.

pay close attention to the safety warnings in these instructions.


a minimum of two people is required to safely assemble and move the desk. do not attempt to move this desk alone — dragging or sliding it across a floor may cause structural damage.

#### CLEANING:

do not scratch or chip the finish. do not use abrasive chemicals for cleaning. clean with mild soap on a soft rag. rinse and dry thoroughly. if you ever refinish this furniture, be sure to use only a non-toxic finish specified for children's furniture.

KEEP INSTRUCTIONS FOR FUTURE USE

### WHAT'S IN THE BOX:

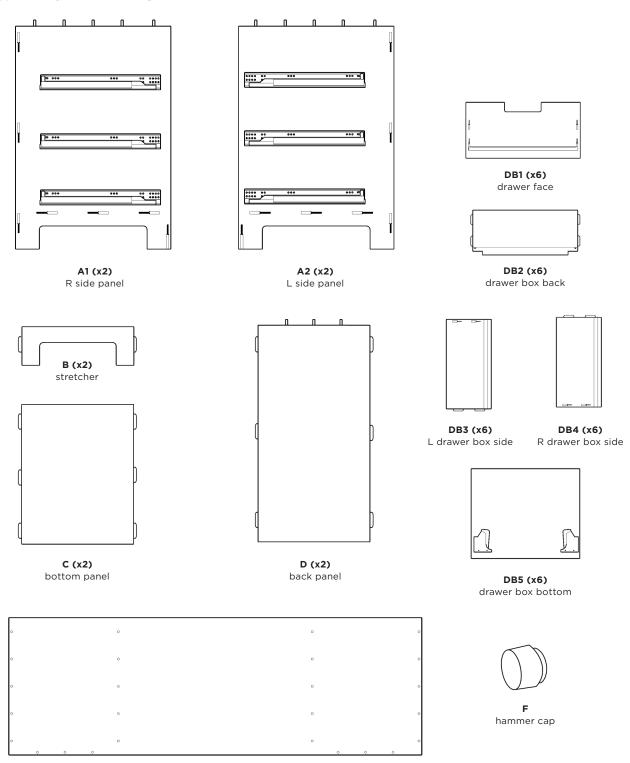


### WHAT YOU'LL NEED:



household hammer or rubber mallet




20 minutes (or less)




a soft surface to assemble on (like a rug or some of the corrugate box your piece arrived in)



2 people
plus a dog for moral support
(unless you're a cat person)

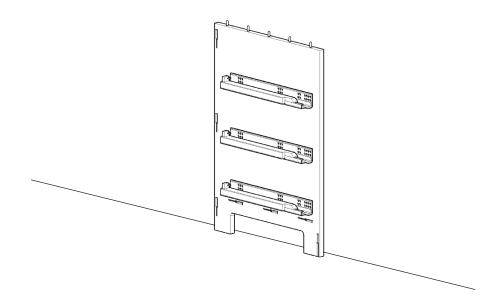


insert connectors on one back panel (D) into slots on R side panel (A1). push down at the connection to lock into place.

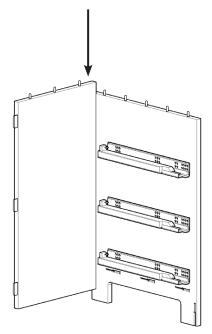




insert connectors on back panel (D) into slots on one L side panel (A2). push down at the connection to lock into place.

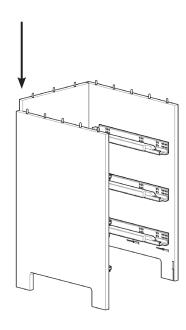

4a


have a friend gently flare R + L side panels (A1 + A2) outward as shown.

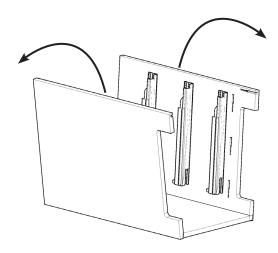




4b

with the side panels flared outward, insert the connectors of one side of bottom panel (C) into slots on R side panel (A1).

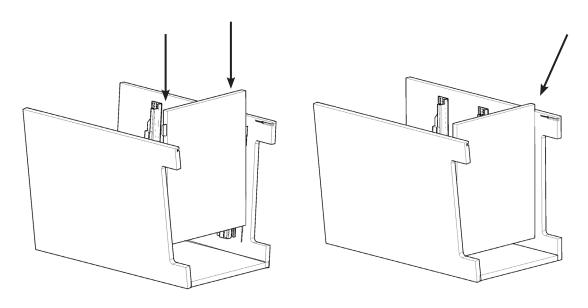

4c


insert remaining connectors of bottom panel (C) into slots on L side panel (A2).

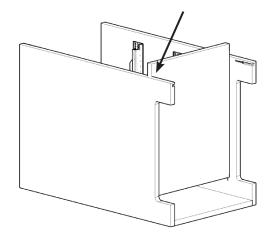




4d


once all connectors and slots are lined up and side panels are back to square position, apply hammer cap (F) to the head of a household hammer and tap bottom panel (C) until there is no gap at the connection to back panel (D).

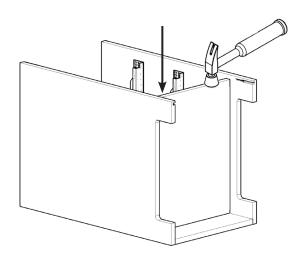


insert the connectors of one stretcher (B) into slots on both side panels (A1 + A2). tap with hammer and hammer cap (F) to lock into place.

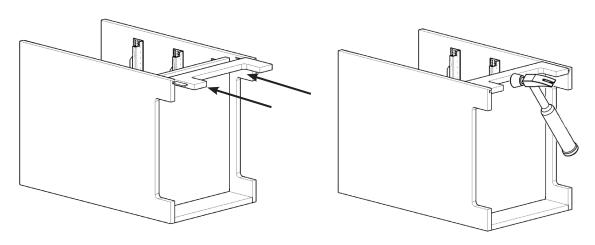




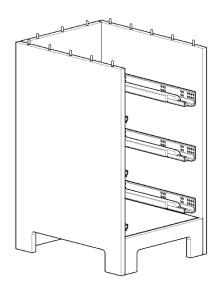

7 repeat steps 1-6 to create the second case from the remaining parts.

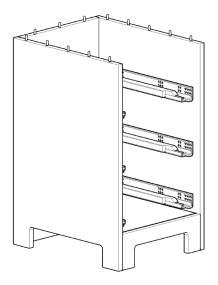


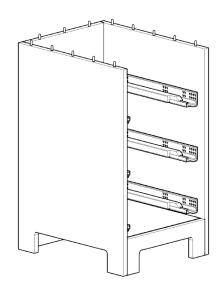




## 8a

now we build the drawers! starting with drawer face (DB1) facing down, insert the connectors of both drawer box side panels (DB3 + DB4) into slots on drawer face (DB1). push down at the connections to lock into place.

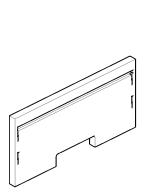


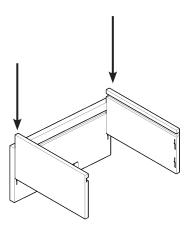




# 8b

rotate the partially assembled drawer box as shown. slide drawer box bottom (DB5) into place using grooves on the drawer box side panels (DB3 + DB4) as guides. be sure glide hardware on bottom panel (DB5) is positioned outside the drawer interior and toward the drawer face (DB1) as shown.

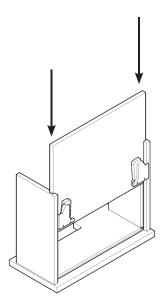


### duc insider tip!


when the drawer bottom panel is properly installed, it should be recessed about a 1/4" from the back of the drawer sides. (don't be afraid to use some force!)

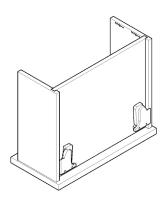


8c

again, rotate partially assembled drawer box as shown. insert connectors of drawer box back (DB2) into slots on drawer box sides (DB3 + DB4). push down at the connections to lock into place. Use hammer and hammer cap (F) if needed.

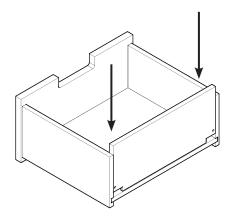

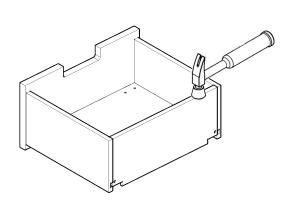




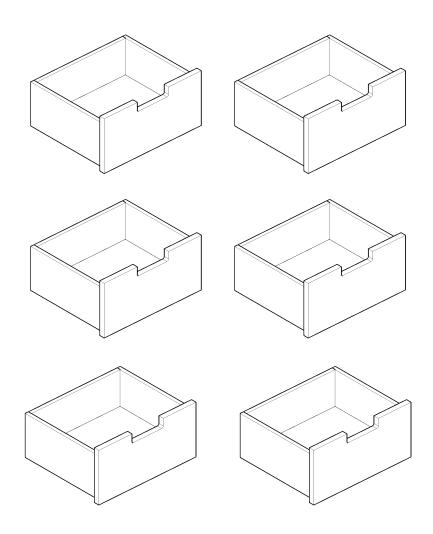





starting at the top of one case, pull drawer glides out to extended position as shown.

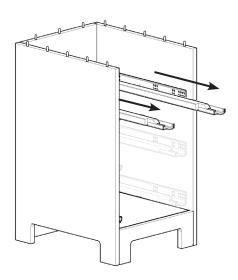


place one assembled drawer box onto extended glides as shown, from underside of drawer use hands to pull each glide forward until it locks into connection with glide drawer, use hands to pull each glide forward until it locks into connection with glide hardware attached to drawer box bottom (DB5), the drawer will be secure when you hear a click on each connection. once secured, push drawer box in to close.

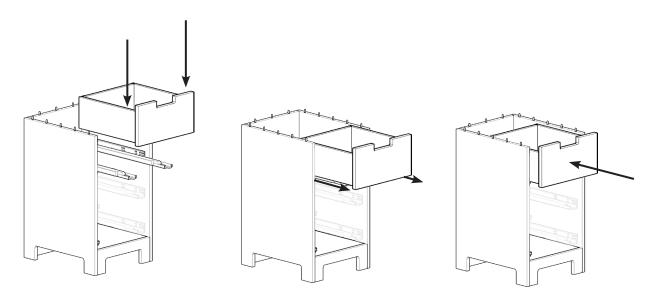

repeat steps 10a + 10b to install remaining drawers on both cases. place both cases in the location where the desk will be fully assembled with the cases spaced 60" apart.

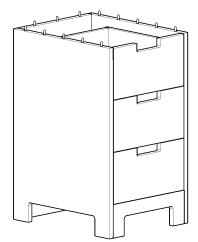


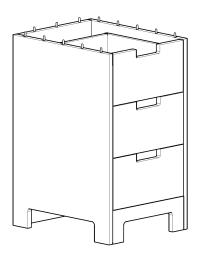




# 12

with a friend, lift desktop (E) and line up connectors on both cases (A1s, A2s, + Ds) with the holes on the underside of desktop (E). push down at all connections to lock into place.

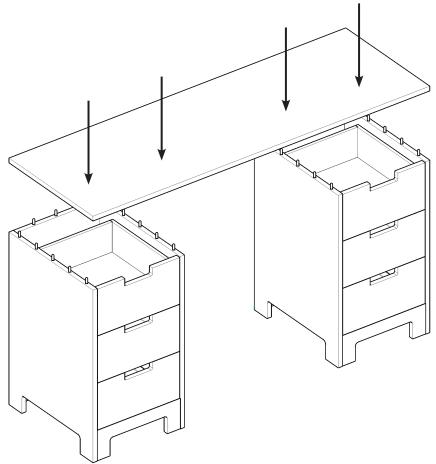

## bravo! you did it!

give yourself a pat on the back, take a bow, or go house a pint of ice cream...we don't judge.

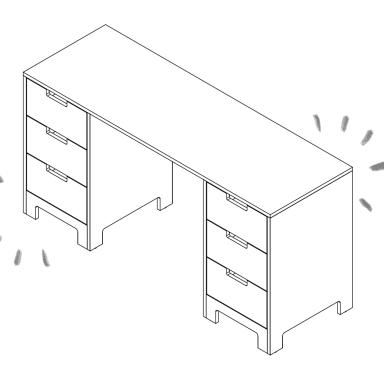

# prefer to talk to a human instead? we're here for you!

contact our customer advocate team below:



212.226.1868

quack@ducducnyc.com



live chat at ducducnyc.com



200 lexington, no. 701 ny, ny 10016