



5" Gauge Unsprung Wagon Chassis

Kit Contents:

- 2 x Assembled Wheelsets with bearings
 - 2 x Side Channel
 - 2 x Buffer Beam
 - 4 x Corner Angles
- 28 M6 x 16mm Hex Bolts
- 28 x M6 Nyloc Nuts
- 2 x Single Slot Couplings

Assembly Diagrams

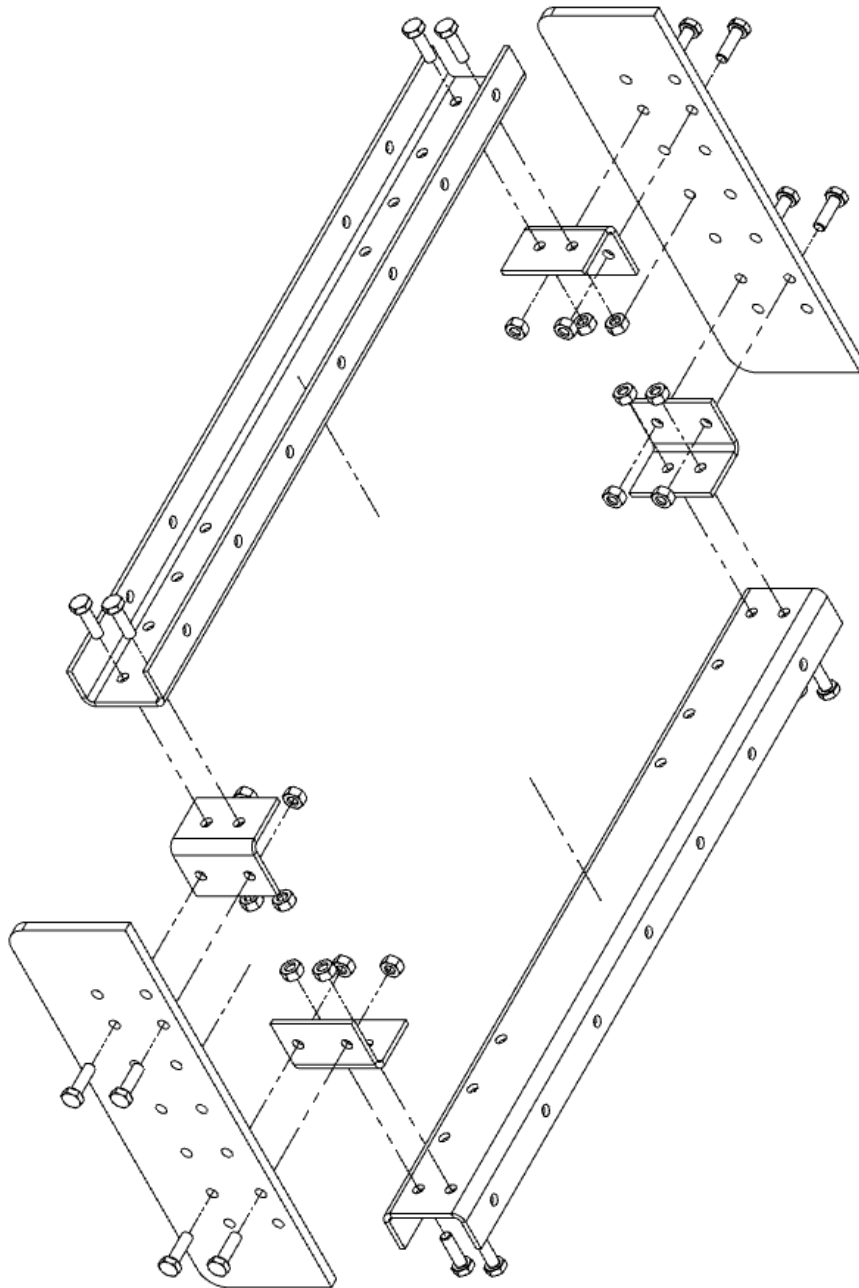

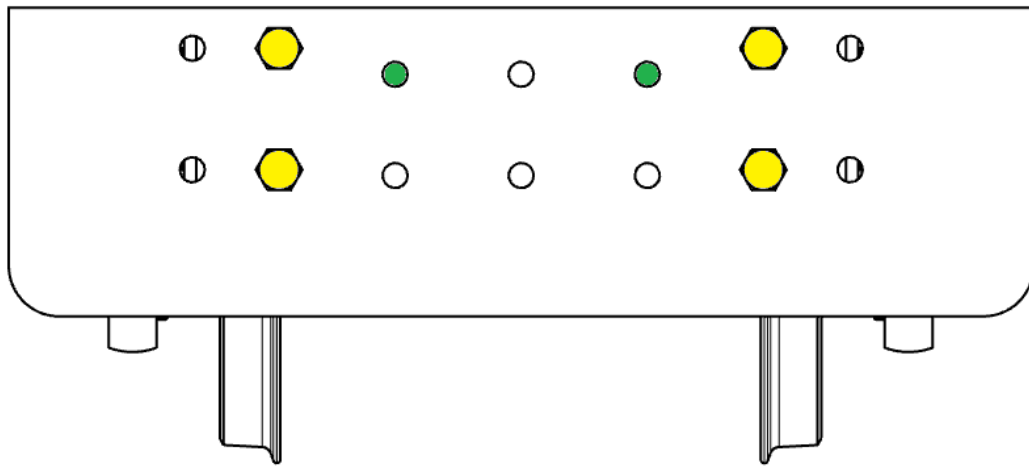

Bolts for the angle brackets go in the inner pair of holes – marked in yellow.

For coupling height to suit GL5 standards, fix the single slot couplings to the green holes.

