

CAST STREET BLADE INSTALLATION GUIDE


TOLL FREE: 1-800-705-1446 WE CAN HELP!

TOOLS REQUIRED

- Mounting Template (Provided upon request)
- 3/8" Drill Bit (Provided upon request)
- Mounting Hardware Packet (Provided)
- 1/2" Wrenches
- Permanent Marker
- Tape Measure
- Hammer
- Center Punch
- Local Sign Ordinance Height and Location Requirements

INSTRUCTIONS

- 1) Hole location for sign installation is determined by the height requirement and orientation of the completed installation.
- 2) Measure from the top of post to the first hole location and mark with a permanent marker on recessed flute.
- 3) Use the mounting template to locate and mark the bottom hole location.
- 4) Use hammer and center punch to dimple the hole locations.
- 5) Use 3/8" drill bit to drill clearance hole.
- 6) Repeat steps 1-5 to drill holes on opposite side of post
- 7) Repeat steps 1-5 to drill holes on each side of post for second street sign
- 8) Mount street blades to posts using 5/16-18 stainless steel bolts, washers and nuts.

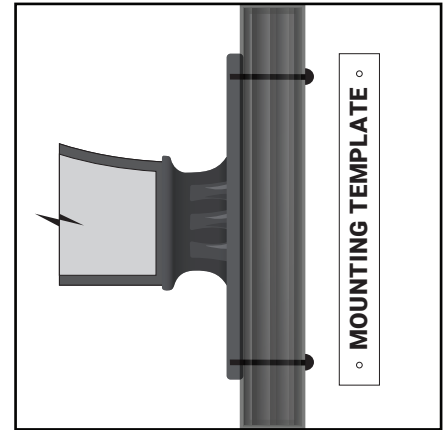

NOTE: Mounting bracket will seat best to fluted post when mounting holes are drilled **center on the recessed flute.**



HARDWARE INCLUDED

ATTACHMENT FOR 3" POST

- (2) 5/16-18 X 3.5" stainless steel hex bolts
- (2) 5/16" stainless steel flat washers

ATTACHMENT FOR 4" POST

- (2) 5/16-18 X 4.5" stainless steel hex bolts
- (2) 5/16" stainless steel flat washers

COMPLETED SIGN INSTALLATION



NOTE: Sign face orientation and direction is a key component of the installation process. It is important to plan ahead to assure that each sign may be viewed properly from each direction. It will be necessary to offset the height of two street blades mounted perpendicular to each other to avoid interference of the mounting hardware.