


## INSTALL SCROLL BRACKET ARM

Thank-you for purchasing our products. We appreciate your business. The decorative sign attachment bracket you've purchased is designed for maximum durability and has been pre-assembled to assure a high quality product. Follow these instructions only after the sign pole is installed and concrete is fully cured.


**CAUTION:** The cast aluminum, ornamental scroll that is welded to the collar hanger arm is very fragile. Hitting or dropping the bracket can easily break the casting. Use care when handling the bracket to assure it does not break.

### 1 ATTACH STREET BLADE TO BRACKET

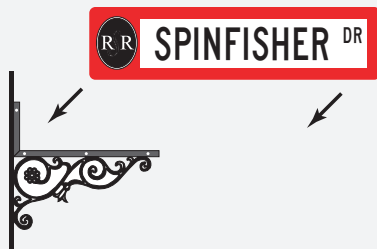


Loosen (4) 1/4-20 x 3/8" set screws. Insert street blade into channel. Be sure blade is completely seated into channel then tighten (4) 1/4-20 set screws to secure blade.

### 2 DRILL BOLT THROUGH HOLES IN POLE

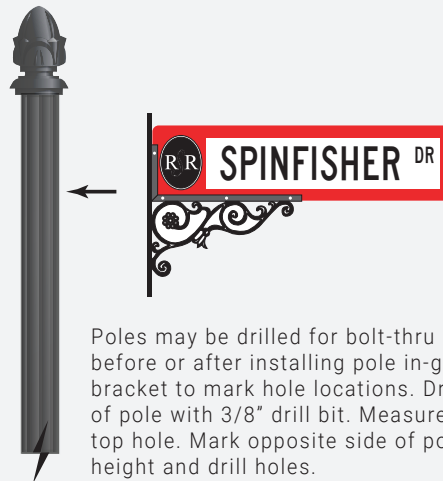


Poles may be drilled for bolt-thru attachment before or after installing pole in-ground. Use bracket to mark hole locations. Drill thru one side of pole with 3/8" drill bit. Measure to center of top hole. Mark opposite side of pole at the same height and drill holes.

### 3 ATTACH SCROLL BRACKET ARM TO POLE

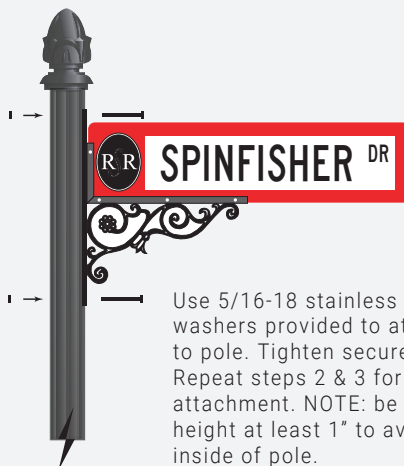

Use 5/16-18 stainless steel hex bolts, nuts & washers provided to attach scroll bracket arm to pole. Tighten securely. Repeat steps 2 & 3 for second street blade attachment. NOTE: be sure to offset bracket height at least 1" to avoid a bolt collision on inside of pole.

### 4 CLEAN COMPONENTS

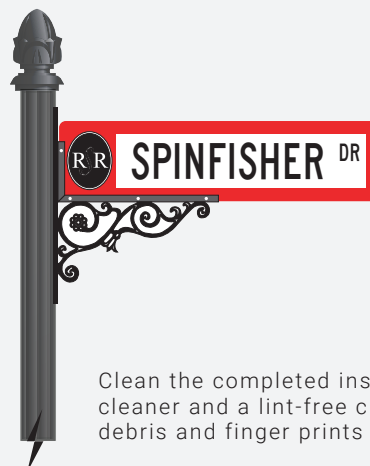

Clean the completed installation using glass cleaner and a lint-free cloth to remove debris and finger prints.