




1 Mark 1st hole

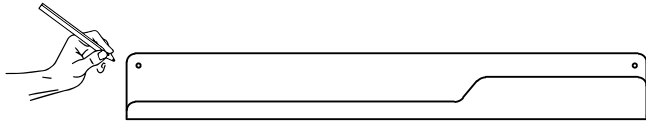

6 Drill 2nd hole
Ø 6 mm

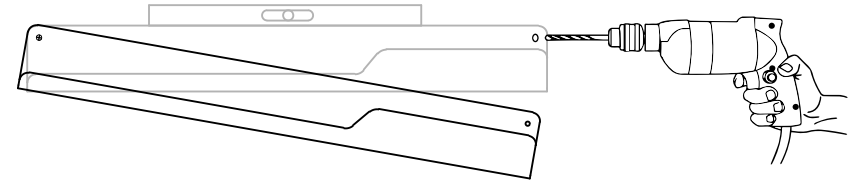

2 Drill first hole
Ø 6 mm

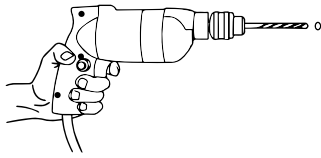


7 Insert wall plug




3 Insert 1st wall plug



8 Install screw through right corner

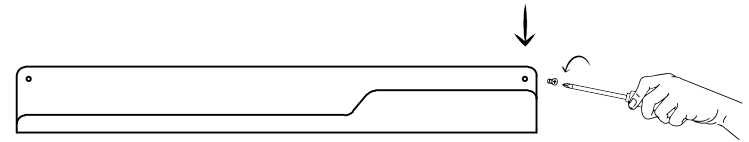

4 Install screw through left corner

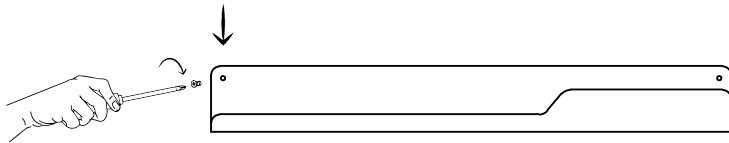

5 Mark 2nd hole
* Check alignment with Level

