




1 Trace left corner on wall where hanging

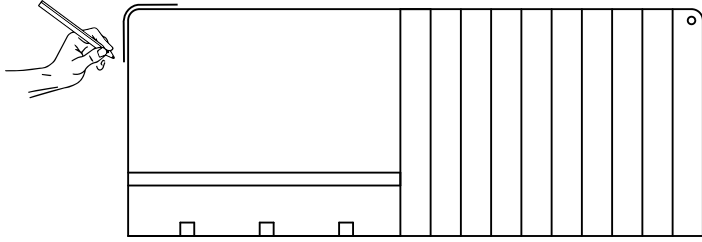


2 Mark first hole

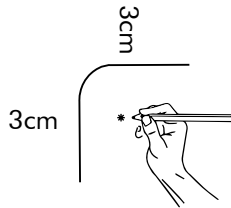


3 Drill first hole  
Ø 6 mm

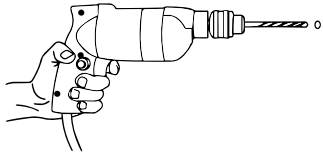


4 Insert 1st wall plug and screw

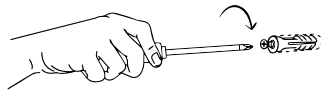


5 Hang left corner ↓

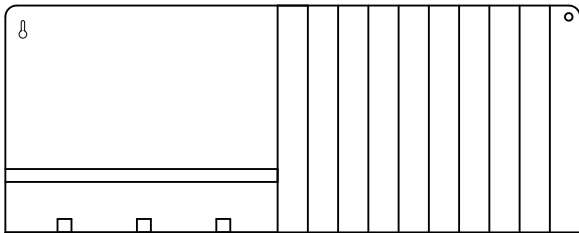

6 Level board and mark second hole

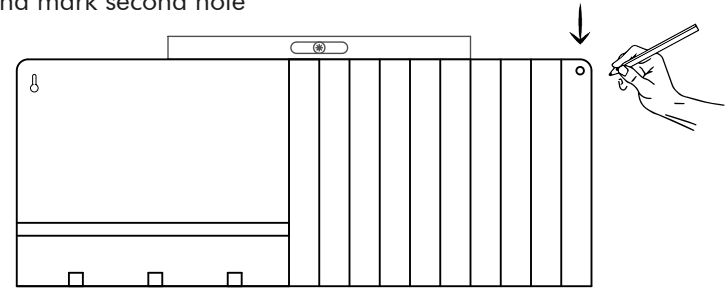

7 Drill 2nd hole  
Ø 6 mm

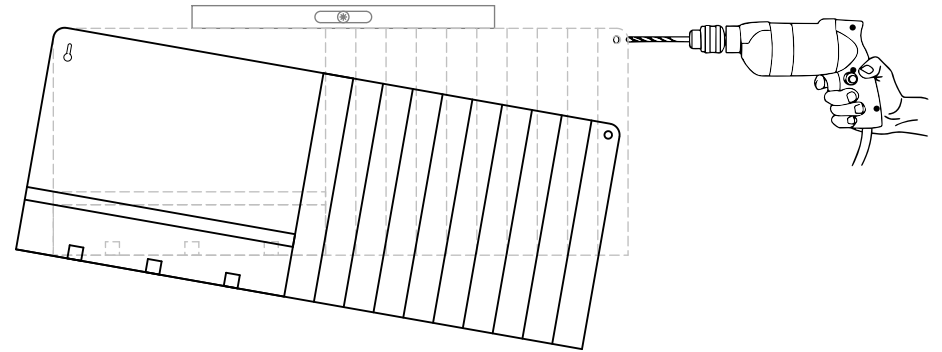

8 Insert wall plug



9 Insert screw through board

