
# How to make a Push-Fit connection

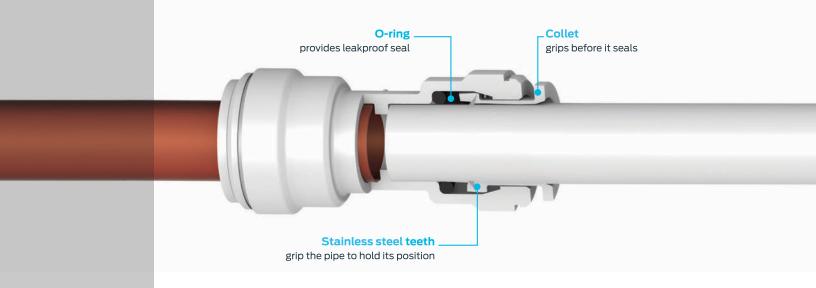



### To connect

Keep product clean until ready to use. Always pressure test once installed.



#### Step 1

Cut the tube square and remove any burrs or score marks. We recommend using a tube insert for soft or thin-walled plastic tubing.



#### Step 2

Push the tube into the fitting and up to the tube stop.



#### Step 3

Pull on the tube to check that it is secure. Test the system before use.

## To disconnect



#### Step 1

Make sure that the system is depressurized, then push the collet square against the fitting. With the collet held in this position, the tube can be removed.





JJ DOWNS INDUSTRIAL PLASTICS INC.

416.236.1884

Toronto, ON

JJDOWNS.COM