




Disconnect power and remove device from wall

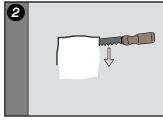


Using dotted line on instruction guide, cut hole to allow **Mount** to be inserted.




Optional: Use **Smash Plate** as guide, secure to wall using pins as a stamp.

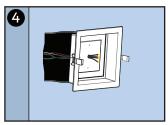


Feed wires through pre-drilled hole and place the **Mount** in the cavity.




Squeeze spring clips through wall opening. Spring tension will secure the **Mount** in place.

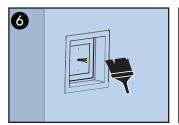

Paint to match the surface.




Secure device following the instructions of particular model being used.

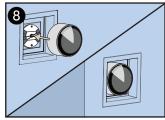


Connect device, turn on power and enjoy!







Drill hole in **Mount** sized according to dimensions of the pot-light being used.




Using dotted line on instruction guide, cut hole to allow **Mount** to be inserted.

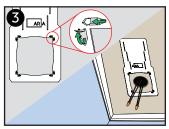

Optional: Use **Smash Plate** as guide. Secure to ceiling using pins as a stamp.

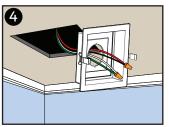

Disconnect power and feed wires through ceiling and **Mount**.

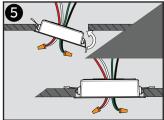


Squeeze spring clips through ceiling opening. Spring tension will secure the **Mount** in place.



Paint to match surface.




Connect wires and place components through hole. Individual pot light install may vary.




Enjoy!







Disconnect power and remove device from wall

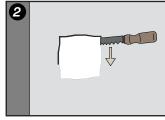

Using dotted line on instruction guide, cut hole to allow **Mount** to be inserted.

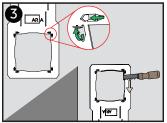

Optional: Use **Smash Plate** as guide, secure to wall using pins as a stamp.

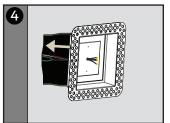


Feed wires through pre-drilled hole and place the **Mount** in the cavity.




Use drywall compund mud to cover flange. Once dry, sand.


Repeat as needed.

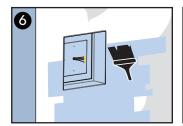

Paint to match surface.




Secure device following instructions of particular model being used.

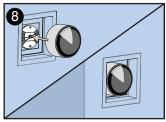


Connect device, turn on power and enjoy!




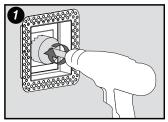


Drill hole in **Mount** according to the dimensions of the pot-light being used.




Secure **Smash Plate** using using nails or wood screws.

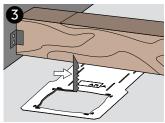


Once drywall is installed, use the **Smash Plate** as a guide to cut a hole.

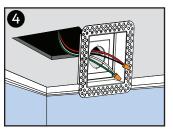


Disconnect power and feed wires through ceiling and **Mount**.

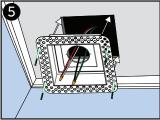


Secure **Mount** using staples or drywall screws.

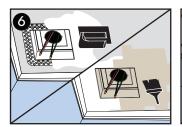

Use drywall compund mud to cover flange. Once dry, sand. Repeat as needed. Paint to match surface.



Connect wires and place components through hole. Individual pot-light install may vary.



Enjoy!