



1. Unplug the power cord and open the cover base

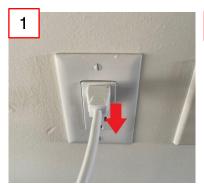


1 Unplug the power cord

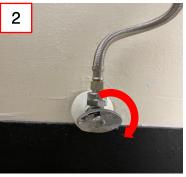


② Close the water valve



3 Unscrew the two screws at the back of the bidet

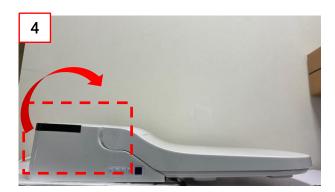

4 Pull up the cover base

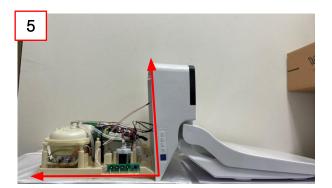


(5) Make the cover base like above

Scan here for video guide






#### 2. Separate the SIDE IR

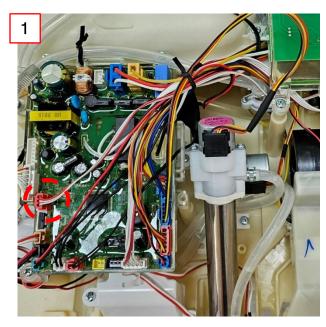

① Separate the SIDE IR connector from the MAIN PCB

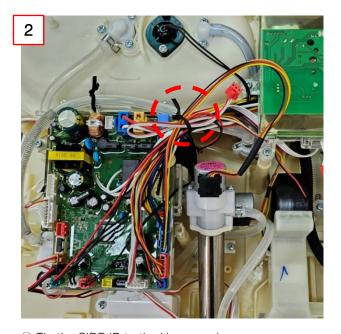


② Tie the SIDE IR to the Harness clamp



Scan here for video guide



#### 3. Cloes the cover base

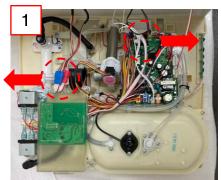

—




3

1 Organize the harness

② Close the cover base

2 Push down the circle parts

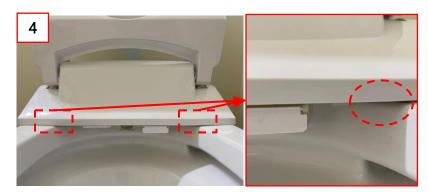

4 Check if its closed well



5 Screw the two screws at the back of the bidet



4. Open the water valve and plug the power cord

