2x Fullness(3 Folds)
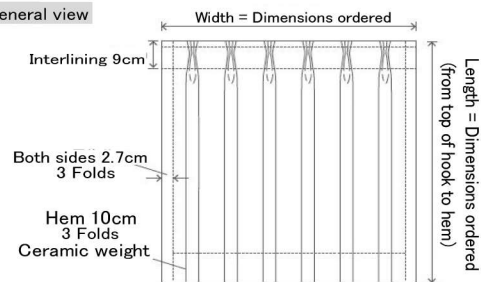
2x Fullness (3 Folds) 2x Fullness (3 Folds)

The most popular style with generous folds.

Specification

- Fabrics available: Drape, Lace
- Upper specifications: Interlining 9cm 2 Folds
- Side specifications: About2.7cm 3 Folds
- Hem specifications: About10cm 2 Folds With ceramic weight on both sides
- Pattern matching is available
- Comes with tassels (Laces do not come with tassels)
- Shape memory: Maximum width 300cm Maximum length 285cm

General view

Width = Dimensions ordered

Interlining 9cm

Both sides 2.7cm
3 Folds

Hem 10cm
3 Folds
Ceramic weight
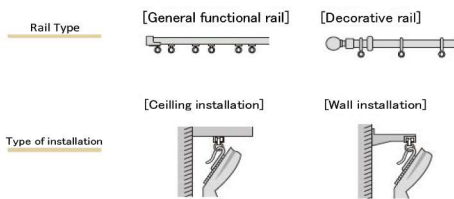
Length = Dimensions ordered
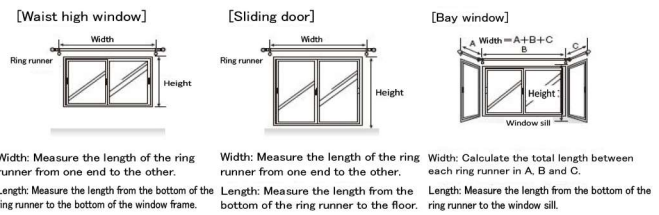(from top of hook to hem)

Order size (Recommended)

- Width: Pole width x 1.5 times ● Height: (Waist high window) From ring runner to the window frame ＋15〜20cm (Sliding door) From ring runner to the floor -1〜2cm
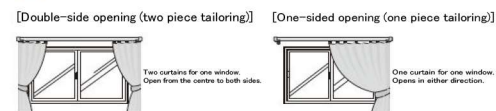
## Measuring Method

STEP 1 Confirm the rail type of your home

Rail Type

[General functional rail] [Decorative rail]

Type of installation

[Ceilling installation] [Wall installation]

STEP 2 Measure the width and length

[Waist high window]   [Sliding door]   [Bay window]

Width Width Width = A+B+C

Ring runner Ring runner

Height Height Height

Window sill

Width: Measure the length of the ring runner from one end to the other.

Length: Measure the length from the bottom of the ring runner to the bottom of the window frame.

Width: Measure the length of the ring runner from one end to the other.

Length: Measure the length from the bottom of the ring runner to the floor.

Width: Calculate the total length between each ring runner in A, B and C.

Length: Measure the length from the bottom of the ring runner to the window sill.

STEP 3 Decide the way the curtains open

[Double-side opening (two piece tailoring)]   [One-sided opening (one piece tailoring)]

Two curtains for one window. Open from the centre to both sides.

One curtain for one window. Opens in either direction.

STEP 4 Decide the type of hook

[A hook (Type that shows the rail)]   [B hook (Type that conceals rail)]

Used for ceiling installation rails, double-rail lace curtains and decorative rails.

Used to hide the wall installation rail.

Caution: When measuring curtain sizes

✗ Do not directly measure the curtain fabric that is currently in use.

✗ Do not measure the window directly without the curtain rail.

Points to consider when measuring length

It is easier to measure if you use the paper measure given in the shop over the ring runner loop.

※ Please be careful if there is any furniture under the window.