

Plain shade

Plain Lace plain shade shade

A style of flat fabric folded up softly. It keeps your windows looking neat and tidy while enhancing the pattern of the fabric.



Order size (Recommended)

- Ceiling installation width: Internal dimensions of the window frame -1cm Length: Internal dimensions of the window frame -1 cm Wall installation size: according to the size required
- Available sizes: [Cord type] Width: 15-280cm Length: 30-300cm [Chain type] Width: 30-400cm Length: 30-300cm
- imes The chain type cannot be made with a width of less than 29 cm due to the use of a cord winding drum inside the rail.


Specification


[Cord type]


- Fabrics available: Drape (Not available for 4-layer coated fabrics), Lace
- Side specifications: About2.7cm
- Hem specifications: Drape (About4.8cm, 2 folds), Lace (About4.8cm, 3folds)
- Velcro tape: About 2cm
- Position of the ring tape: About 8 cm from the side(width under 44 cm: approx. 4 cm)
- Distance to the first ring: About 8cm
- Weight bar input point: left side when looking from the back
- Length of the cord: 1)Fabric + 20cm 2)Installation height 100cm

[Chain type] 3)The longer one in 1) and 2)

- Fabrics available: Drape (Not available for 4-layer coated fabrics), Lace
- Side specifications: About2.7cm
- Hem specifications: Drape (About4.8cm, 2 folds), Lace (About4.8cm, 3folds)
- Velcro tape: About 5cm
- Position of the ring tape: About 7.5cm from the side
- Distance to the first ring: About 8cm
- Weight bar input point: left side when looking from the back
- Length of the cord: 1)Fabric + 10cm 2)Installation height 100cm 3)The longer one in 1) and 2)

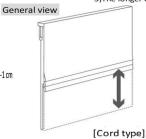

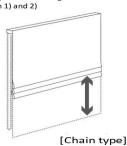





Select the installation type

[Ceilling installation]

Installed on the inside of the window frame It fits neatly into the window frame.



[Wall installation]

Installed on the outside of the wind It can conceal the window frame and reduce light leakage.

When mounting on a wall, please check if there is a base (Cannot be mounted on concrete or plasterboard)

[Rail mounting type]

Attach to the curtain rail

Note that we will see that we will see that will be seen a see that will be

Please refer to caution 2.



[Right dide operation]

Determine the operating position *The type of operation may be




Measure the width, length and installation height of the window according to the type [Ceilling installation] [Wall installation]

Width: Measure the width of the inside of the window frame. Height: Measure the length of the inside of the window frame. Height: Measure the length of the inside of the window frame Installation height: Measure from the inside of the window fram Installation height: Measure from the inside of the window fram

Please refer to caution 2.

Depth of window frame: Measure the depth of the inside of the window frame (Refer to Figure 1) row, it may not be possible to install

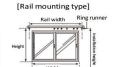

Width: Measure the width of the outside of the window frame Height: Measure from the bottom of the rail to the bottom of the window frame

Installation height: Measure from the bottom of the rail to the floor

Please refer to caution 2.

Caution 1 Note on rail mounting types

※ Please make sure that the cap on either side of the curta
※ Only metal rails of type C and square type can be installed




Figure 1 Caution 2 Note on installation height

When taking the measurements, please measure from the installation point to the floor.
The length of the operating part depends on the installation height. Particular care should be taken when installing in high places



Price

Please refer to the price list in the separate booklet