

User's Manual




INSTALLATION INSTRUCTIONS

Installation Manual

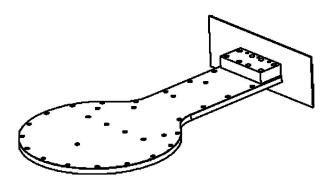

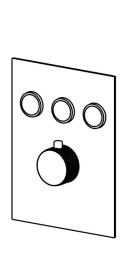



IAPMO RESEARCH AND TESTING, INC.













IAPMO RESEARCH AND TESTING, INC.









CERTIFICATE OF LISTING





IAPMO RESEARCH AND TESTING, INC.














BEFORE INSTALLATION

Shower Head Accessories List:

NO.	Item	Qty
1	Expansion screws	4
2	Main body pre-built box	1
3	Water inlet/support rod	3
4	protective cover	1
5	Cross screws	2
6	S8 hexagonal key	1
7	Decorative panel	1
8	S2.0 hexagonal key	1
9	M4 hexagonal screw	3
10	Shower head body	1
11	Instruction manual	1

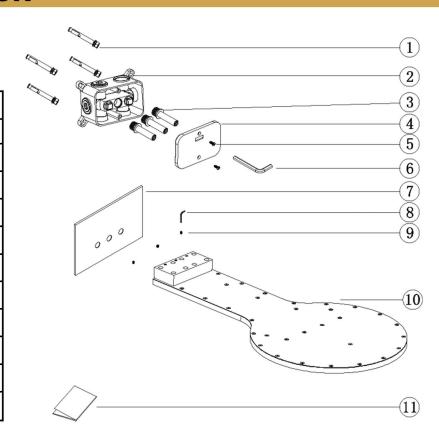

Check accessories


Standard List of Accessories:

When you open the product packaging, please check whether the objects in it are consistent with the main body and accessories you purchased. If there is any inconsistency, please contact our company or our distributor.

Note: 1. Accessories are subject to change without prior notice if the change does not affect usage;


2. The appearance of the product is subject to the physical objects you receive, and the schematic diagram is only for reference.

INSTALLATION DIMENSION

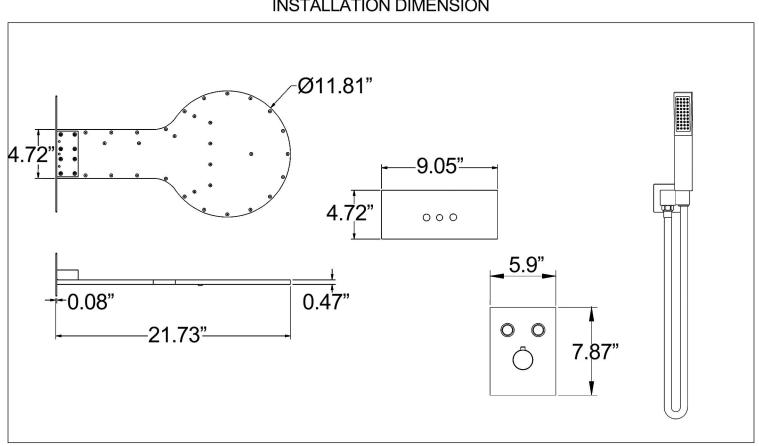


INSTALLATION STEPS


This product has been inspected and debugged by the factory to the best condition. Please do not disassemble and assemble it yourself.

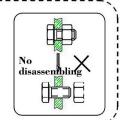


Before installing the faucet, please be sure to remove sundries and sludge from the water pipe to prevent sundries from blocking the faucet.




1. Dig pipe grooves for pre-burying pipes.

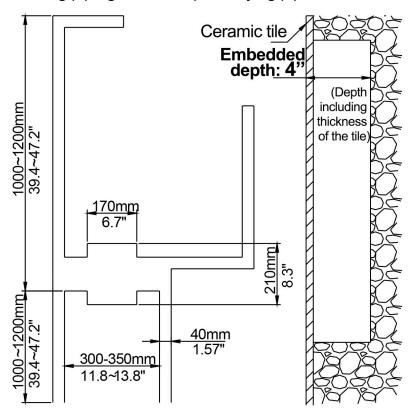


2. Install the main body, water inlet and outlet pipes.

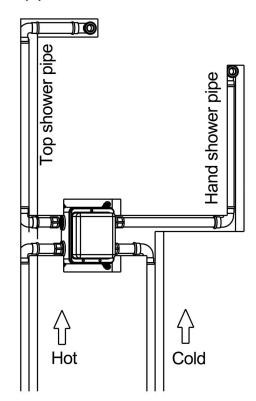

3. Stick tiles, Please note that the outlet should be slightly lower than the surface of the tiles.

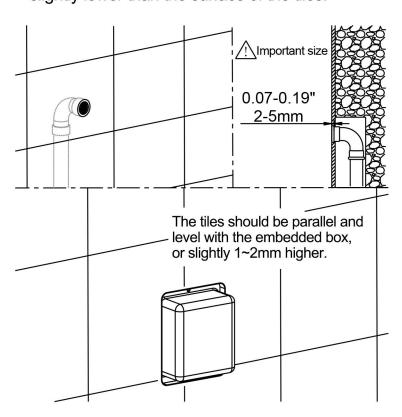



4. Stick the tiles, remove the protecting cover,install the cover plate and diverter.

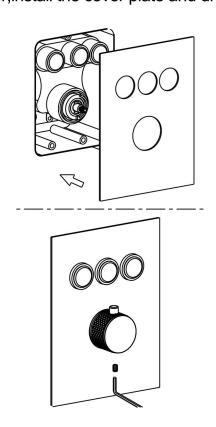

INSTALLATION STEPS


1. Open the pre-buried size in the wall according to the following chart. Note the distinction between the shower intake and waterfall intake connection.

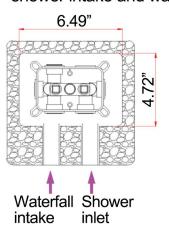




Tile surface and plastic box surface flush transparent protective cover protruding from the tile surface

3. Set aside plastic pre-buried boxes after sealing the tiles flush with the wall transparent protective cover protruding from the tile surface.

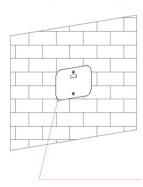


Tile surface and plastic box surface flush transparent protective cover protruding from the tile surface


5. Install the decorative panel.

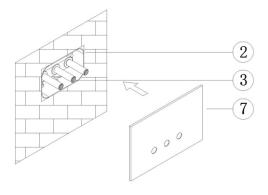


2. Fix the pre-buried main body with reference to the level to ensure the level, the water pipe is connected to the water for 24 hours to ensure sealing; do not remove the transparent protection cover when sealing the wall with cement to avoid splashing cement to the copper parts threads.

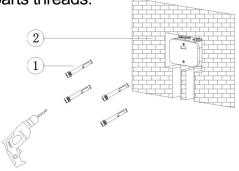

4. Install the main body of the shower, remove the transparent protective cover, unscrew the plug and then lock the water inlet, the middle rod is not water support rod. Through the water to the pipe of the waste foreign matter discharge.

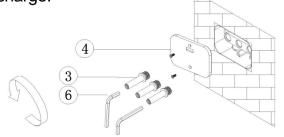

6. Insert the main body of the shower head according to the corresponding inlet parts and lock the hexagonal screws with a hexagonal key, and the installation is complete.

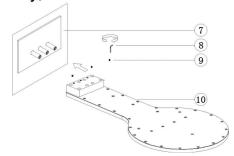

CLEANING CARE

In order to keep the appearance of faucet clean, bright and good performance, please take care of the faucet as follows;

- 1. Rinse with water only and dry with soff cotton cloth;
- 2.Use mild liquid and colorless glass cleaner to remove surface dirt and scale film, or use polish without abrasive effect;
- 3.Do not use abrasive deterfgent, polish, emery cloth, paper towel or scraper, etc.;
- 4.Do not use acid cleaner, or cleaner and soap with insoluble gran etc.;
- 5.In the process of use, mud my accumulate in the bubbler and make the water flow show, The bubbler can be unscrewed, rinsed with water, and then installed back in place.

