


# **User's Manual**

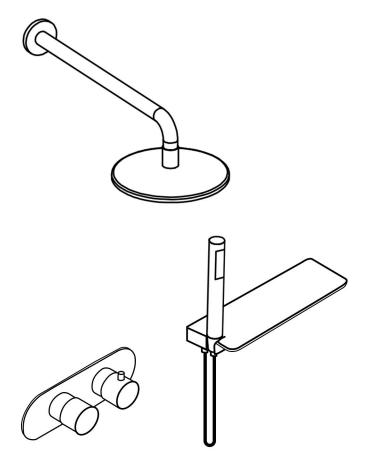

## **INSTALLATION INSTRUCTIONS**

## **Installation Manual**



## **RB0843**











## CERTIFICATE OF LISTING

File No. 8737

Plumbing Fixture Fittings







### IAPMO RESEARCH AND TESTING, INC.















### IAPMO RESEARCH AND TESTING, INC.













## **INSTALL THE SHOWER**


This product has been inspected and debugged by the factory to the best condition. Please do not disassemble and assemble it yourself.



Before installing the faucet, please be sure to remove sundries and sludge from the water pipe to prevent sundries from blocking the faucet.




### 1.Exploded view

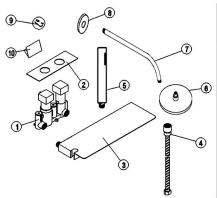


No.	Description	Qty
1	Thermostatic valve	1
2	Panel	1
3	shelf	1
4	Shower hose	1
5	Brass hand shower	1
6	Shower head	1
7	Shower arm	1
8	Decoration cover	1
9	Accessories	1
10	User manual	1

## 2. Installation Steps

## 2.1 Size for grooving and assembly






2.11 Main body size(for your reference,check actual size)

2.12 Wall grooving design and size.(for your reference)


water inlet 4 / 6 pipes, water outlet

4 pipes,water pipe self provided)


## 2.2 Main body built-in steps

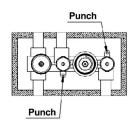

2.21 Drill the hole in the wall. Beat expansion strip into the hole (there are 2 pieces expansion strip harden and 2 pieces self-tapping screw, how many be used decided by actual situation)

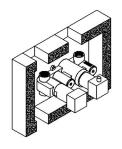


2.22 Put the main body into the wall. fixed with self-tapping screw, please do not harder seal and make sure it is easy for longtime maintenance

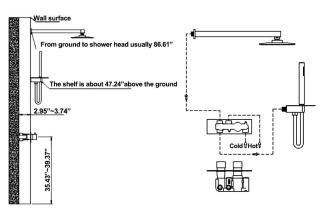

2.13 From ground to main body
usually 35.43"~39.37" also can
according to user height or user
demand


2.14 Join different water pipe,
the pipe must be connected with
hot water on the left and cold
water on the right when connecting.
After the pipeline is buried, the main
body can not be connected until the
sediment in the pipeline is drained.
(PPR water pipe requirements:

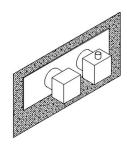

2.23 After connecting the pipeline, remove the upper cover of the embedded box and testthe water, Confirm that there is no leakage, and then cover the upper cover of the embedded box, at last, cover the pipeline and embedded box with cement.



2.24 Effect diagram



3. General products

## **CLEANING CARE**

In order to keep the appearance of faucet clean, bright and good performance, please take care of the faucet as follows;

- 1.Rinse with water only and dry with soff cotton cloth;
- 2.Use mild liquid and colorless glass cleaner to remove surface dirt and scale film, or use polish without abrasive effect;
- 3.Do not use abrasive deterfgent, polish, emery cloth, paper towel or scraper, etc.;
- 4.Do not use acid cleaner, or cleaner and soap with insoluble gran etc.;
- 5.In the process of use, mud my accumulate in the bubbler and make the water flow show, The bubbler can be unscrewed, rinsed with water, and then installed back in place.

Please feel free to contact us if you have any questions. We will help to solve the issue together with you. OUR EMAIL: services@rbrohant.com





Service Contact:

+1(801) 800-9309 services@rbrohant.com

Made in China