



# Lemur bed 75x38

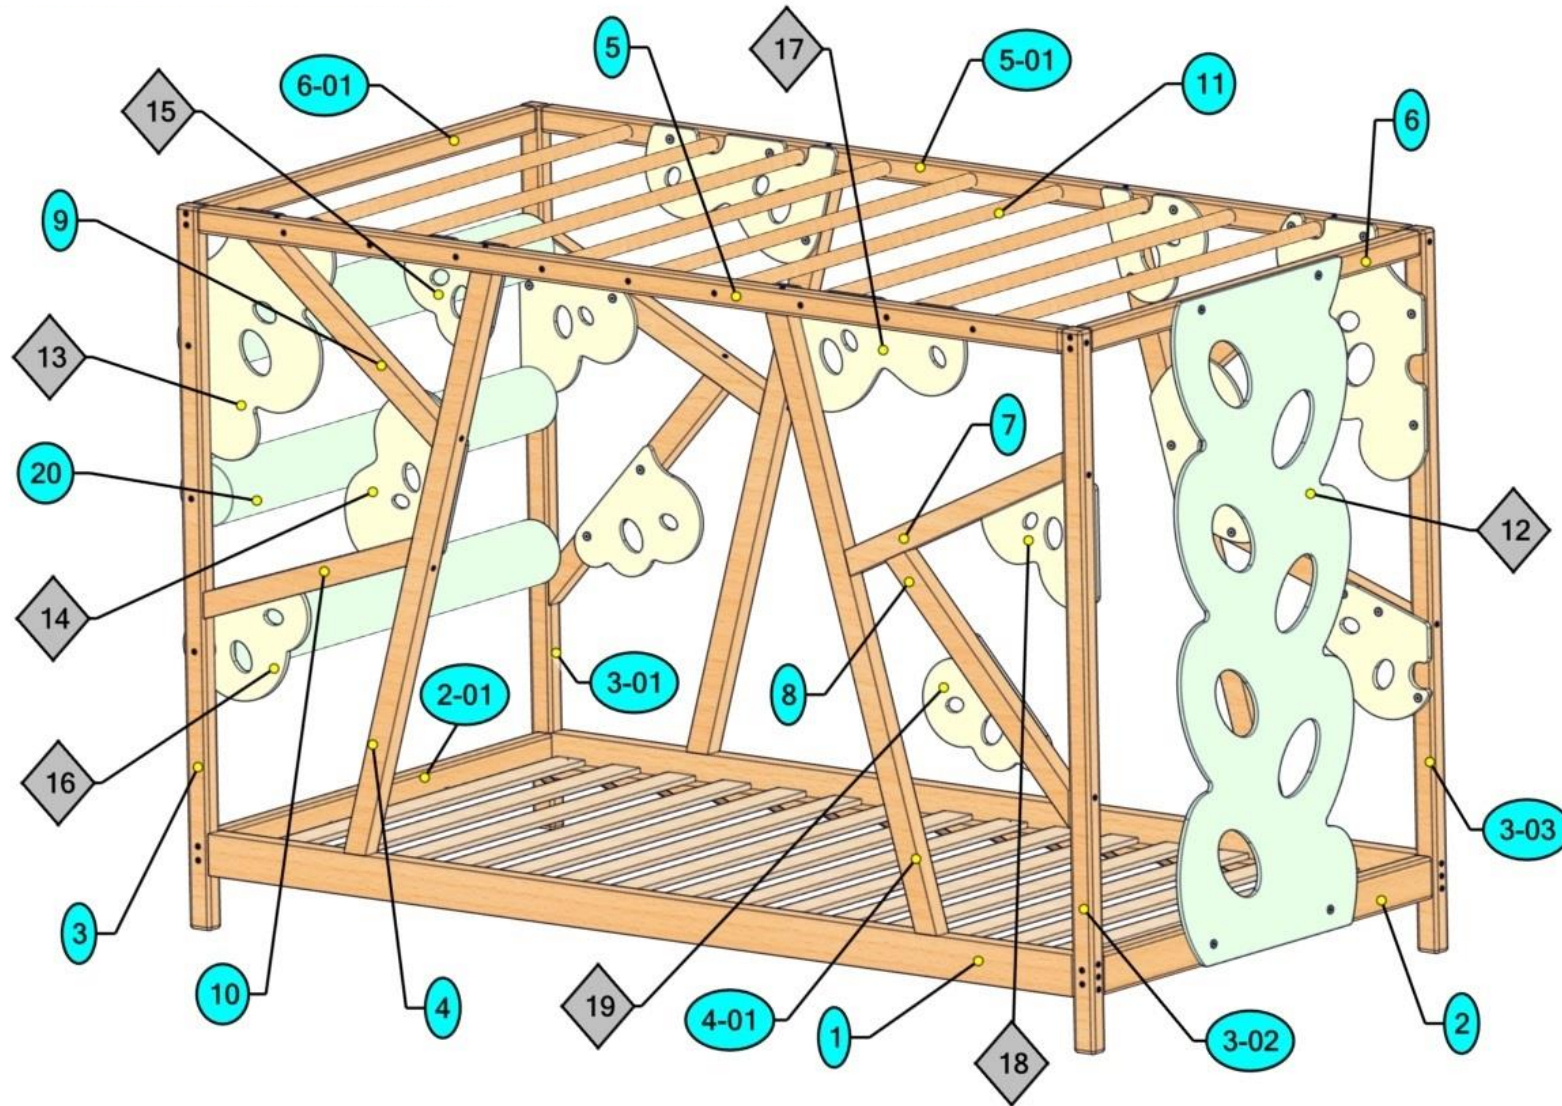


Customer Service E-mail:  
support@busywood.com

Join the video tutorial  
Watch and Build




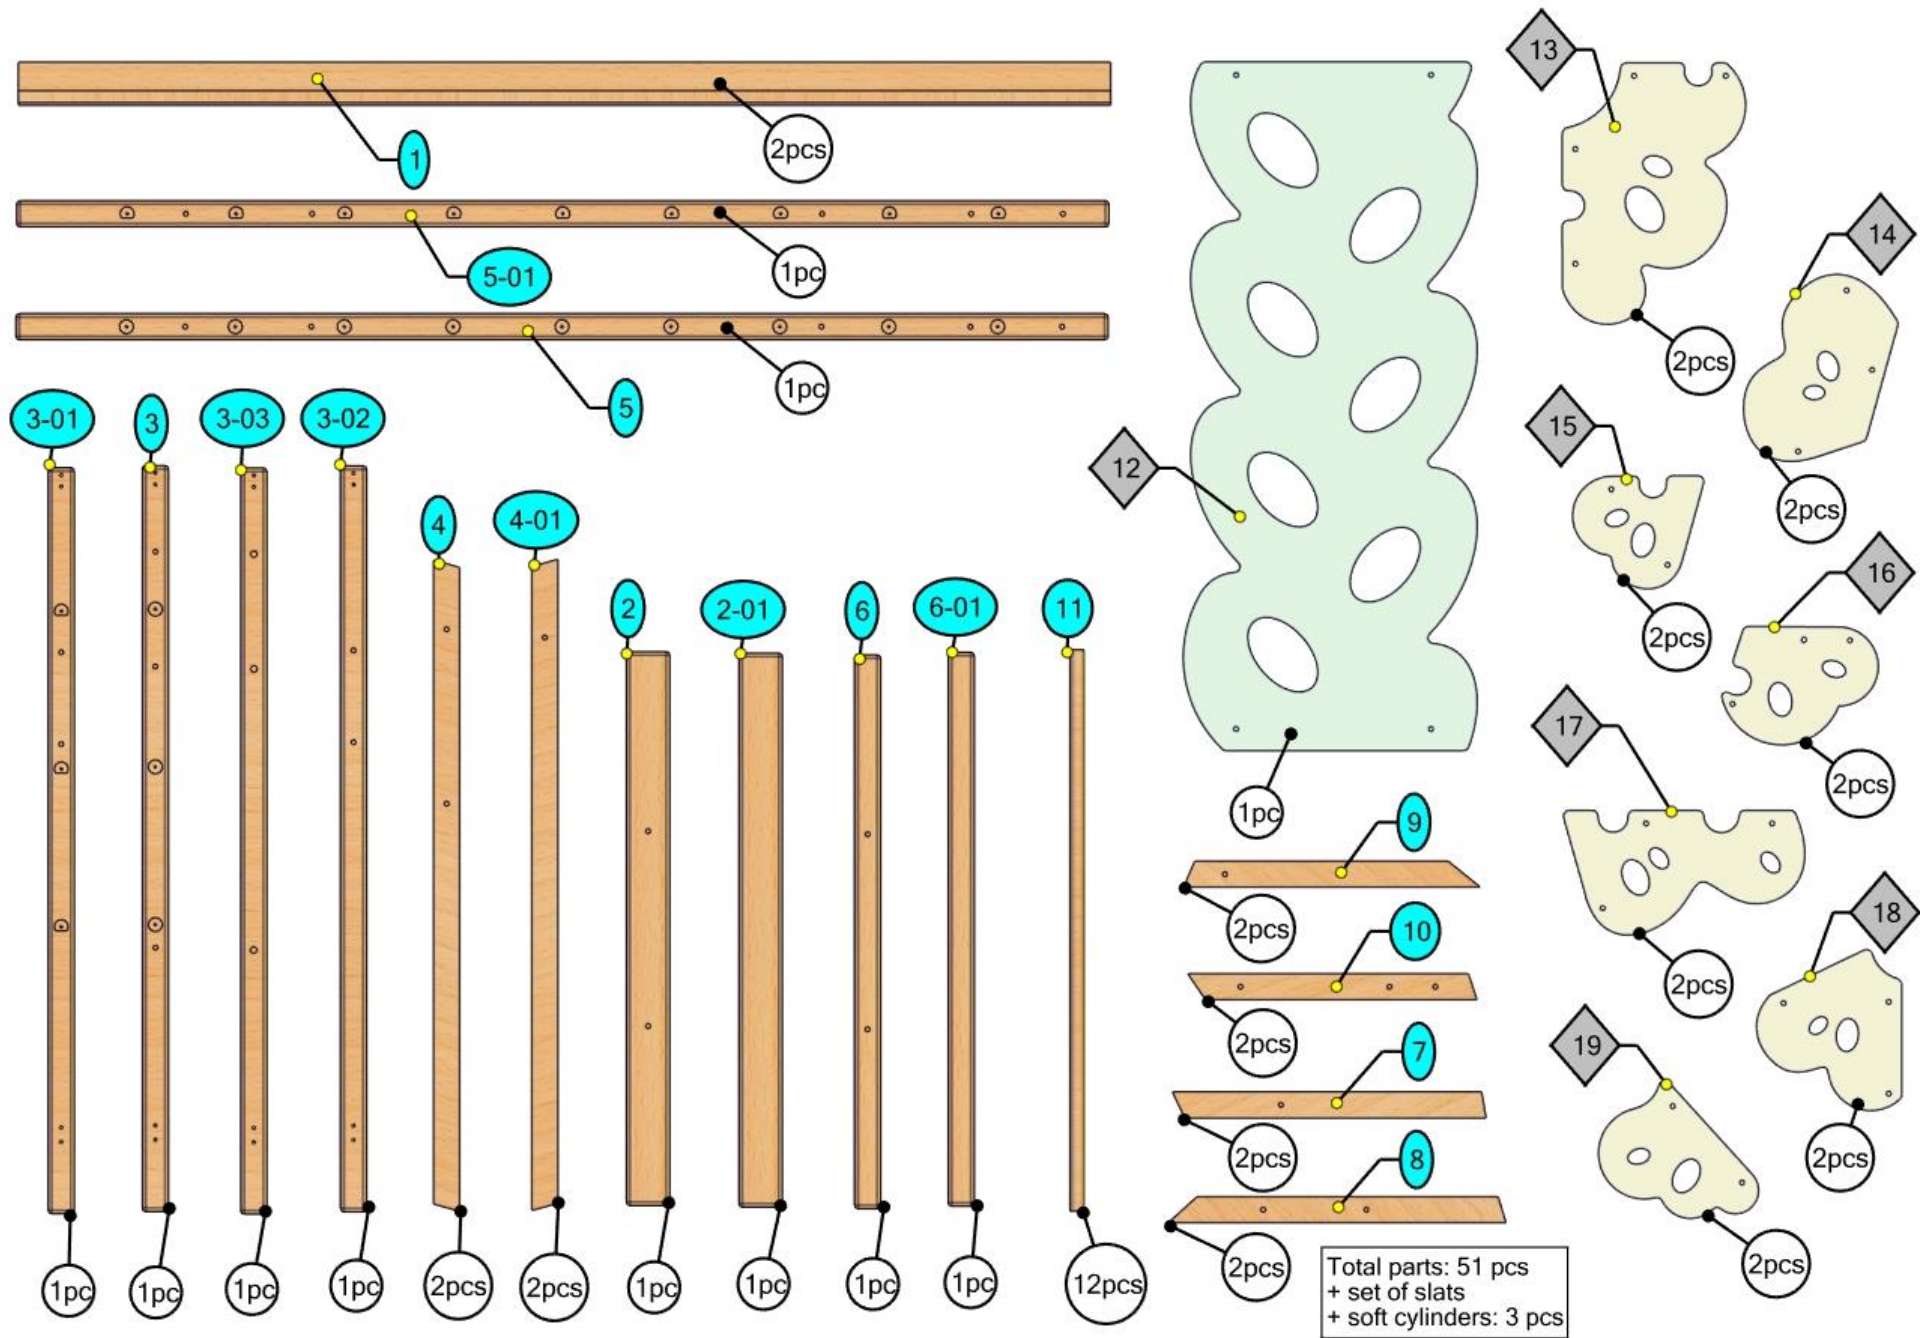


# Panel 1 Assembly

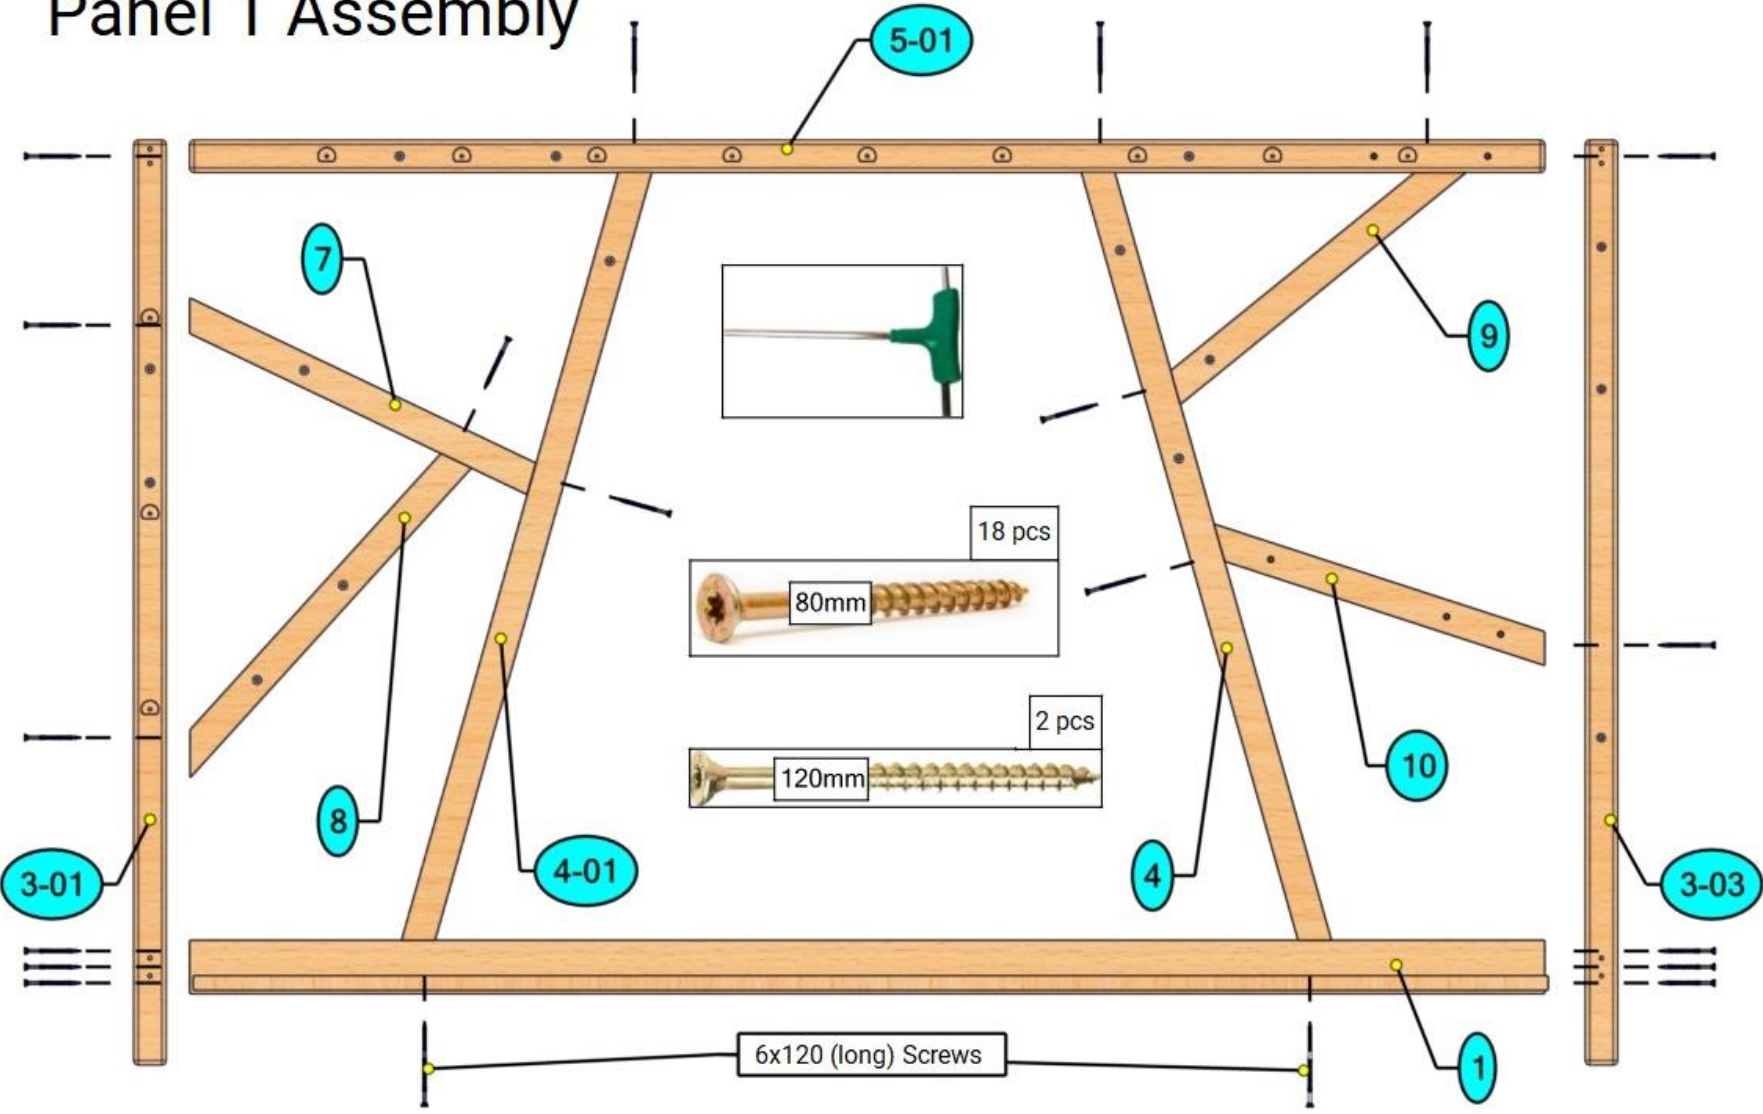


1. Use 6x80 (medium) screws to fix the details for the panel.  
ONLY the detail #1 should be fixed with 6x120 (long) screws, as shown in the figure

# Panel 1 Assembly

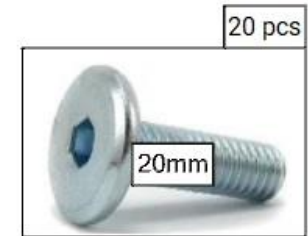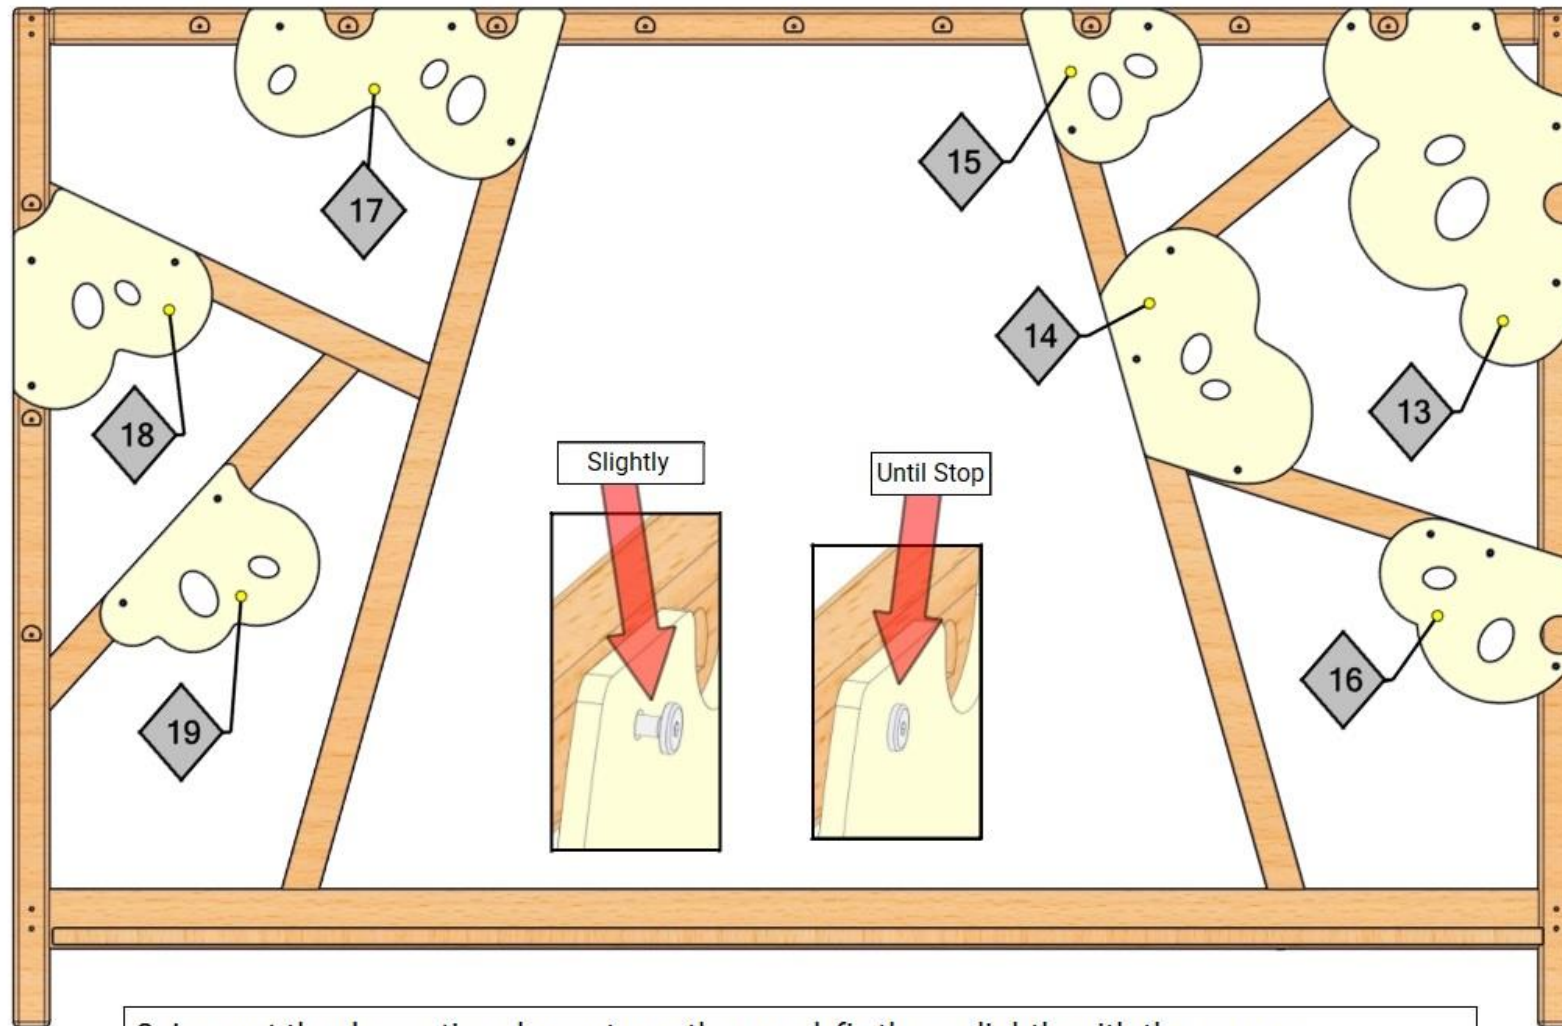


2. Lay out the decorative elements on the panel, fix them slightly with the screws. Coincide the holes in the decorative elements and the panels. Tighten the screws until stop.

# Panel 2 Assembly

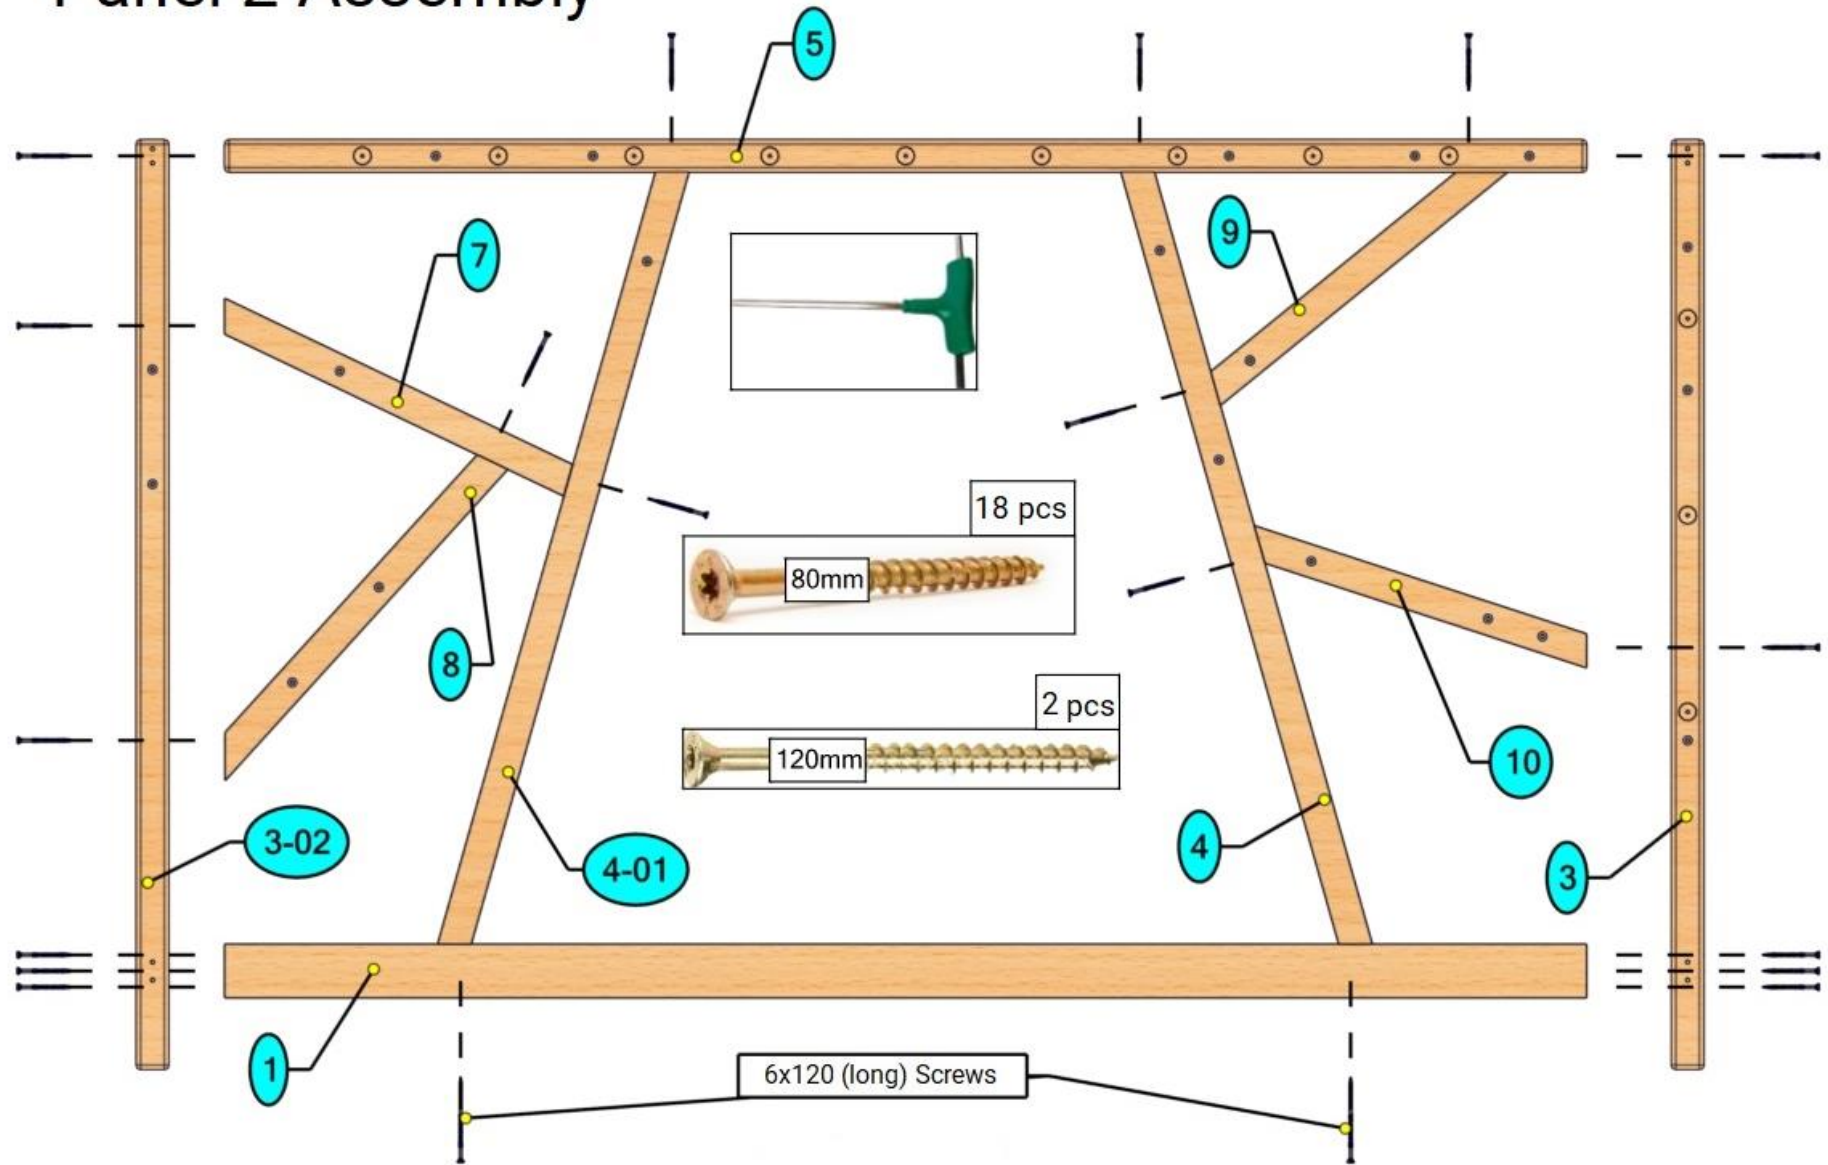


3. Use 6x80 (medium) screws to fix the details for the panel.  
ONLY the detail #1 should be fixed with 6x120 (long) screws, as shown in the figure


# Panel 2 Assembly

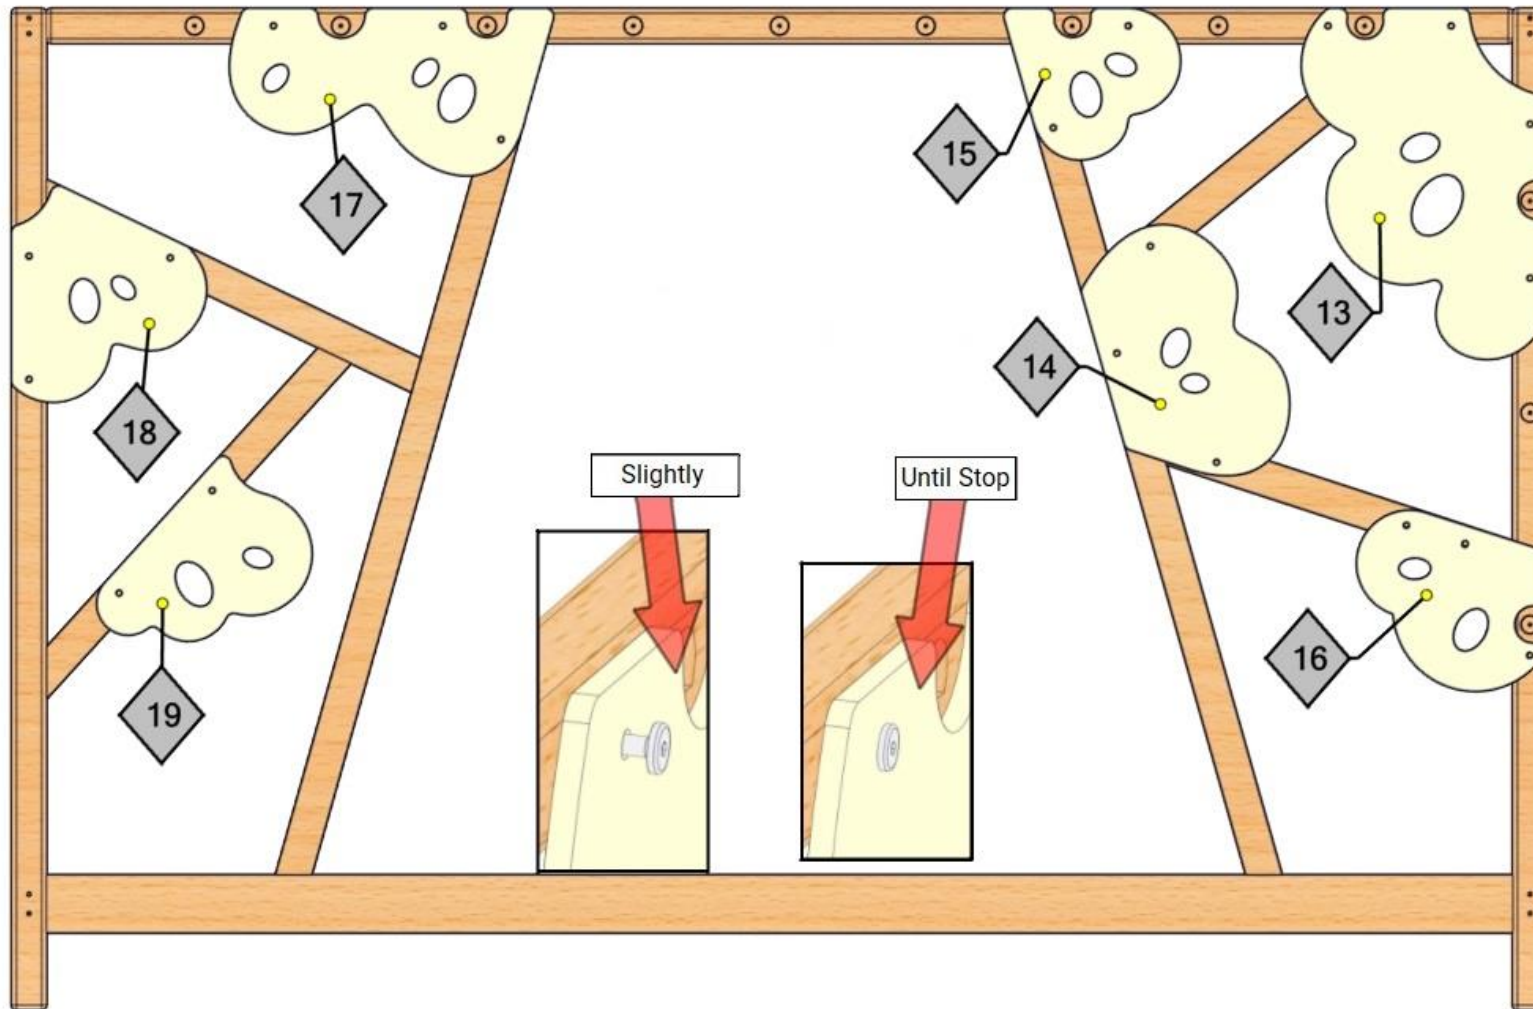

4. Lay out the decorative elements on the panel, fix them slightly with the screws. Coincide the holes in the decorative elements and the panels. Tighten the screws until stop.

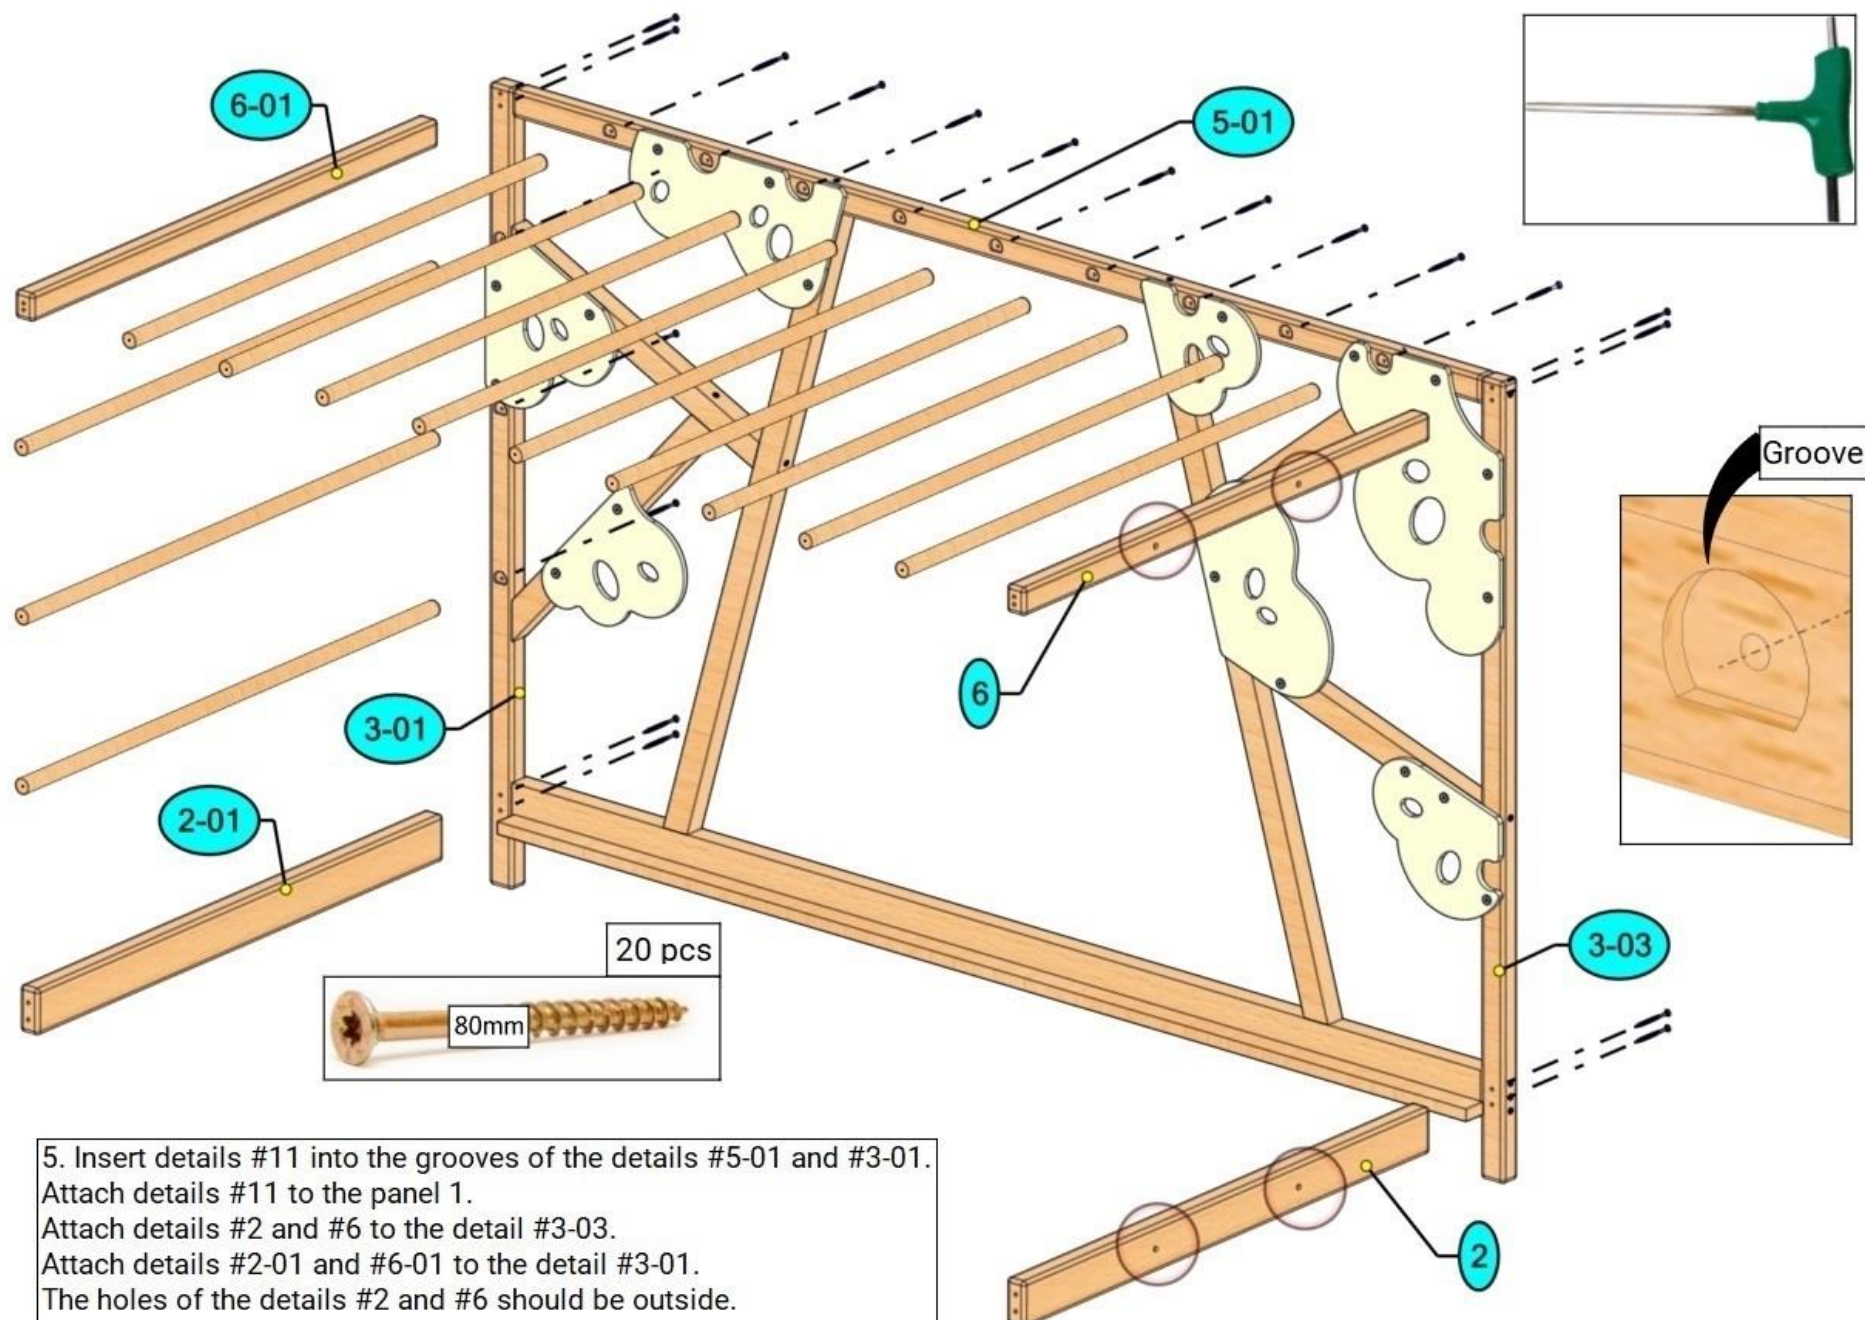


5. Insert details #11 into the grooves of the details #5-01 and #3-01.  
 Attach details #11 to the panel 1.  
 Attach details #2 and #6 to the detail #3-03.  
 Attach details #2-01 and #6-01 to the detail #3-01.  
 The holes of the details #2 and #6 should be outside.

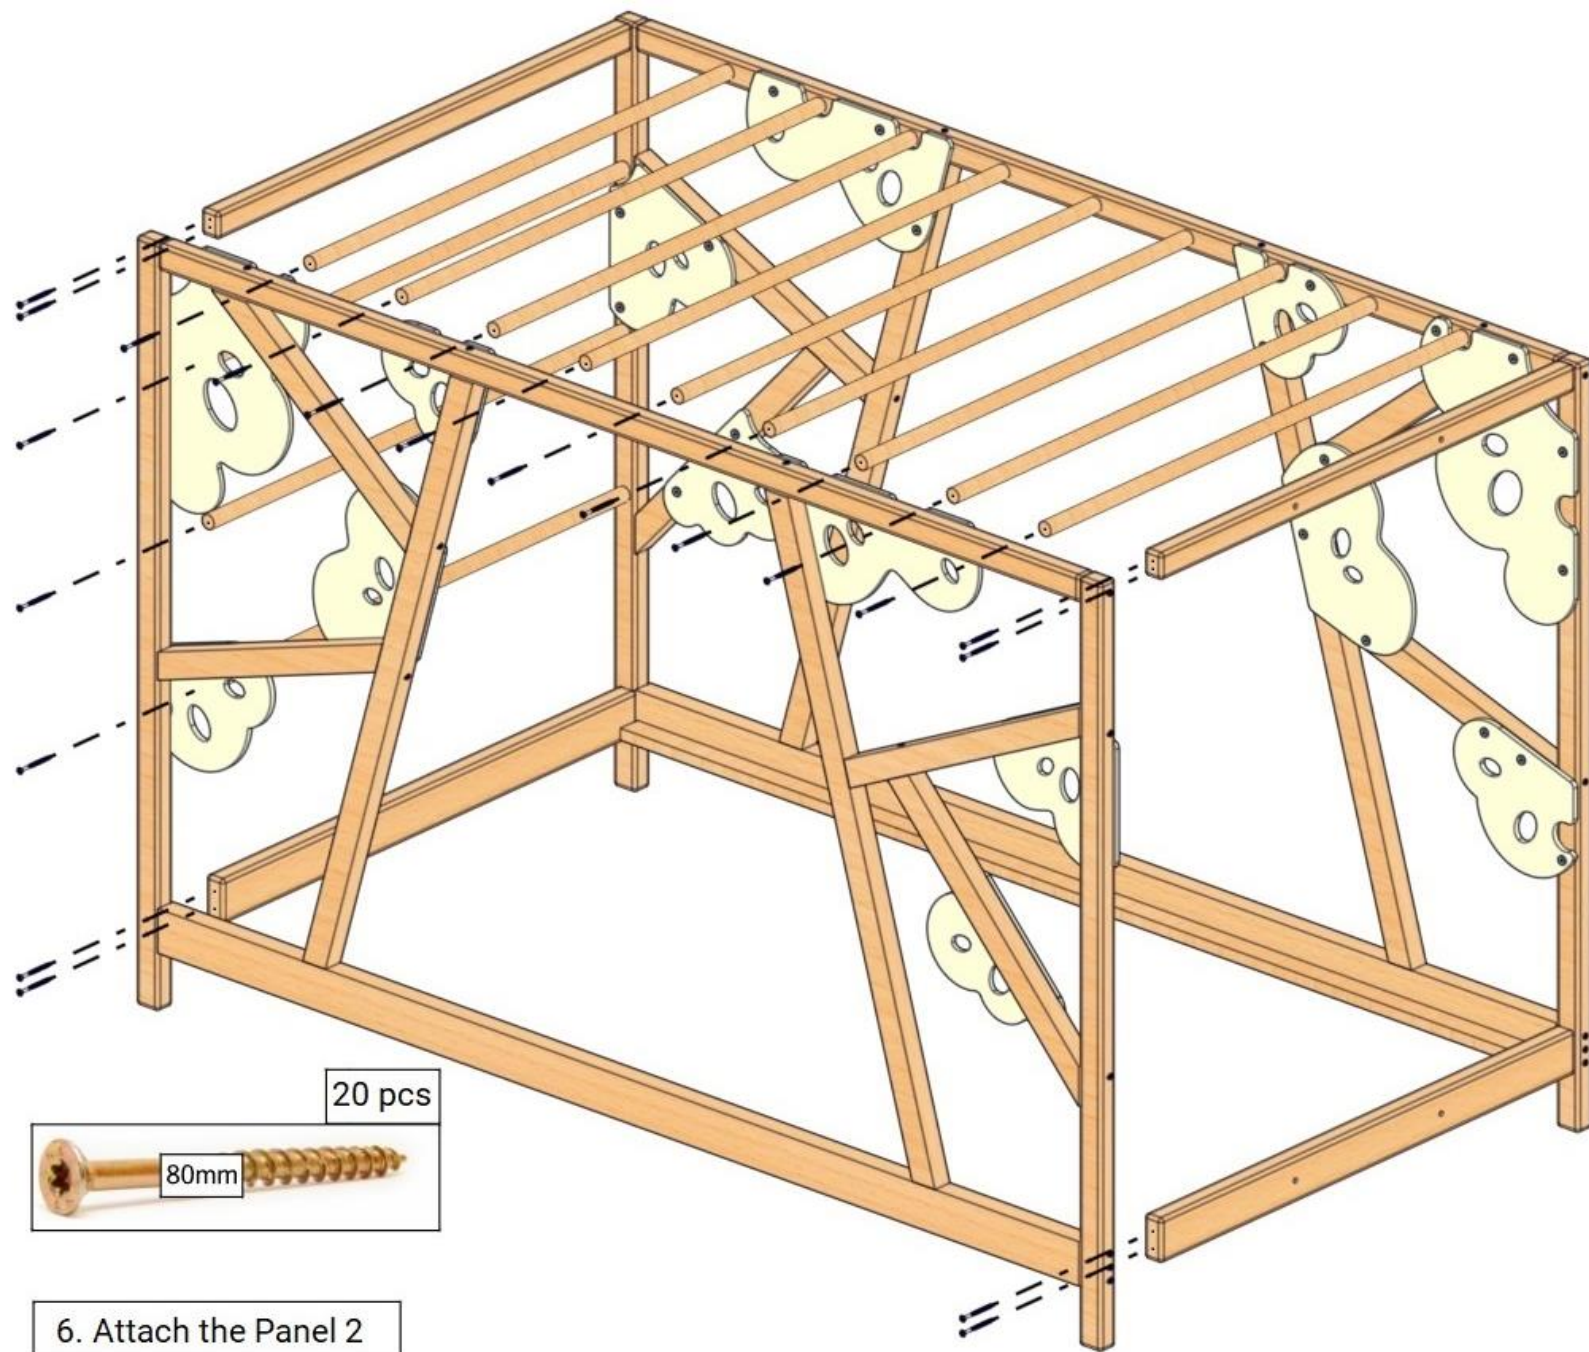

6. Attach the Panel 2



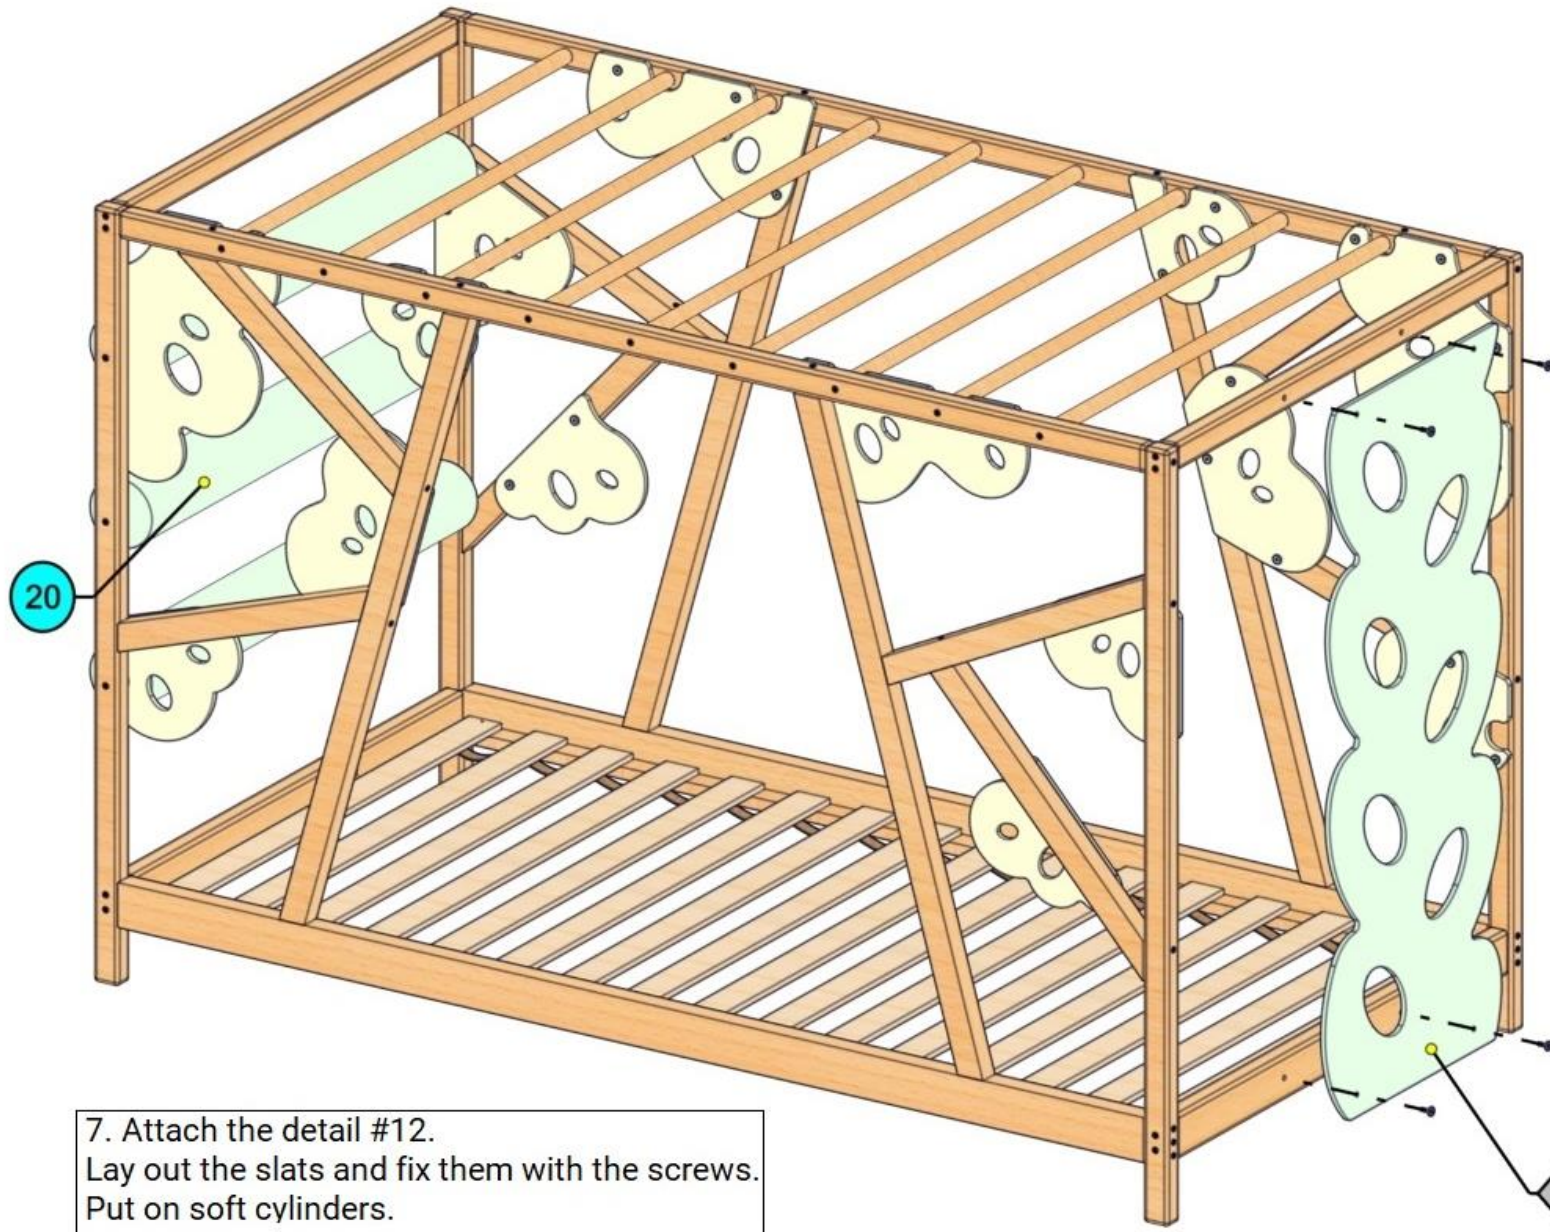

6 pcs



25mm

4 pcs



20mm



7. Attach the detail #12.  
Lay out the slats and fix them with the screws.  
Put on soft cylinders.