

<i>Electrode No.</i>	<i>Contact Pin No.</i>	<i>Pin Length Overall</i>	<i>Penetration</i>	<i>Retainer</i>
2-E**	A-100	3/4"	5/16"	2497
4-E**	A-103	1-3/32"	11/16"	2497
15-E	A-100	3/4"	1/8"	Set Screw/319SCR-0009
18-ED or 18-ES	608*	4"	3-1/4"	305RET-0021
26-ED or 26-ES	496*	2"	1-1/8"	632
	1849*	1-1/2"	1/2"	632
	A-111	1-7/16"	1/2"	632
22-E	A-111	1-7/16"	1/2"	632
21-E	608* & 608/001*	4"/7"	3-1/4"/6"	305RET-0021
30- E/C	491*	9-1/8"	8-1/8"	305RET0004/319SCR-0009
37-E/C	A-107*	1-3/32"	1-1/16"	Set Screw/319SCR-0009
42-EB	1320	9/16"	5/16"	Set Screw/319SCR-0041

*Insulated **Either A-100 or A-103 can be used on 2-E and/or 4-E
 Note: J Series and Paper Meters use 2497/A-100 Pins.


Pins

Retainers

*Used On
Electrodes*



2-E
4-E
4-EH
15-E
*Also used on
J Series and
Paper Meters.

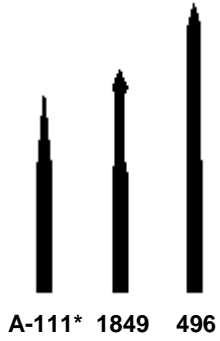


22-E
26-ED
26-ES



No retainers needed

42-EB

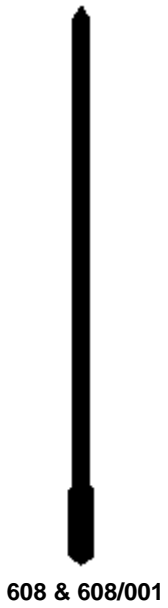

18-ED
18-ES
21-E

All Illustrations in Approximate Size