
FORMA WALL SCONCE LL-SC482

ASSEMBLY INSTRUCTIONS

REMOVE ALL PARTS FROM PACKAGE, BE CAREFUL NOT TO DAMAGE ANY COMPONENTS.




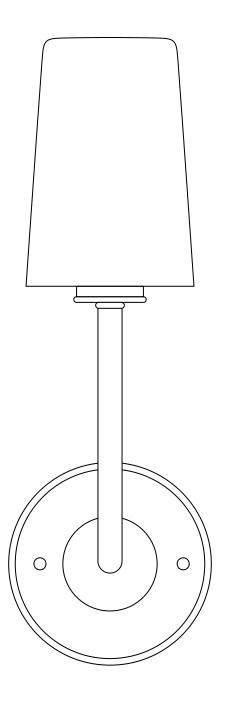

FORMA WALL SCONCE

LL-SC482

REMOVE ALL PARTS FROM PACKAGE, BE CAREFUL NOT TO DAMAGE ANY COMPONENTS.

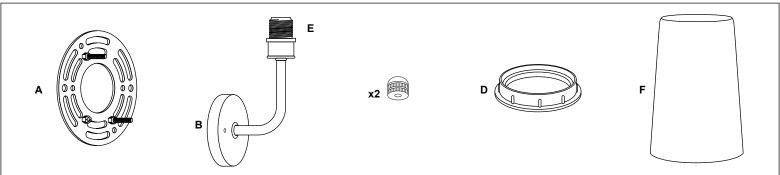

1. Measure area and determine desired mounting height. 2. Detach mounting plate [A] from backplate [B]. **3.** Mounting plate [A] will attach to junction box. 4. Install light to wall. Linea Lighting recommends installation by a qualified electrical professional. Backplate nuts [C] are used to tighten light to wall. 5. Remove socket ring [D] from socket [E]. 6. Slide fabric shade [F] onto socket [E] and tighten with socket ring [D]. Install bulb 60W max (not included).